

## User manual IM3

Direct voltage shunt: 0-60/150/300/1000 mV



### Technical features:

- red display of -19999...99999 digits (optional: green, orange or blue display)
- minimal installation depth: 120 mm without plug-in terminal
- min/max memory
- 30 parameter driven setpoints
- optical threshold value indication at threshold value exceedance / undercut
- **[O]-key** for triggering of Hold, Tara
- permanent min/max-value recording
- volume measurement (totaliser)
- arithmetic function
- zero point slowdown
- programming interlock via access code
- protection class IP65 at the front
- plug-in terminal
- option: digital input
- option: 2 or 4 analog outputs
- option: 2 or 4 relay outputs or 8 PhotoMos outputs
- option: interface RS232 or RS485
- accessories: PC-based configuration kit PM-TOOL incl. CD and USB-adapter for devices without keypad and for a simple adjustment of standard devices

## Identification

STANDARD TYPES	ORDER NUMBER
Direct voltage shunt	<b>IM3-1VR5B.0002.S72BD</b>
Housing size: 96x48 mm	<b>IM3-1VR5B.0002.W70BD</b>

### Options – breakdown of order code:

	IM	3	-	1	V	R	5	B	.	0	0	0	2	.	S	7	2	B	D	
<b>Standard type M-line</b>																				<b>Dimension</b>
																				<input type="checkbox"/> D physical unit
<b>Installation depth</b> 139 mm, incl. plug-in terminal																				<b>Version</b>
																				<input type="checkbox"/> B B
<b>Housing size</b> 96x48x120 mm (WxHxD)																				<b>Switching points</b>
																				<input type="checkbox"/> 0 no switching points
																				<input type="checkbox"/> 2 2 relay outputs
																				<input type="checkbox"/> 4 4 relay outputs
<b>Type if display</b> mV																				<b>Protection class</b>
																				<input type="checkbox"/> 1 without keypad, operation via PM-TOOL
																				<input type="checkbox"/> 7 IP65 / plug-in Terminal
<b>Display colour</b> Blue Green Red Orange																				<b>Supply voltage</b>
																				<input type="checkbox"/> S 100-240 VAC, DC +/- 10%
																				<input type="checkbox"/> W 10-40 VDC galv.isolated, 18-30 VAC
<b>Number of digits</b> 5-digit																				<b>Measuring input</b>
																				<input type="checkbox"/> 2 Shunt
<b>Digit height</b> 14 mm																				<b>Analog output</b>
																				<input type="checkbox"/> 0 without
																				<input type="checkbox"/> X 1x 0-10 VDC, 0/4-20 mA
																				<input type="checkbox"/> Y 2x 0-10 VDC, 0/4-20 mA
<b>Digital input</b> without 1 digital input Interface RS232 Interface RS485																				<b>Sensor supply</b>
																				<input type="checkbox"/> 0 without

Please state physical unit by order, e.g. A

---

## Contents

1.	<b>Short description</b>	2
2.	<b>Assembly</b>	2
3.	<b>Electrical connection</b>	3
4.	<b>Description of function and operation</b>	4
	4.1. Programming software PM-TOOL	5
5.	<b>Setting up the device</b>	6
	5.1. Switching on	6
	5.2. Standard parameterisation (flat operation level)	6
	Value assignment for the control of the signal input	
	5.3. Programming interlock „RUN“	9
	Activation/Deactivation of the programming interlock or change into professional operation level / back into flat operation level	
	5.4. Extended parameterisation (professional operation level)	9
	5.4.1. Signal input parameters „INP“	9
	Value assignment for the control of the signal input incl. linearisation	
	5.4.2. General device parameters „FCT“	13
	Superior device functions like Hold, Tara, min/max permanent, setpoint function respectively nominal value function, average determination, brightness control, as well as the control of the digital input and the keyboard configuration	
	5.4.3. Safety parameters „COD“	17
	Assignment of user and master code for locking or access to certain parameters like e.g. analog output and alarms, etc.	
	5.4.4. Serial parameters „SER“	18
	Parameter for the definition of the interface	
	5.4.5. Analog output parameters „OUT“ and „OUT2“	19
	Analog output functions	
	5.4.6. Relay functions „REL“	22
	Parameter for the definition of setpoints	
	5.4.7. Alarm parameters „AL1...AL4“	24
	Acutator and dependencies of the alarms	
	5.4.8. Totaliser (Volume metering) „TOT“	25
	Parameters for the calculation of the sum function	
6.	<b>Reset to factory settings</b>	27
	Reset parameters to delivery state	
7.	<b>Alarms / Relay</b>	28
	Functional principle of the switching outputs	
8.	<b>Interfaces</b>	29
	Connection RS232 and RS485	
9.	<b>Sensor alignment</b>	30
	Functional sequence scheme for sensors with existing adjustable resistor	
10.	<b>Technical data</b>	31
11.	<b>Safety advices</b>	33
12.	<b>Error elimination</b>	34

## 1. Brief description

The panel meter instrument **M3-12** is a 5-digit device for direct voltage signals and a visual threshold value monitoring via the display. The configuration happens via four keys at the front or by the optional PC software PM-TOOL. The integrated programming interlock prevents unrequested changes of parameters and can be unlocked again with an individual code. Optional the following functions are available: a digital input for triggering of Hold (Tara), two analog outputs and interfaces for further evaluating in the unit.


With help of the optional galvanic isolated setpoints, free adjustable limit values can be controlled and reported to a superior master display.

The electrical connection is done via plug-in terminals on the back side.

Selectable functions like e.g. the recall of the min/max-value, an averaging of the measuring signals, a nominal presetting or setpoint presetting, a direct threshold value regulation during operation mode and further measuring setpoints for linearisation, complete the modern device concept.

## 2. Assembly

Please read the *Safety advices* on page 33 before installation and keep this user manual for future reference.

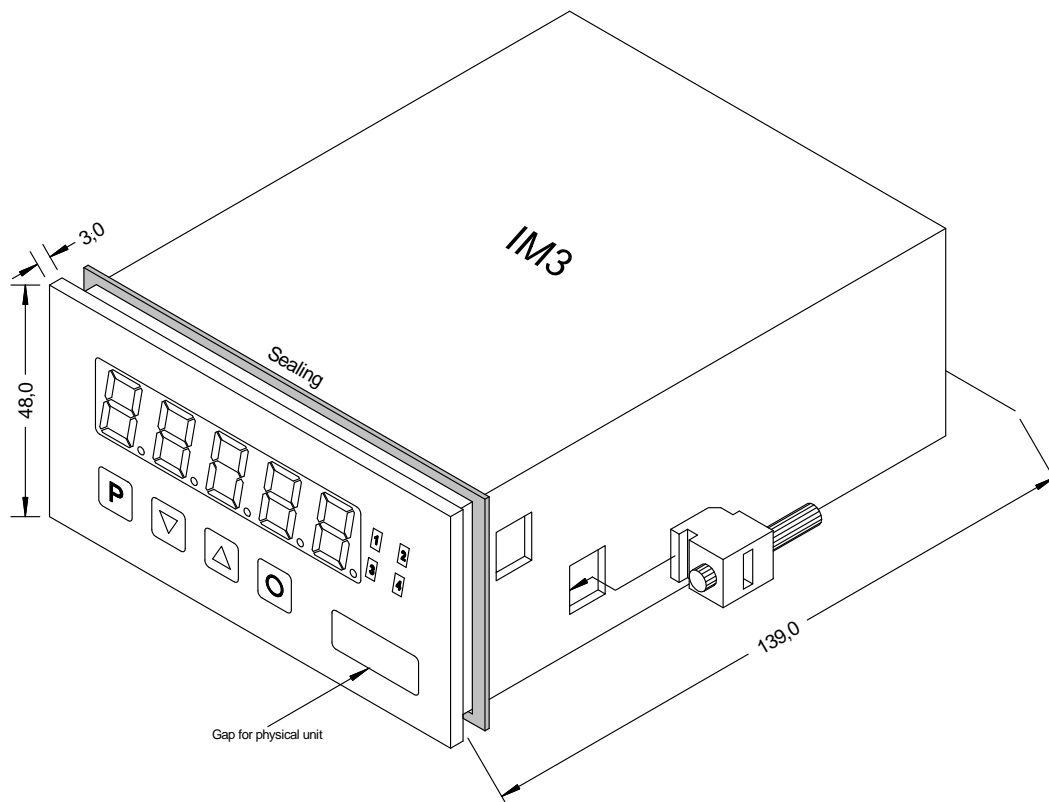


1. After removing the fixing elements, insert the device.
2. Check the seal to make sure it fits securely.
3. Click the fixing elements back into place and tighten the clamping screws by hand. Then use a screwdriver to tighten them another half a turn.

**CAUTION!** The torque should not exceed 0.1 Nm!


**The dimension symbols can be exchanged before installation via a channel on the side!**

### 3. Electrical connection



**Type IM3-1VR5B.0002.S70BD** supply of 100-240 VAC, DC  $\pm$  10%  
**Type IM3-1VR5B.0002.W70BD** supply of 10-40 VDC galv. Isolated, 18-30 VAC

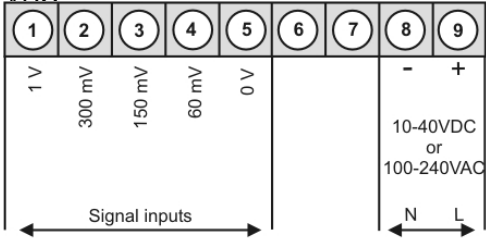


Options:

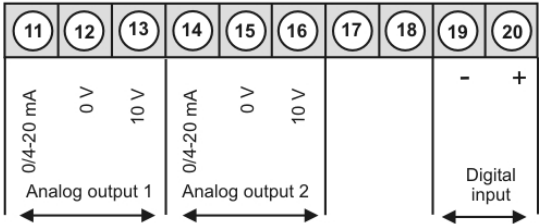

 
alternatively  
interface RS232 / RS485

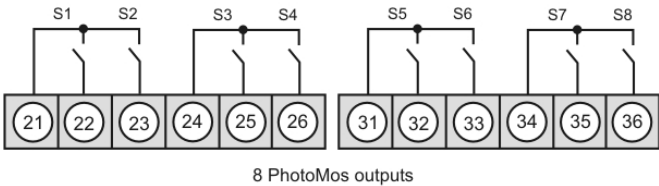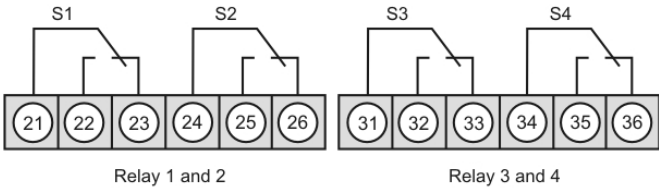

Alternative to analog output 2

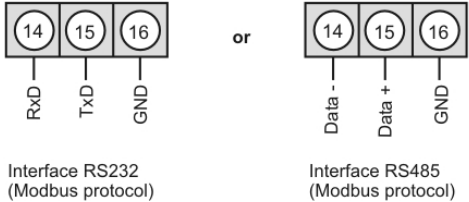

**M3 with digital input and external voltage source**



## 4. Function and operation description

### Operation

The operation is divided into three different levels.

### Menu level (delivery status)













This level was designed for the standard settings of the device. Only menu items which are sufficient to set the device into operation are displayed. To get into the professional level, run through the menu level and parameterise *PROF* under menu item *RUN*.


### Menu group level (complete function volume)

Suited for complex applications as e.g. linkage of alarms, setpoint treatment, totaliser function etc. In this level function groups which allow an extended parameterisation of the standard settings are available. To leave the menu group level, run through this level and parameterise *ULOC* under menu item *RUN*.

### Parameterisation level:

Parameter deposited in the menu item can here be parameterised. Functions, that can be changed or adjusted, are always signalled by a flashing of the display. Settings that are made in the parameterisation level are confirmed with **[P]** and thus saved. Pressing the **[O]-key** leads to a break-off of the value input and to a change into the menu level. All adjustments are saved automatically by the device and changes into operating mode, if no further key operation is done within the next 10 seconds.

Level	Key	Description
Menu-level		Change to parameterisation level and deposited values.
	 	Keys for up and down navigation in the menu level.
		Change into operation mode.
Parameterisation-level		To confirm the changes made at the parameterization level.
	 	Adjustment of the value / the setting.
		Change into menu level or break-off in value input.
Menu-group-level		Change to menu level.
	 	Keys for up and down navigation in the menu group level.
		Change into operation mode or back into menu level.

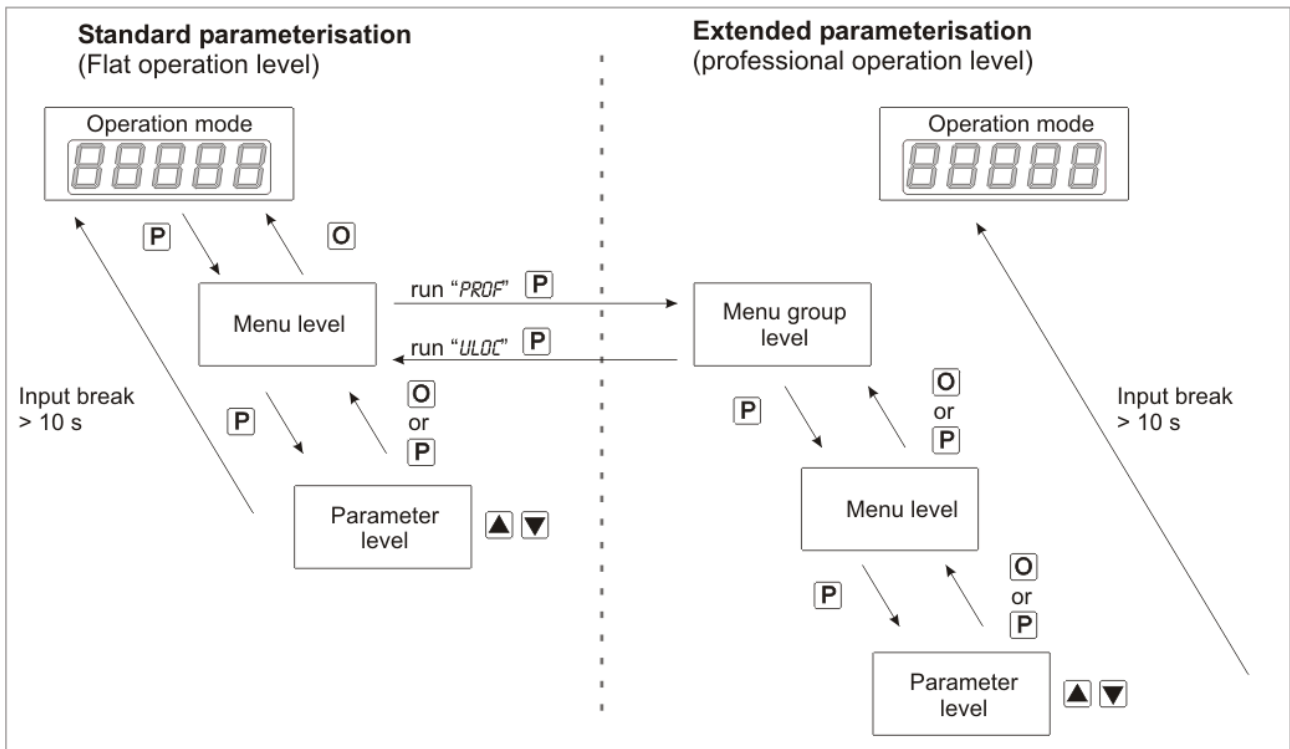**Function chart:****Underline:**

- P** Takeover
- O** Stop
- ▲** Value selection (+)
- ▼** Value selection (-)

**4.1 Parameterisation software PM-TOOL:**

Part of the PM-TOOL are the software on CD and an USB-cable with device adapter. The connection happens via a 4-pole micromatch-plug on the back side of the device, to the PC-side the connection happens via an USB plug.

System requirements: PC incl. USB interface  
Software: Windows XP, Windows VISTA

With this tool the device configuration can be generated, omitted and saved on the PC. The parameters can be changed via the easy to handle program surface, whereat the operating mode and the possible selection options can be preset by the program.

## 5. Setting up the device

### 5.1. Switching on




Once the installation is complete, start the device by applying the voltage supply. Before, check once again that all electrical connections are correct.

#### Starting sequence


 




 

 


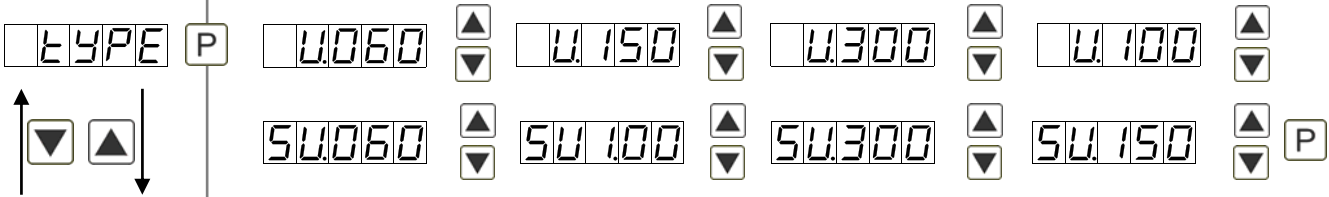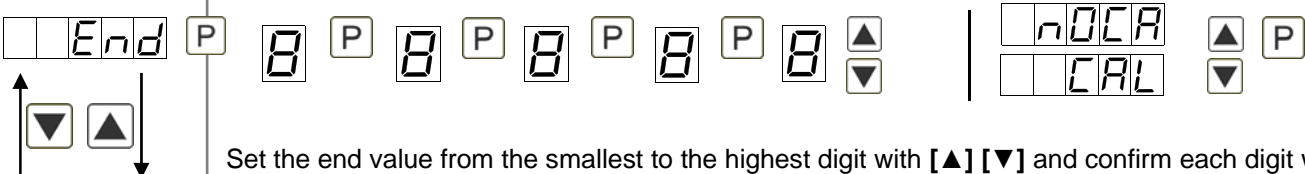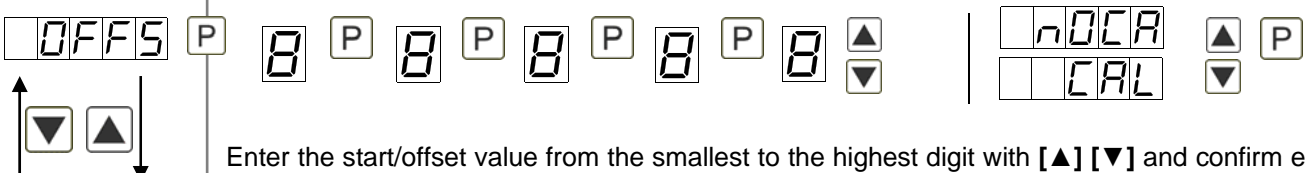
For 1 second during the switching-on process, the segment test (8 8 8 8 8) is displayed followed by an indication of the software type and, after that, also for 1 second the software version. After the starting sequence, the device switches to operation/display mode.









### 5.2. Standard parameterisation: (Flat operation level)

To parameterise the display, press the [P]-key in operating mode for 1 second. The display then changes to the menu level with the first menu item *TYPE*.



Menu level	Parameterisation level
	<p><b>Selection of the input signal, <i>TYPE</i>:</b> Default: <i>SU.060</i></p> <p>There are several measuring input options: 60, 150, 300 or 1000 mV signals are available as works calibration (without application of the sensor signal) and <i>SU</i> as sensor calibration (with the sensor applied). Confirm the selection with [P] and the display switches back to menu level.</p>
	<p><b>Setting the end value of the measuring range, <i>END</i>:</b> Default: <i>10000</i></p> <p>Set the end value from the smallest to the highest digit with [▲] [▼] and confirm each digit with [P]. A minus sign can only be parameterized on the highest value digit. After the last digit, the display switches back to the menu level. If <i>SENS</i> was selected as input option, one can only select between <i>NOCA</i> and <i>CAL</i>. With <i>NOCA</i>, only the previously set display value is taken over, and with <i>CAL</i>, the device takes over both the display value and the analogue input value.</p>
	<p><b>Setting the start/offset value of the measuring range, <i>OFFS</i>:</b> Default: <i>0</i></p> <p>Enter the start/offset value from the smallest to the highest digit with [▲] [▼] and confirm each digit with [P]. After the last digit the display switches back to the menu level. If <i>SENS</i> was selected as input option, one can only select between <i>NOCA</i> and <i>CAL</i>. With <i>NOCA</i>, only the previously set display value is taken over, and with <i>CAL</i>, the device takes over both the display value and the analogue input value.</p>



Menu level	Parameterisation level
	<p><b>Setting the decimal point, DOT:</b> Default: 0</p>  <p>The decimal point on the display can be moved with [▲] [▼] and confirmed with [P]. The display then switches back to the menu level again.</p>
	<p><b>Setting up the display time, SEC:</b> Default: 1.0</p>  <p>The display time is set with [▲] [▼]. The display moves up in increments of 0.1 up to 1 second and in increments of 1.0 up to 10.0 seconds. Confirm the selection by pressing the [P] button. The display then switches back to the menu level again.</p>
	<p><b>Selection of analog output, OUT.RA:</b> Default: 4-20</p>  <p>Three output signals are available: 0-10 VDC, 0-20 mA and 4-20 mA, with this function, the demanded signal is selected.</p>
	<p><b>Setting up the final value of the analog output, OUT.EN:</b> Default: 10000</p>  <p>The final value is adjusted from the smallest digit to the highest digit with [▲] [▼] and digit by digit confirmed with [P]. A minus sign can only be parameterised on the highest digit. After the last digit, the device changes back into menu level.</p>
	<p><b>Setting up the initial value of the analog output, OUT.OF:</b> Default: 00000</p>  <p>The final value is adjusted from the smallest digit to the highest digit with [▲] [▼] and digit by digit confirmed with [P]. A minus sign can only be parameterised on the highest digit. After the last digit, the device changes back into menu level.</p>
	<p><b>Threshold values / Limits, LI-1:</b> Default: 2000</p>  <p>This value defines the threshold, that activates/deactivates an alarm.</p>


Menu level	Parameterisation level
	<p><b>Hysteresis for limit values, HY-1:</b> Default: 00000</p> <p>  </p> <p>The delayed reaction of the alarm is the difference to the threshold value, which is defined by the hysteresis.</p>
	<p><b>Function for threshold value undercut / exceedance, FU-1:</b> Default: HIGH</p> <p>  </p> <p>A limit value undercut is selected with <i>LOW</i> (for LOW = lower limit value), a limit value exceedance with <i>HIGH</i> (for HIGH = higher limit value). If e.g. limit value 1 is on a threshold level of 100 and allocated with function <i>HIGH</i>, an alarm is activated by reaching of the threshold level. If the threshold value was allocated to <i>LOW</i>, an alarm will be activated by undercutting the threshold value, as long as the hysteresis is zero.</p>
<p><b>The same applies to LI-2 !</b></p>	
	<p><b>User code (4-digit number-combination, free available), U.CODE:</b> Default: 0000</p> <p>  </p> <p>If this code was set (&gt;0000), all parameters are locked for the user, if <i>LOC</i> has been selected before under menu item <i>RUN</i>. By pressing [P] for 3 seconds in operation mode, the display shows <i>CODE</i>. The <i>U.CODE</i> needs to be entered to get to the reduced number of parameter sets. The code has to be entered before each parameterisation, until the <i>A.CODE</i> (Master code) unlocks all parameters again.</p>
	<p><b>Master code (4-digit number-combination, free available), A.CODE:</b> Default: 1234</p> <p>  </p> <p>All parameters can be unlocked with this code, after <i>LOC</i> has been activated under menu item <i>RUN</i>. By pressing [P] for 3 seconds in operation mode, the display shows <i>CODE</i> and enables the user to reach all parameters by entering the <i>A.CODE</i>. Under <i>RUN</i> the parameterisation can be activated permanently by selecting <i>ULOC</i> or <i>PROF</i>, thus at an anew pushing of [P] in operation mode, the code needs not to be entered again.</p>



### 5.3 Programming interlock „RUN“

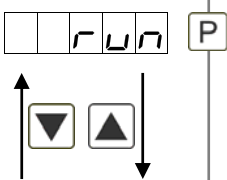

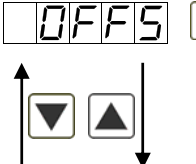

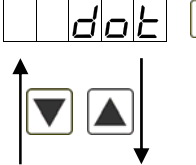

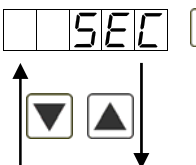
 
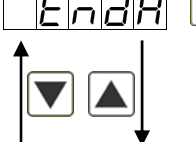
 
Menu level	Parameterisation level
	<p>Activation / deactivation of the programming lock or completion of the standard parameterisation with change into menu group level (complete function range), <i>RUN</i>: Default: <i>ULOC</i></p>  <p>With the navigation keys [▲] [▼], choose between the deactivated key lock <i>ULOC</i> (works setting) and the activated key lock <i>LOC</i>, or the change into the menu group level <i>PROF</i>. Confirm the selection with [P]. After this, the display confirms the settings with "- - - -", and automatically switches to operating mode. If <i>LOC</i> was selected, the keyboard is locked. To get back into the menu level, press [P] for 3 seconds in operating mode. Now enter the <i>CODE</i> (works setting 1 2 3 4) that appears using [▲] [▼] plus [P] to unlock the keyboard. <i>FAIL</i> appears if the input is wrong. To parameterise further functions <i>PROF</i> needs to be set. The device confirms this setting with showing „- - - -“, and changes automatically in operation mode. By pressing [P] for approx. 3 seconds in operation mode, the first menu group <i>INP</i> is shown in the display and thus confirms the change into the extended parameterisation. It stays activated as long as <i>ULOC</i> or <i>LOC</i> is entered in menu group <i>RUN</i>.</p>



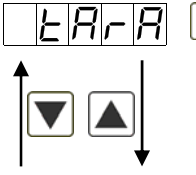

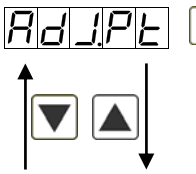

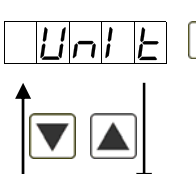

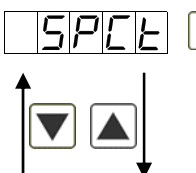

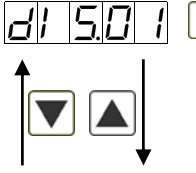

### 5.4. Extended parametrisation (Professional operation level)



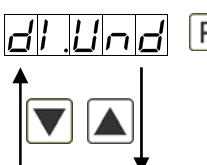

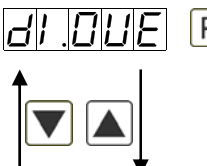

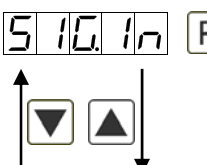
 
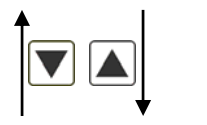
#### 5.4.1. Signal input parameters

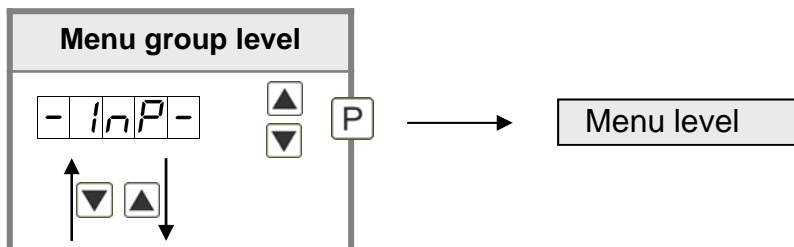

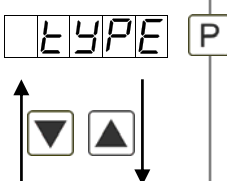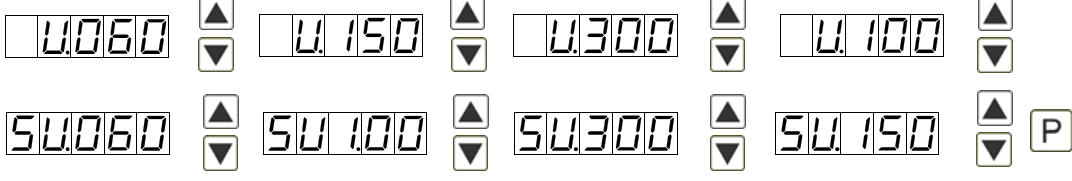
Menu level	Parameterisation level
	<p>Selection of the input signal, <i>TYPE</i>: Default: <i>SU.060</i></p>  <p>There are several measuring input options: 60, 150, 300 or 1000 mV signals are available as works calibration (without application of the sensor signal) and <i>SU</i> as sensor calibration (with the sensor applied). Confirm the selection with [P] and the display switches back to menu level.</p>

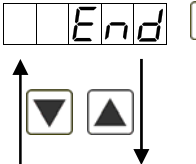Menu level	Parameterisation level
	<p><b>Setting the end value of the measuring range, <i>END</i>:</b> Default: 10000</p>  <p>Set the end value from the smallest to the highest digit with [▲] [▼] and confirm each digit with [P]. A minus sign can only be parameterized on the highest value digit. After the last digit, the display switches back to the menu level. If <i>SENS</i> was selected as input option, you can only select between <i>NOCA</i> and <i>CAL</i>. With <i>NOCA</i>, only the previously set display value is taken over, and with <i>CAL</i>, the device takes over both the display value and the analogue input value.</p>
	<p><b>Setting up the start/offset value of the measuring range, <i>OFFS</i>:</b> Default: 0</p>  <p>Enter the start/offset value from the smallest to the highest digit with [▲] [▼] and confirm each digit with [P]. After the last digit the display switches back to the menu level. If <i>SENS</i> was selected as input option, you can only select between <i>NOCA</i> and <i>CAL</i>. With <i>NOCA</i>, only the previously set display value is taken over, and with <i>CAL</i>, the device takes over both the display value and the analogue input value.</p>
	<p><b>Setting the decimal point, <i>DOT</i>:</b> Default: 0</p>  <p>The decimal point on the display can be moved with [▲] [▼] and confirmed with [P]. The display then switches back to the menu level again.</p>
	<p><b>Setting up the display time, <i>SEC</i>:</b> Default: 1.0</p>  <p>The display time is set with [▲] [▼]. The display moves up in increments of 0.1 up to 1 second and in increments of 1.0 up to 10.0 seconds. Confirm the selection by pressing the [P] button. The display then switches back to the menu level again.</p>
	<p><b>Rescaling the measuring input values, <i>ENDR</i>:</b> Default: 10000</p>  <p>With this function, you can rescale the input value of e.g. 55 mV (works setting) without applying a measuring signal. If sensor calibration has been selected, these parameters are not available.</p>

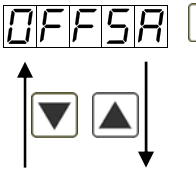

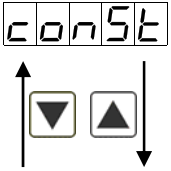
 
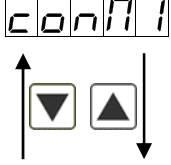
 
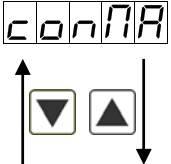


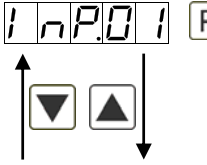
Menu level	Parameterisation level
	<p><b>Rescaling the measuring input values, <i>OFFSA</i>:</b> Default: 0</p>  <p>With this function, one can rescale the input value of <b>e.g. 0.5 mV</b> (works setting) without applying a measuring signal. If sensor calibration has been selected, these parameters are not available.</p>
	<p><b>Setting up the tare/offset value, <i>TARA</i>:</b> Default: 0</p>  <p>The given value is added to the linearized value. In this way, the characteristic line can be shifted by the selected amount.</p>
	<p><b>Setting up the balance point, <i>ADJ.PT</i>:</b> Default: 08000</p>  <p>The balance point for the final value can be chosen from the measuring range by <i>SU.XXX</i> with 0...10 V or <i>SENS.A</i> with 0...20 mA in %. The preset 80.000% result from the widespread detuning of the melt pressure sensors. The <i>ADJ.PT</i> is only used by the sensor alignment <i>SE.CAL</i>.</p>
	<p><b>Setting up the physical unit, <i>UNIT</i>:</b> Default: NO</p>  <p>One can choose between the above shown physical units. It will be displayed on the 5th digit of the display.</p>
	<p><b>Number of additional setpoints, <i>SPCT</i>:</b> Default: 00</p>  <p>30 additional setpoints can be defined to the initial- and final value, so linear sensor values are not linearised. Only activated setpoint parameters are displayed.</p>
	<p><b>Display values for setpoints, <i>DIS.01 ... DIS.30</i>:</b></p>  <p>Under this parameter setpoints are defined according to their value. At the sensor calibration, like at final value/offset, one is asked at the end if a calibration shall be activated.</p>

Menu level	Parameterisation level
	<p><b>Analog values for setpoints, <i>IMP.01 ... IMP.30</i>:</b></p>  <p>The setpoints are always set according to the selected input signal. The desired analog values can be freely parameterised in ascending order.</p>
	<p><b>Device undercut, <i>DI.UND</i>:</b> Default: <i>-19999</i></p>  <p>With this function the device undercut (____) can be defined on a definite value. Exception is input type <b>4-20 mA</b>, it already shows undercut at a signal &lt;1 mA, so a sensor failure is marked.</p>
	<p><b>Display overflow, <i>DI.OUE</i>:</b> Default: <i>99999</i></p>  <p>With this function the display overflow (----) can be defined on a definite value.</p>
	<p><b>Input variable of process value, <i>SIG.IN</i>:</b> Default: <i>A.MEAS</i></p>  <p>With this parameter, the device can be controlled via the analog input signals <i>A.MEAS</i> = mV or via the digital signals of the interface <i>n.BUS</i> = RS232/RS485 (Modbus protocol). With [<b>P</b>] the selection is confirmed and the device changes into menu level.</p>
	<p><b>Back to menu group level, <i>RET</i>:</b></p> <p>With [<b>P</b>] the selection is confirmed and the device changes into menu group level „-IMP-“.</p>



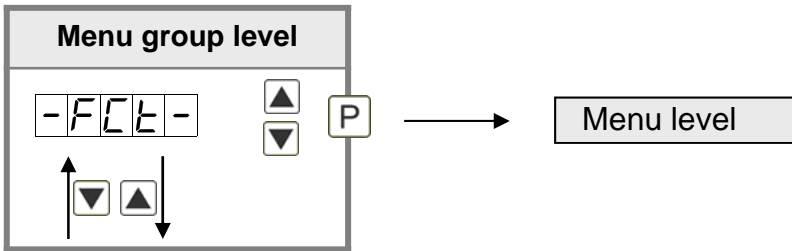
### 5.4.2. General device parameters





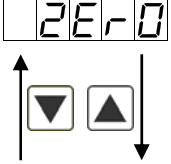


Menu level	Parameterisation level
	<p><b>Display time, <i>DISC</i>:</b> Default: 01.0</p> <p>di.SEC P    00.1 ▲▼    00.9 then    0.10 ▲▼    10.0 P</p> <p>The display is set up with [▲] [▼]. Thereby it switches up to 1 second in increments of 0.1 seconds and up to 10.0 seconds in increments of 1.0. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p><b>Rounding of display values, <i>ROUND</i>:</b> Default: 00001</p> <p>round P    00001 ▲▼    00005 ▲▼    00010 ▲▼    00050 P</p> <p>This function is for instable display values, where the display value is changed in increments of 1, 5, 10 or 50. This does not affect the resolution of the optional outputs. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p><b>Arithmetic, <i>ARITH</i>:</b> Default: NO</p> <p>ArITH P    no ▲▼    rEZIP ▲▼    rAdiC ▲▼    SqUAR P</p> <p style="text-align: center;">Reciprocal                  Root extraction                  Square</p> <p>With this function the calculated value, not the measuring value, is shown in the display. Calculation types rEZIP = (Final value*Final value)/Display value rAdiC = Root(Display value*Final value) SqUAR = (Display value)<sup>2</sup>/Final value</p> <p><b>Advice:</b> The denominator of fractions should not be 0 because a division by 0 is not possible. It creates an undefined state and the display goes into the overflow. With <b>NO</b>, no calculation is deposited. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p><b>Sliding average determination, <i>AVG</i>:</b> Default: 1.0</p> <p>AVG P    01 ▲▼    50 ▲▼ P</p> <p>Here, the number of the meterings that need to be averaged is preset. The time of averaging results of the product of measuring time <b>SEC</b> and the averaged metering <b>AVG</b>. With the selection of <b>AVG</b> in the menu level <b>DISPL</b>, the result will be shown in the display and evaluated via the alarms.</p>


Menu level	Parameterisation level
	<p><b>Zero point slowdown, ZERO:</b> Default: 00</p>  <p>At the zero point slowdown, a value range around the zero point can be preset, so the display shows a zero. If e.g. a 10 is set, the display would show a zero in the value range from -10 to +10; below continue with -11 and beyond with +11. The maximum adjustable range of value is 99.</p>
	<p><b>Definite constant value, CONST:</b> Default: 0</p>  <p>The constant value can be evaluated via the alarms or via the analog output, like the current measurand. The decimal place cannot be changed for this value and is taken over by the current measurand. Like this a setpoint generator can be realised via the analog output by this value. Furthermore it can be used for calculating the difference. At this the constant value is subtracted from the current measurand and the difference is evaluated in the alerting or by the analog output. Thus regulations can be displayed quite easily.</p>
	<p><b>Minimum constant value, CONMI:</b> Default: -9999</p>  <p>The minimum constant value is adjusted from the smallest to the highest digit with the navigation keys [▲] [▼] and confirmed digit per digit with [P]. A minus sign can only be adjusted on the highest digit. After the last digit the display changes back into menu level.</p>
	<p><b>Maximum constant value, CONMA:</b> Default: 99999</p>  <p>The maximum constant value is adjusted from the smallest to the highest digit with the navigation keys [▲] [▼] and confirmed digit per digit with [P]. A minus sign can only be adjusted on the highest digit. After the last digit the display changes back into menu level.</p>
	<p><b>Display, DISPL:</b> Default: ACTUA</p>  <p>With this function the current measuring value, min/max value, totaliser value or the process-controlled Hold-value can be allocated to the display. With [P] the selection is confirmed and the device changes into menu level.</p>

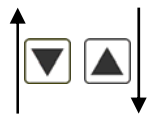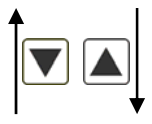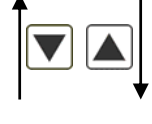

Menu level	Parameterisation level
	<p><b>Brightness control, LIGHT:</b> Default: 15</p> <p>L I G H T P    00    15    P</p> <p>The brightness of the display can be adjusted in 16 levels from 00 = very dark to 15 = very bright via this parameter or alternatively via the navigation keys from the outside. During the start of the device the level that is deposited under this parameter will always be used, even though the brightness has been changed via the navigation keys in the meantime.</p>
	<p><b>Display flashing, FLASH:</b> Default: NO</p> <p>FLASH P    no    AL-1    AL-2    AL.12    AL-3    AL-4    AL.34    AL.AL    P</p> <p>A display flashing can be added as additional alarm function either to single or to a combination of off-limit condition. With <i>NO</i>, no flashing is allocated.</p>
	<p><b>Assignment (deposit) of key functions, TAST:</b> Default: NO</p> <p>EASE P    EHT.r    LI.12    LI.34    TARA    SEt.rA    totAL    tot.rE    EHT.rE    Act.uA    LI.12    LI.11    LI.1-2    LI.1-3    LI.1-4    no    P</p> <p>For the operation mode, special functions can be deposited on the navigation keys [▲] [▼], in particular this function is made for devices in housing size 48x24mm which do not have a 4th key ([O]-key). If the min/max-memory was activated with <i>EHT.r</i>, all measured min/max-values are saved during operation and can be recalled via the navigation keys. The values get lost by restart of the device. If the threshold value correction <i>LI.12</i> or <i>LI.34</i> was chosen, the values of the threshold can be changed during operation without disturbing the operating procedure. With <i>TARA</i> the device is tared to zero and saved permanently as offset. The device confirms the correct taring by showing <b>00000</b> in the display. <i>SEt.rA</i> switches into the offset value and can be changed via the navigation keys [▲] [▼]. Via <i>TOTAL</i> the current value of the totaliser can be displayed for approx.7 seconds, after this the device changes back on the parameterised display value. If <i>TOT.RE</i> is deposited, the totaliser can be set back by pressing the navigation keys [▲] [▼], the device acknowledges this with showing <b>00000</b> in the display. The configuration of <i>EHT.RE</i> deletes the min/max-memory. Under <i>ACTUA</i> the measurand is shown for approx. 7 seconds, after this the display returns to the parameterised display value. If <i>ABS.UA</i> (absolute value) was selected, the display shows the value that has been measured since voltage connection, without consideration of a previous taring. Via selection <i>LI.1</i>, <i>LI.1-2</i>, <i>LI.1-3</i>, <i>LI.1-4</i>, in case of 8 switching points <i>LI.1-5</i>...<i>LI.1-8</i>, threshold values can be addressed via the navigation keys; they can be changed digit per digit or taken over by pushing the [P]-key. The adjustment is taken over directly, an existing limit value monitoring and the current measurement will not be influenced by this. If <i>NO</i> is selected, the navigation keys are without any function in the operation mode.</p>

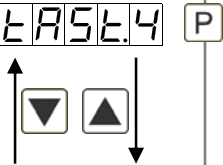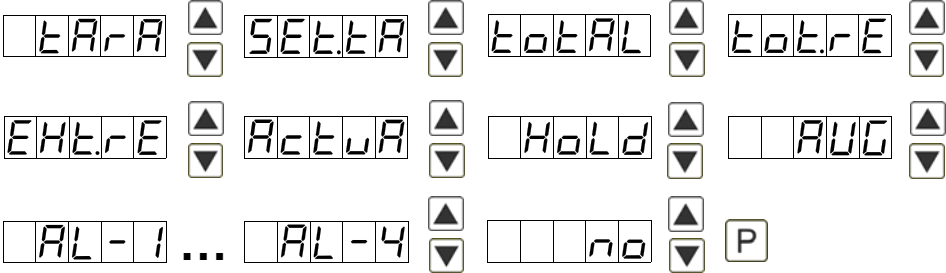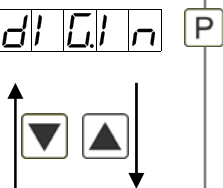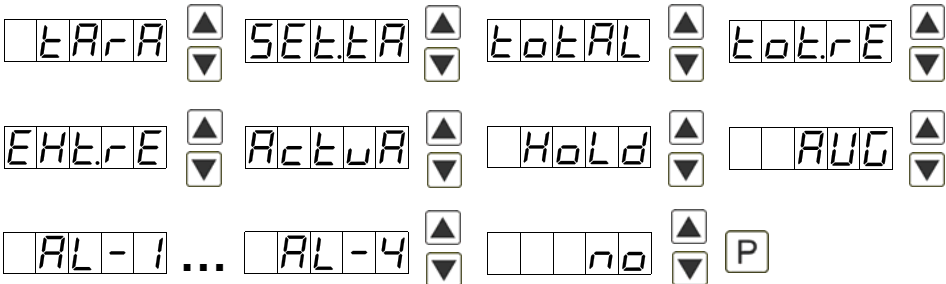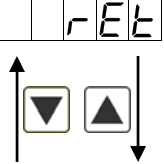
Menu level	Parameterisation level
	<p><b>Special function [O]-key, TAST.4:</b> Default: <i>NO</i></p>  <p>For the operation mode, special functions can be deposited on the [O]-key. This function is activated by pressing the key. With <i>TARA</i> the device is set temporarily on a parameterised value. The device acknowledges the correct taring with showing <b>00000</b> in the display. <i>SET.TA</i> adds a defined value on to the currently displayed value. Via <i>TOTAL</i> the current value of the totaliser can be displayed for approx. 7 seconds, after this the device switches back on the parameterised display value. If <i>TOT.RE</i> is deposited, the totaliser can be set back by pressing of the navigation keys [▲] [▼], the device acknowledges this with showing <b>00000</b> in the display. <i>EHT.RE</i> deletes the min/max-memory. If <i>HOLD</i> has been selected, the moment can be hold constant by pressing the [O]-key, and is updated by releasing the key. <b>Advice:</b> <i>HOLD</i> is activated only, if <i>HOLD</i> was selected under parameter <i>DISPL. ACTUA</i> shows the measuring value for approx. 7 seconds, after this the device switches back on the parameterised display value. The same goes for <i>AVG</i>, here the sliding average values will be displayed. At <i>AL-1...AL-4</i> an output can be set and therewith e.g. a setpoint adjustment can be done. If <i>NO</i> is selected, the [O]-key is without any function in the operation mode.</p>
	<p><b>Special function digital input, DIG.IN:</b> Default: <i>NO</i></p>  <p>In operation mode, the above shown parameter can be laid on the optional digital input, too. Function description see <i>TAST.4</i>.</p>
	<p><b>Back to menu group level, RET:</b></p> <p>With [P] the selection is confirmed and the device changes into menu group level „-FCT-“.</p>

### 5.4.3. Safety parameters

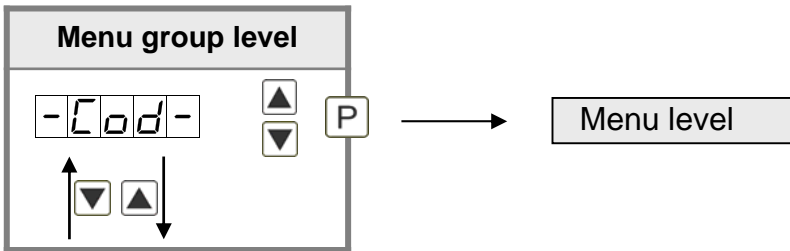


Menu level	Parameterisation level
	<p><b>User code U.CODE:</b> Default: 0000</p> <p>U.CodE P 0 P 0 P 0 P 0 ▲ P ▼</p> <p>Via this code reduced sets of parameters can be set free. A change of the <i>U.CODE</i> can be done via the correct input of the <i>R.CODE</i> (master code).</p>
	<p><b>Master code, R.CODE:</b> Default: 1234</p> <p>R.CodE P 1 P 2 P 3 P 4 ▲ P ▼</p> <p>By entering <i>R.CODE</i> the device will be unlocked and all parameters are released.</p>
	<p><b>Release/lock analog output parameter, OUT.LE:</b> Default: ALL</p> <p>Out.LE P no ▲ En-Of ▲ Out.EO ▲ ALL ▲ P ▼</p> <p>Analog output parameter can be locked or released for the user:</p> <ul style="list-style-type: none"> <li>- <i>EN-OF</i>: the initial or final value can be changed in operation mode</li> <li>- <i>OUT.EO</i>: the output signal can be changed from e.g. 0-20 mA to 4-20 mA or 0-10 VDC</li> <li>- <i>ALL</i>: analog output parameters are released</li> <li>- <i>NO</i>: all analog output parameters are locked</li> </ul>
	<p><b>Release/lock alarm parameters, AL.LEU:</b> Default: ALL</p> <p>Al.LEU P no ▲ LiMit ▲ ALrNL ▲ ALL ▲ P ▼</p> <p>This parameter describes the user release/user lock of the alarm:</p> <ul style="list-style-type: none"> <li>- <i>LIMIT</i>: here only the range of value of the threshold values 1-4 can be changed</li> <li>- <i>ALRM.L</i>: here the range of value and the alarm trigger can be changed</li> <li>- <i>ALL</i>: all alarm parameters are released</li> <li>- <i>NO</i>: all alarm parameters are locked</li> </ul>
	<p><b>Back to menu group level, RET:</b></p> <p>RET</p> <p>With [P] the selection is confirmed and the device changes into menu group level „-COD-“.</p>

### 5.4.4. Serial parameters


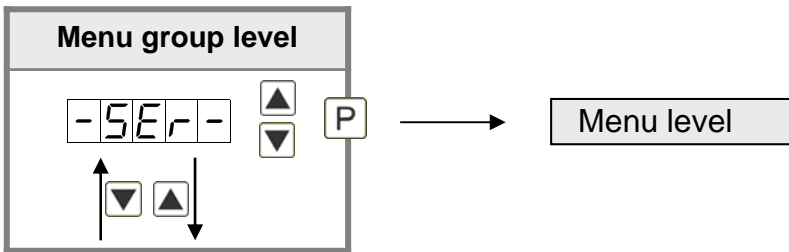


Menu level	Parameterisation level
	<p><b>Device address, ADDR:</b> Default: 001</p> <p>The device address is adjusted from the smallest to the largest digit with the navigation keys [▲] [▼] and confirmed digit per digit with [P]. A device address up to max. 250 is available. Interface data: Baudrate 9600 bit/s, 8 databyte, 1 stopbit, no parity (8n1).</p>
	<p><b>ModBus operating modes, B.MODE:</b> Default: ASCII</p> <p>There are two different types of operating modes: <i>ASCII</i> and <i>RTU</i>. Modbus transfers no binary cycle, but the <b>ASCII</b>-Code. Thus it is directly readable, however the data throughput is smaller in comparison to the <b>RTU</b>. Modbus <b>RTU</b> (<b>RTU</b> = <b>R</b>emote <b>T</b>erminal <b>U</b>nit) transfers the data in binary-coded. This leads to a good data throughput, even though the data cannot be evaluated directly, as they first need to be transferred into a readable format.</p>
	<p><b>Timeout, Tl.out:</b> Default: 000</p> <p>The monitoring of the data transfer is parameterised in seconds up to max. 100 seconds; there is no monitoring with an input of 000. The timeout is adjusted from the smallest to the largest digit with the navigation keys [▲] [▼] and confirmed digit per digit with [P]. After the last digit the device changes back into menu level.</p>
	<p><b>Back to menu group level, rEt:</b></p> <p>With [P] the selection is confirmed and the device changes into menu group level „-SER-“.</p>


### 5.4.5. Analog output parameters for analog output 1

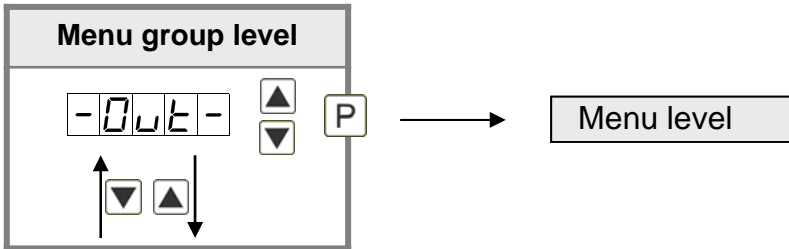







Menu level	Parameterisation level
<p data-bbox="124 770 300 815">OUTPT</p> <p data-bbox="316 779 347 815">P</p> <p data-bbox="140 837 277 949">↑ ↓</p>	<p data-bbox="352 656 900 712"><b>Selection reference of analog output, <i>OUTPT</i>:</b> Default: <i>ACTUA</i></p> <p data-bbox="384 763 1331 936"> <span>ACTUA</span> <span>MINVA</span> <span>MAXVA</span> <span>TOTAL</span>  <span>HOLD</span> <span>AUC</span> </p> <p data-bbox="352 972 1485 1099">The analog output signal can refer to different functions, in detail these are the current measurand, the min-value, the max-value or the totaliser/sum function. If <b>HOLD</b> was selected, the signal of the analog output will be kept. It can be continued processing after a deactivation of <b>HOLD</b>. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>
<p data-bbox="124 1218 300 1263">OUT.RA</p> <p data-bbox="316 1227 347 1263">P</p> <p data-bbox="140 1285 277 1397">↑ ↓</p>	<p data-bbox="352 1120 746 1176"><b>Selection analog output, <i>OUT.RA</i>:</b> Default: <i>4-20</i></p> <p data-bbox="384 1205 1102 1279"> <span>0-10</span> <span>0-20</span> <span>4-20</span> </p> <p data-bbox="352 1339 1485 1395">Three output signals are available 0-10 VDC, 0-20 mA and 4-20 mA. Select the desired signal with this function.</p>
<p data-bbox="124 1509 300 1554">OUT.EN</p> <p data-bbox="316 1518 347 1554">P</p> <p data-bbox="140 1576 277 1688">↑ ↓</p>	<p data-bbox="352 1422 986 1478"><b>Setting the final value of the analog output, <i>OUT.EN</i>:</b> Default: <i>10000</i></p> <p data-bbox="384 1509 1075 1583"> <span>0</span> <span>0</span> <span>0</span> <span>0</span> <span>0</span> </p> <p data-bbox="352 1644 1485 1744">The final value is adjusted from the smallest to the highest digit with <b>[▲]</b> <b>[▼]</b> and confirmed digit per digit with <b>[P]</b>. A minus sign can only be parameterised on the highest digit. After the last digit the device changes back into menu level.</p>
<p data-bbox="124 1845 300 1890">OUT.OF</p> <p data-bbox="316 1854 347 1890">P</p> <p data-bbox="140 1912 277 2024">↑ ↓</p>	<p data-bbox="352 1765 1002 1821"><b>Setting the initial value of the analog output, <i>OUT.OF</i>:</b> Default: <i>00000</i></p> <p data-bbox="384 1841 1066 1915"> <span>0</span> <span>0</span> <span>0</span> <span>0</span> <span>0</span> </p> <p data-bbox="352 1962 1485 2056">The initial value is adjusted from the smallest to the highest digit with <b>[▲]</b> <b>[▼]</b> and confirmed digit per digit with <b>[P]</b>. A minus sign can only be parameterised on the highest digit. After the last digit the device changes back into menu level.</p>

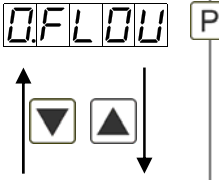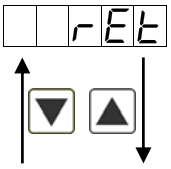Menu level	Parameterisation level
	<p><b>Overflow behaviour, O.FLOW:</b> Default: <i>EDGE</i></p> <p>EDGE ▲ ▼ tO.END ▲ ▼ tO.OFF ▲ ▼ tO.MIN ▲ ▼ tO.MAX ▲ ▼ P</p> <p>To recognise and evaluate faulty signals, e.g. by a controller, the overflow behaviour of the analog output can be defined. As overflow can be seen either <i>EDGE</i>, that means the analog output runs on the set limits e.g. 4 and 20 mA, or <i>TO.OFF</i> (input value smaller than initial value, analog output switches on e.g. 4 mA), <i>TO.END</i> (higher than final value, analog output switches on e.g. 20 mA). If <i>TO.MIN</i> or <i>TO.MAX</i> is set, the analog output switches on the smallest or highest possible binary value. This means that values of e.g. 0 mA, 0 VDC or values higher than 20 mA or 10 VDC can be reached. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p><b>Back to menu group level, rEt:</b></p> <p>With [P] the selection is confirmed and the device changes into menu group level „-OUT-“.</p>


**Analog output parameters for analog output 2**

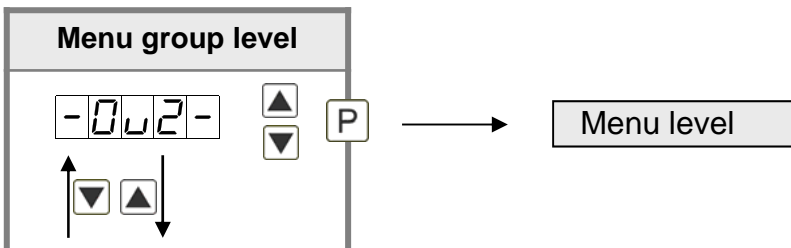

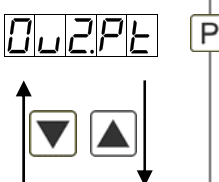Menu level	Parameterisation level
	<p><b>Selection reference of analog output, OU2.PT:</b> Default: <i>ACTUA</i></p> <p>ACTUA ▲ ▼ MINUA ▲ ▼ MAXUA ▲ ▼ tOTAL ▲ ▼ HoLD ▲ ▼ AuG ▲ ▼ P</p> <p>The analog output signal can refer to different functions, in detail these are the current measurand, the min-value, the max-value or the totaliser function/sum function. If <i>HOLD</i> was selected, the signal of the analog output will be kept. It can be continued processing after a deactivation of <i>HOLD</i>. With [P] the selection is confirmed and the device changes into menu level.</p>

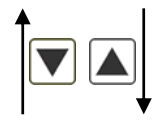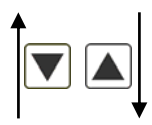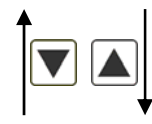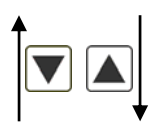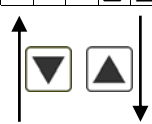

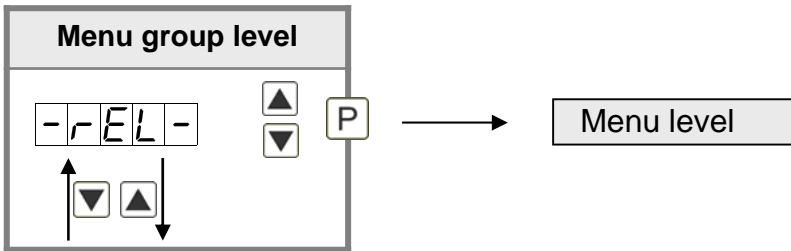

Menu level	Parameterisation level
	<p><b>Selection analog output, <i>OU2.RA</i>:</b> Default: 4-20</p> <p><i>OU2.RA</i> P 0-10 0-20 4-20 P</p> <p>3 output signals are available 0-10 VDC, 0-20 mA and 4-20 mA. Select the desired signal with this function.</p>
	<p><b>Setting the final value of the analog output, <i>OU2.EN</i>:</b> Default: 10000</p> <p><i>OU2.EN</i> P 0 P 0 P 0 P 0 P 0 P</p> <p>The final value is adjusted from the smallest to the highest digit with [▲] [▼] and confirmed digit per digit with [P]. A minus sign can only be parameterised on the highest digit. After the last digit the device changes back into menu level.</p>
	<p><b>Setting the initial value of the analog output, <i>OU2.OF</i>:</b> Default: 00000</p> <p><i>OU2.OF</i> P 0 P 0 P 0 P 0 P 0 P</p> <p>The initial value is adjusted from the smallest to the highest digit with [▲] [▼] and confirmed digit per digit with [P]. A minus sign can only be parameterised on the highest digit. After the last digit the device changes back into menu level.</p>
	<p><b>Overflow behaviour, <i>OU2.FL</i>:</b> Default: <i>EDGE</i></p> <p><i>OU2.FL</i> P <i>EDGE</i> <i>to.END</i> <i>to.OFF</i> <i>to.MIN</i> <i>to.MAX</i> P</p> <p>To recognise and evaluate faulty signals, e.g. by a controller, the overflow behaviour of the analog output can be defined. As overflow can be seen either <i>EDGE</i>, that means the analog output runs on the set limits e.g. 4 and 20 mA, or <i>TO.OFF</i> (input value smaller than initial value, analog output switches on e.g. 4 mA), <i>TO.END</i> (higher than final value, analog output switches on e.g. 20 mA). If <i>TO.MIN</i> or <i>TO.MAX</i> is set, the analog output switches on the smallest or highest possible binary value. This means that values of e.g. 0 mA, 0 VDC or values higher than 20 mA or 10 VDC can be reached. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p><b>Back to menu group level, <i>RET</i>:</b></p> <p>With [P] the selection is confirmed and the device changes into menu group level „-OU2-“.</p>

### 5.4.6. Relay functions




Menu level	Parameterisation level												
	<p><b>Alarm relay 1, REL-1:</b> Default: <i>AL-1</i> <span style="float: right;">The same applies for relays 2-4</span></p> <p> </p> <p> </p> <p> </p> <p>Each setpoint (optional) can be linked up via 4 alarms (by default). This can either be inserted at activated alarms <i>AL-1/4</i> or deactivated alarms <i>ALn1/4</i>. If <i>LOGIC</i> was selected, logical links are available in the menu levels <i>LOG-1</i> and <i>COM-1</i>. Access to these two menu levels is via <i>LOGIC</i>, at all other selected functions, these two parameters are overlapped. Via <i>ON/OFF</i> the setpoints can be activated/deactivated, in this case the output and the setpoint display are set/not set on the front of the device. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>												
	<p><b>Logic relay 1, LOG-1:</b> Default: <i>OR</i></p> <p> </p> <p>Here, the switching behaviour of the relay is defined via a logic link, the following schema describes these functions with inclusion of <i>AL-1</i> and <i>AL-2</i>:</p> <table border="1"> <tbody> <tr> <td></td> <td><math>A1 \vee A2</math></td> <td>As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.</td> </tr> <tr> <td></td> <td><math>\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}</math></td> <td>The relay operates only, if no selected alarm is active. Equates to quiescent current principle.</td> </tr> <tr> <td></td> <td><math>A1 \wedge A2</math></td> <td>The relay operates only, if all selected alarms are active.</td> </tr> <tr> <td></td> <td><math>\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}</math></td> <td>As soon as a selected alarm is not activated, the relay operates.</td> </tr> </tbody> </table> <p>With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>		$A1 \vee A2$	As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.		$\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$	The relay operates only, if no selected alarm is active. Equates to quiescent current principle.		$A1 \wedge A2$	The relay operates only, if all selected alarms are active.		$\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$	As soon as a selected alarm is not activated, the relay operates.
	$A1 \vee A2$	As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.											
	$\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$	The relay operates only, if no selected alarm is active. Equates to quiescent current principle.											
	$A1 \wedge A2$	The relay operates only, if all selected alarms are active.											
	$\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$	As soon as a selected alarm is not activated, the relay operates.											
	<p><b>Alarms for relay 1, COM-1:</b> Default: <i>A.1</i></p> <p> </p> <p>The allocation of the alarms to relay 1 happens via this parameter, one alarm or a group of alarms can be chosen. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>												






 


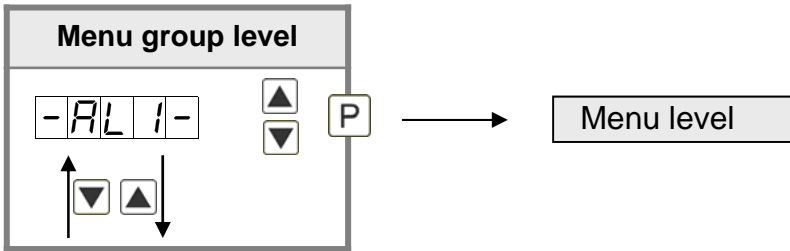Menu level	Parameterisation level												
	<p><b>Alarm relay 5, REL-5:</b> Default: <i>AL-5</i></p> <p style="text-align: right;"><b>The same applies for relays 6-8</b></p> <p>REL-5 [P]    AL-5 ..... AL-8    AL-n5 ..... AL-n8</p> <p>LOGIC    OFF    On [P]</p> <p>Each setpoint (optional) can be linked up via 4 alarms (by default). This can either be inserted at activated alarms <i>AL5/8</i> or deactivated alarms <i>ALn5/8</i>. If <i>LOGIC</i> is selected, logical links are available in the menu level <i>LOG-1</i> and <i>COM-1</i>. Access to these two menu levels is via <i>LOGIC</i>, at all other selected functions, these two parameters are overlapped. Via <i>ON/OFF</i> the setpoints can be activated/deactivated, in this case the output and the setpoint display are set/not set on the front of the device. With [P] the selection is confirmed and the device changes into menu level.</p>												
	<p><b>Logic relay 5, LOG-5:</b> Default: <i>OR</i></p> <p>LOG-5 [P]    or    nor    And    nAnd [P]</p> <p>Here, the switching behaviour of the relay is defined via a logic link, the following schema describes these functions with inclusion of <i>AL-1</i> and <i>AL-2</i>:</p> <table border="1" data-bbox="343 1048 1492 1377"> <tbody> <tr> <td data-bbox="343 1048 518 1131">or</td> <td data-bbox="523 1048 821 1131"><math>A1 \vee A2</math></td> <td data-bbox="826 1048 1492 1131">As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.</td> </tr> <tr> <td data-bbox="343 1137 518 1220">nor</td> <td data-bbox="523 1137 821 1220"><math>\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}</math></td> <td data-bbox="826 1137 1492 1220">The relay operates only, if no selected alarm is active. Equates to quiescent current principle.</td> </tr> <tr> <td data-bbox="343 1227 518 1310">And</td> <td data-bbox="523 1227 821 1310"><math>A1 \wedge A2</math></td> <td data-bbox="826 1227 1492 1310">The relay operates only, if all selected alarms are active.</td> </tr> <tr> <td data-bbox="343 1317 518 1377">nAnd</td> <td data-bbox="523 1317 821 1377"><math>\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}</math></td> <td data-bbox="826 1317 1492 1377">As soon as a selected alarm is not activated, the relay operates.</td> </tr> </tbody> </table> <p>With [P] the selection is confirmed and the device changes into menu level.</p>	or	$A1 \vee A2$	As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.	nor	$\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$	The relay operates only, if no selected alarm is active. Equates to quiescent current principle.	And	$A1 \wedge A2$	The relay operates only, if all selected alarms are active.	nAnd	$\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$	As soon as a selected alarm is not activated, the relay operates.
or	$A1 \vee A2$	As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.											
nor	$\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$	The relay operates only, if no selected alarm is active. Equates to quiescent current principle.											
And	$A1 \wedge A2$	The relay operates only, if all selected alarms are active.											
nAnd	$\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$	As soon as a selected alarm is not activated, the relay operates.											
	<p><b>Alarms for relay 5, COM-5:</b> Default: <i>A.5</i></p> <p>COM-5 [P]    A.5    A.6    ..... A.5678 [P]</p> <p>The allocation of the alarms to relay 5 happens via this parameter, one alarm or a group of alarms can be chosen. With [P] the selection is confirmed and the device changes into menu level.</p>												
	<p><b>Back to menu group level, RET:</b></p> <p>RET</p> <p>With [P] the selection is confirmed and the device changes into menu group level „-REL-“.</p>												

5.4.7. Alarm parameters






Menu level	Parameterisation level
	<p><b>Dependency alarm 1, ALRM.1:</b> Default: <i>ACTUA</i></p> <p>The dependency of alarm 1 can be related to special functions, in detail these are the current measuring value, the min-value, the max-value or the totaliser/sum-value. If <i>HOLD</i> was selected, then the alarm is hold and processed just after deactivation of <i>HOLD</i>. <i>EHTER</i> causes the dependency either by pressing the [O]-key on the front of the housing or by an external signal via the digital input. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p><b>Threshold values / limit values, LI-1:</b> Default: <i>2000</i></p> <p>The limit value defines the threshold, that activates/deactivates an alarm.</p>
	<p><b>Hysteresis for threshold values, HY-1:</b> Default: <i>00000</i></p> <p>The delayed reaction of the alarm is the difference to the threshold value, which is defined by the hysteresis.</p>
	<p><b>Function for threshold value undercut / exceedance, FU-1:</b> Default: <i>HIGH</i></p> <p>A limit value undercut is selected with <i>LOWU</i> (for LOW = lower limit value), a limit value exceedance with <i>HIGH</i> (for HIGH = higher limit value). If e.g. limit value 1 is on a threshold level of 100 and allocated with function <i>HIGH</i>, an alarm is activated by reaching of the threshold level. If the threshold value was allocated to <i>LOW</i>, an alarm will be activated by undercutting the threshold value, as long as the hysteresis is zero.</p>

Menu level	Parameterisation level
	<b>Switching-on delay, TON-1:</b> Default: 000  <p>For limit value 1 one can preset a delayed switching-on of 0-100 seconds.</p>
	<b>Switching-off delay, TOF-1:</b> Default: 000  <p>For limit value 1 one can preset a delayed switching-off of 0-100 seconds.</p>
	<b>Back to menu group level, RET:</b>  <p>With <b>[P]</b> the selection is confirmed and the device changes into menu group level „-AL1-“.</p>


The same applies for *AL2* to *AL8*.

#### 5.4.8. Totaliser (Volume metering)

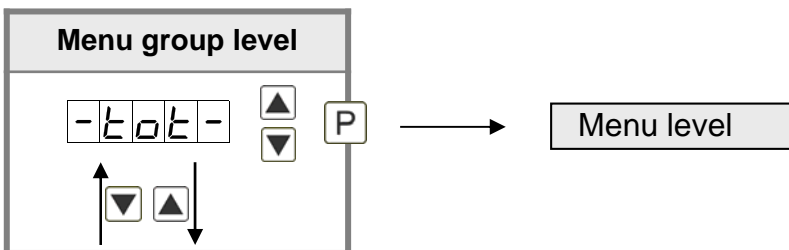

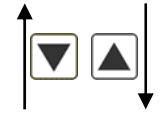Menu level	Parameterisation level
	<b>Totaliser state, TOTAL:</b> Default: OFF  <p>The totaliser makes measurements on a time base of e.g. l/h possible, at this the scaled input signal is integrated by a time and steadily (select <i>STEAD</i>) or temporarily (select <i>TEMP</i>) saved. If <i>OFF</i> was selected, the function is deactivated. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>

Menu level	Parameterisation level
<p><b>t.bASe</b> P</p> <p>↑ ↓</p>	<p><b>Time base, <i>T.BASE</i>:</b> Default: <i>SEC</i></p> <p>SEC ▲ ▼ Min ▲ ▼ hour ▲ ▼ P</p> <p>Under this parameter the time base of the measurement can be preset in seconds, minutes or hours.</p>
<p><b>FActo</b> P</p> <p>↑ ↓</p>	<p><b>Totaliser factor, <i>FACTO</i>:</b> Default: <i>10<sup>0</sup></i></p> <p>10<sup>0</sup> ... 10<sup>6</sup> P</p> <p>At this the factor (10<sup>0</sup>...10<sup>6</sup>) respectively the divisor for the internal calculation of the measuring value is assigned.</p>
<p><b>totdt</b> P</p> <p>↑ ↓</p>	<p><b>Setting up the decimal point for the totaliser, <i>TOT.DT</i>:</b> Default: <i>0</i></p> <p>0 0.0 0.00 0.000 0.0000 P</p> <p>The decimal point of the device can be adjusted with the navigation keys [▲] [▼]. With [P] the selection is confirmed and the device changes into menu level.</p>
<p><b>tot.rE</b> P</p> <p>↑ ↓</p>	<p><b>Totaliser reset, <i>TOT.RE</i>:</b> Default: <i>000</i></p> <p>0 P 0 P 0 P 0 P 0 ▲ ▼ P</p> <p>The reset value is adjusted from the smallest to the highest digit with the navigation keys [▲] [▼] and digit per digit confirmed with [P]. After the last digit, the display switches back to the menu level. The activator for the reset is parameter driven via the 4<sup>th</sup> key or via the optional digital input.</p>
<p><b>rEt</b></p> <p>↑ ↓</p>	<p><b>Back to menu group level, <i>RET</i>:</b></p> <p>With [P] the selection is confirmed and the device changes into menu group level „-TOT-“.</p>

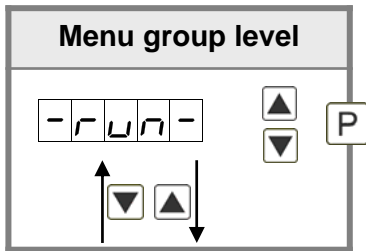**Programming interlock, RUN:**

Description see page 9, menu level *RUN*

## 6. Reset to factory settings

To return the unit to a **defined basic state**, a reset can be carried out to the default values.

The following procedure should be used:

- Switch off the power supply
- Press **[P]**-button
- Switch on voltage supply and press **[P]**-button until „- - - -“ is shown in the display.


With reset, the default values of the program table are loaded and used for subsequent operation. This puts the unit back to the state in which it was supplied.

**Caution! All application-related data are lost.**

## 7. Alarms / Relays


This device has 4 virtual alarms that can monitor one limit value in regard of an undercut or exceedance. Each alarm can be allocated to an optional relay output S1-S2; furthermore alarms can be controlled by events like e.g. Hold or min/max-value.

Function principle of alarms / relays	
<b>Alarm / Relay x</b>	Deactivated, instantaneous value, min/max-value, hold-value, totaliser value, sliding average value, constant value, difference between instantaneous value and constant value or an activation via the digital input
<b>Switching threshold</b>	Threshold / limit value of the change-over
<b>Hysteresis</b>	Broadness of the window between the switching thresholds
<b>Working principle</b>	Operating current / Quiescent current

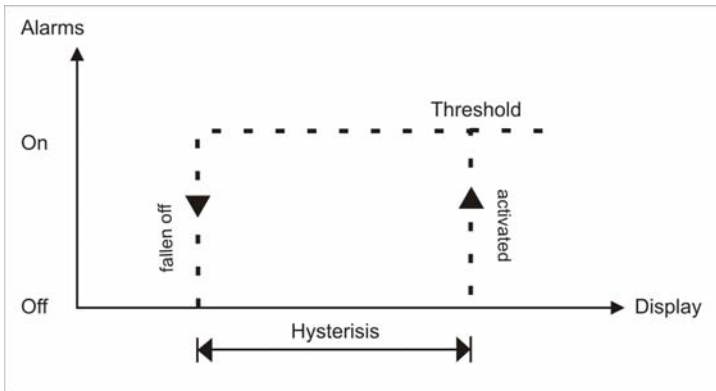


### Operating current

By operating current the alarm S1-S2 is **off** below the threshold and **on** on reaching the threshold.

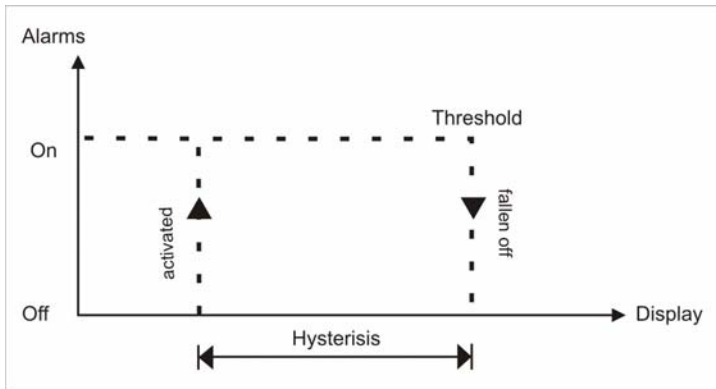

### Quiescent current

By quiescent current the alarm S1-S2 is **on** below the threshold and switched **off** on reaching the threshold.

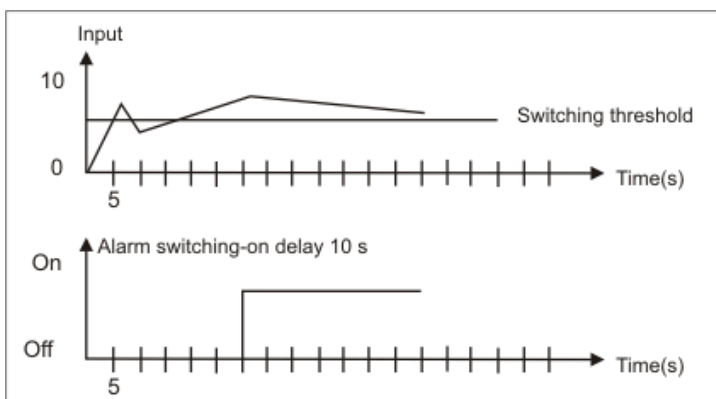

### Switching-on delay

The switching-on delay is activated via an alarm and e.g. switched 10 seconds after reaching the switching threshold, a short-term exceedance of the switching value does not cause an alarm, respectively does not cause a switching operation of the relay. The switching-off delay operates in the same way, keeps the alarm / the relay switched longer for the parameterised time.

## 8. Interfaces RS232 and RS485

### Connection RS232


Digital device M3

PC - 9-pole Sub-D-plug



### Connection RS485


Digital device M3

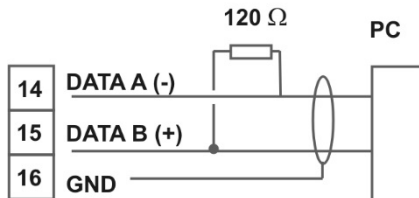

The interface **RS485** is connected via a screened data line with twisted wires (Twisted-Pair). On each end of the bus segment a termination of the bus lines needs to be connected. This is necessary to ensure a secure data transfer to the bus. For this a resistance (120 Ohm) is interposed between the lines Data B (+) and Data A (-).

## 9. Sensor alignment offset / final value

The device is equipped with a semi-automatic sensor calibration (*SU.XXX*). A switching output operates the trimming resistor, which exists in some sensors. An adjustment of offset and final value takes place, after which the sensor can be used directly. Depending on parameterisation, the calibration can be realized via the 4th key or via the digital input. It is possible to key during the calibration steps. So, reference signals can be connected manually. However the calibration will be interrupted after 30 seconds.

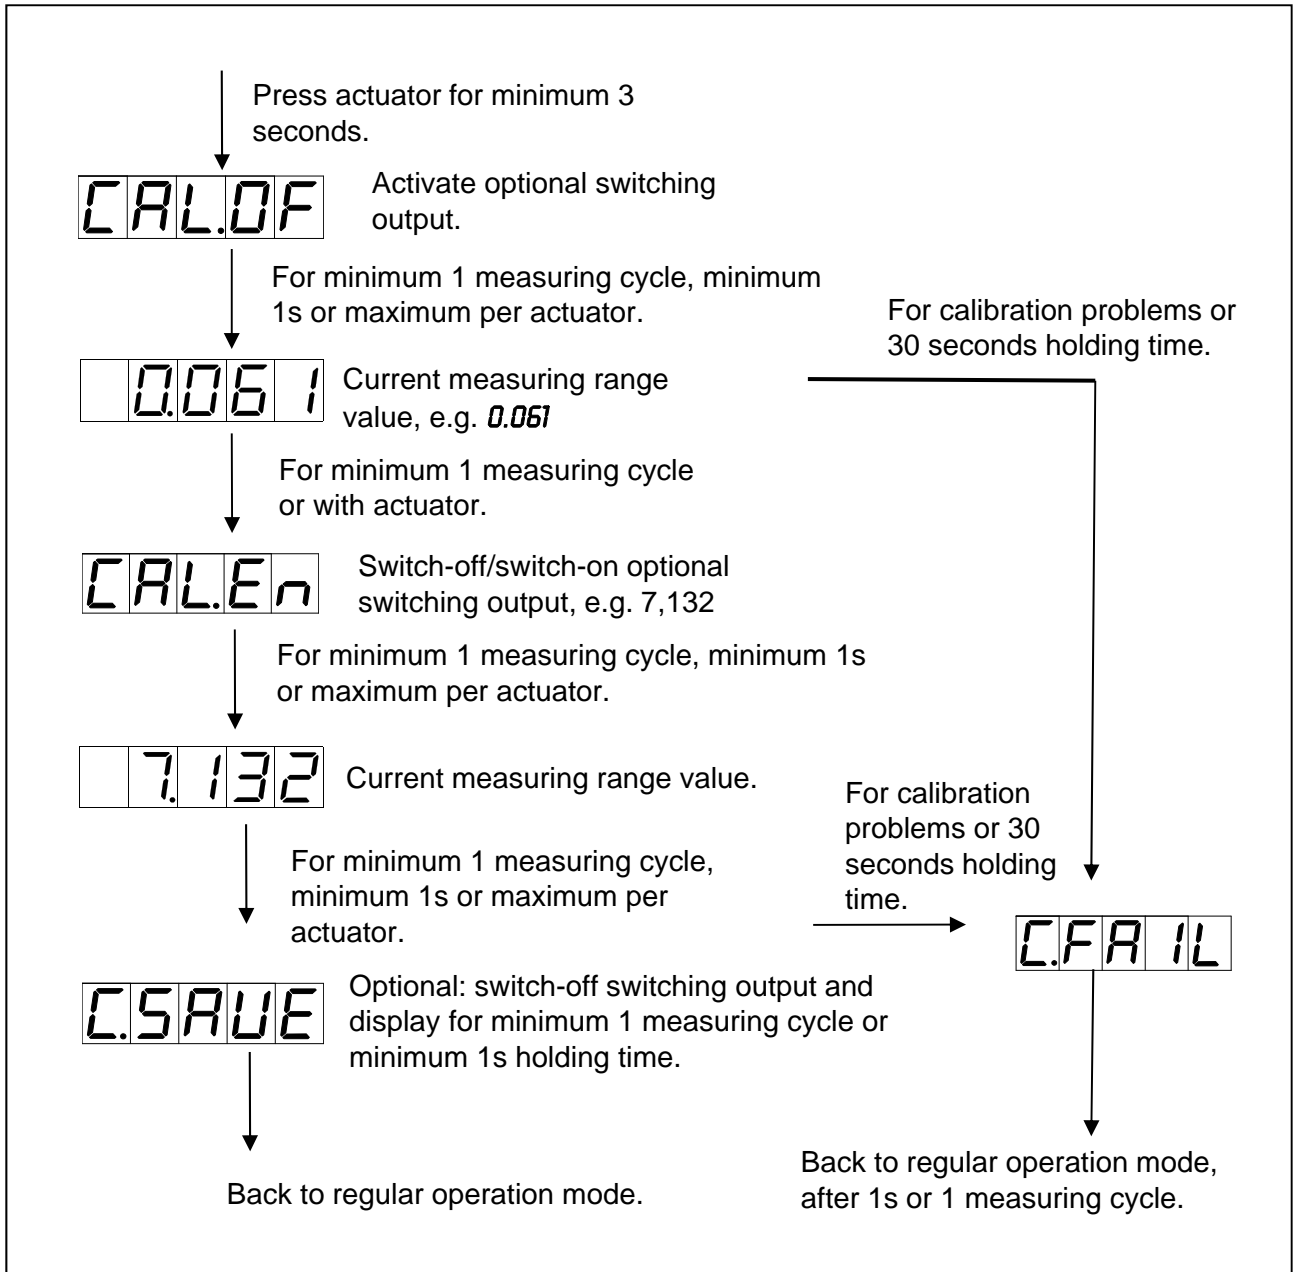



## 10. Technical data

Housing				
Dimensions	96x48x120 mm (BxHxD)			
	96x48x139 mm (BxHxD) incl. plug-in terminal			
Panel cut-out	92.0 <sup>+0.8</sup> x 45.0 <sup>+0.6</sup> mm			
Wall thickness	to 15 mm			
Fixing	screw elements			
Material	PC Polycarbonate, black, UL94V-0			
Sealing material	EPDM, 65 Shore, black			
Protection class	standard IP65 (Front), IP00 (Back side)			
Weight	approx. 300 g			
Connection	plug-in terminal; wire cross section up to 2.5 mm <sup>2</sup>			
Display				
Digit height	14 mm			
Segment colour	red (optional blue/green/orange)			
Range of display	-19999 to 99999			
Setpoints	one LED per setpoint			
Overflow	horizontal bars at the top			
Underflow	horizontal bars at the bottom			
Display time	0.1 to 10.0 seconds			
Input	Measuring range	Ri	Measuring error	Digit
-5...75 mV	0...60 mV	~12 kΩ	0.5 % of measuring range	±1
-15...180 mV	0...150 mV	~60 kΩ	0.5 % of measuring range	±1
-30...360 mV	0...300 mV	~30 kΩ	0.5 % of measuring range	±1
-100...1200 mV	0...1000 mV	~200 kΩ	0.5 % of measuring range	±1
Digital input	< 2.4 V OFF, > 10 V ON, max. 30 VDC R <sub>i</sub> ~ 5 kΩ			
Accuracy				
Temperature drift	100 ppm / K			
Measuring time	0.1...10.0 seconds			
Measuring principle	U/F-converter			
Resolution	approx. 18 bit at 1s measuring time			

<b>Output</b>	
Analog output	0/4-20 mA / burden $\leq 500 \Omega$ or 0-10 VDC / $\geq 10 \text{ k}\Omega$ , 16 bit
Switching outputs	
Relay with change-over contacts Switching cycles	250 VAC / 5 AAC; 30 VDC / 5 ADC 30 x 10 <sup>3</sup> at 5 AAC, 5 ADC ohm resistive load 10 x 10 <sup>6</sup> mechanically Diversity according to DIN EN50178 / Characteristics according to DIN EN60255
PhotoMos outputs	8 normally open (NO) contacts 30 VDC/AC, 0.4 A
<b>Interface</b>	
Protocol	Modbus with ASCII or RTU-protocol
RS232	9.600 Baud, no parity, 8 databit, 1 stopbit, wire length max. 3 m
RS485	9.600 Baud, no parity, 8 databit, 1 stopbit, wire length max 1000 m
<b>Power supply</b>	
	100-240 VAC 50/60 Hz, DC $\pm 10\%$ (max. 15 VA) 10-40 VDC galv. isolated, 18-30 VAC 50/60 Hz (max. 15 VA)
<b>Memory</b>	
	EEPROM
Data life	$\geq 100$ years at 25°C
<b>Ambient conditions</b>	
Working temperature	0...50°C
Storing temperature	-20...80°C
Climatic density	relative humidity 0-80% on years average without dew
<b>EMV</b>	
	EN 61326, EN 55011
<b>CE-sign</b>	
	Conformity to directive 2014/30/EU
<b>Safety standard</b>	
	according to low voltage directive 2014/35/EU EN 61010; EN 60664-1

## 11. Safety advices

Please read the following safety advices and the assembly *chapter 2* before installation and keep it for future reference.

### Proper use

The **IM3-12-device** is designed for the evaluation and display of sensor signals.



**Attention! Careless use or improper operation can result in personal injury and/or cause damage to the equipment.**

### Control of the device

The panel meters are checked before dispatch and sent out in perfect condition. Should there be any visible damage, we recommend close examination of the packaging. Please inform the supplier immediately of any damage.



### Installation

The **IM3-12-device** must be installed by a suitably **qualified specialist** (e.g. with a qualification in industrial electronics).

### Notes on installation

- There must be no magnetic or electric fields in the vicinity of the device, e.g. due to transformers, mobile phones or electrostatic discharge.
- **The fuse rating of the supply voltage should not exceed a value of 0.5A N.B. fuse!**
- Do not install **inductive consumers** (relays, solenoid valves etc.) near the device and **suppress** any interference with the aid of RC spark extinguishing combinations or free-wheeling diodes.
- Keep input, output and supply lines separate from one another and do not lay them parallel with each other. Position “go” and “return lines” next to one another. Where possible use twisted pair. So, you receive the best measuring results.
- Screen off and twist sensor lines. Do not lay current-carrying lines in the vicinity. Connect the **screening on one side** on a suitable potential equaliser (normally signal ground).
- The device is not suitable for installation in areas where there is a risk of explosion.
- Any electrical connection deviating from the connection diagram can endanger human life and/or can destroy the equipment.
- The terminal area of the devices is part of the service. Here electrostatic discharge needs to be avoided. Attention! High voltages can cause dangerous body currents.
- Galvanic isolated potentials within one complex need to be placed on an appropriate point (normally earth or machines ground). So, a lower disturbance sensibility against impacted energy can be reached and dangerous potentials, that can occur on long lines or due to faulty wiring, can be avoided.

## 12. Error elimination

	Error description	Measures
1.	<p>The unit permanently indicates overflow.</p> 	<ul style="list-style-type: none"> <li>• The input has a very high measurement, check the measuring circuit.</li> <li>• With a selected input with a low voltage signal, it is only connected on one side or the input is open.</li> <li>• Not all of the activated setpoints are parameterised. Check if the relevant parameters are adjusted correctly.</li> </ul>
2.	<p>The unit permanently shows underflow.</p> 	<ul style="list-style-type: none"> <li>• The input has a very low measurement, check the measuring circuit.</li> <li>• With a selected input with a low voltage signal, it is only connected on one side or the input is open.</li> <li>• Not all of the activated setpoints are parameterised. Check if the relevant parameters are adjusted correctly.</li> </ul>
3.	<p>The word <b>HELP</b> lights up in the 7-segment display.</p>	<ul style="list-style-type: none"> <li>• The unit has found an error in the configuration memory. Perform a reset on the default values and reconfigure the unit according to your application.</li> </ul>
4.	<p>Program numbers for parameterising of the input are not accessible.</p>	<ul style="list-style-type: none"> <li>• Programming lock is activated</li> <li>• Enter correct code</li> </ul>
5.	<p><b>ERR1</b> lights up in the 7-segment display</p>	<ul style="list-style-type: none"> <li>• Please contact the manufacturer if errors of this kind occur.</li> </ul>
6.	<p>The device does not react as expected.</p>	<ul style="list-style-type: none"> <li>• If you are not sure if the device has been parameterised before, then follow the steps as written in <i>chapter 6</i> and set it back to its delivery status.</li> </ul>