

SIEMENS

SITRANS F

Coriolis Flowmeters FC410 with Modbus

Operating Instructions

These Operating Instructions apply to Siemens product SITRANS FC410 with order codes commencing 7ME4611, 7ME4621 and 7ME4711.

Tel.: 03303 / 504066

Fax: 03303 / 504068

3 Description 4 Installing/Mounting 5 Connecting 6 Commissioning **Functions** Alarms and system 8 messages Service and maintenance 10 Troubleshooting/FAQs Technical data 12 Spare parts and accessories 13 Dimensions and weight Modbus holding registers Sensor dimension B dependent default settings Zero point adjustment **CRC** calculation **Exception codes** Float definition

Introduction

Safety notes

02/2016

A5E33120874-AC

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

A DANGER

indicates that death or severe personal injury will result if proper precautions are not taken.

▲WARNING

indicates that death or severe personal injury may result if proper precautions are not taken.

▲CAUTION

indicates that minor personal injury can result if proper precautions are not taken.

NOTICE

indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

▲WARNING

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Table of contents

| 1 | Introduct | Introduction | | |
|---|---------------------|--|----|--|
| | 1.1 | History | 7 | |
| | 1.2 | Items supplied | 8 | |
| | 1.3 | Checking the consignment | 8 | |
| | 1.4 | Device identification | 9 | |
| | 1.5 | Further Information | 14 | |
| 2 | Safety no | otes | 15 | |
| | 2.1 | Laws and directives | 15 | |
| | 2.2 | Installation in hazardous locations | 16 | |
| | 2.3 | Certificates | 20 | |
| 3 | Descripti | ion | 21 | |
| | 3.1 | Design | 22 | |
| | 3.2 | System integration | 23 | |
| | 3.3 | Modbus RTU technology | 23 | |
| | 3.4 | Features | 25 | |
| | 3.5 | Theory of operation | 25 | |
| 4 | Installing/Mounting | | | |
| | 4.1 | Flowmeter installation | 27 | |
| | 4.1.1 | Installation safety precautions | | |
| | 4.1.2 | Determining a location | | |
| | 4.1.3 | Orientation of the device | | |
| | 4.1.4 | Mounting the flowmeter | | |
| | 4.1.5 4.1.6 | Hydrostatic testing Mounting a pressure guard | | |
| 5 | | ting | | |
| | 5.1 | Wiring in hazardous locations | | |
| | 5.2 | Cable requirements | | |
| | 5.3 | Safety notes for connecting | | |
| | 5.4 | Connecting the FC410 | | |
| | 5.4 5.4.1 | M12 version (for non-Ex areas) | | |
| | 5.4.2 | Cable termination version | | |
| | 5.4.3 | Setting the EOL termination DIP switches | | |
| | 5.5 | Integrating the FC410 with Modbus system | 43 | |
| | 5.5.1 | System configurations | 43 | |
| | 5.5.2 | Wiring FC410 to the Modbus system | 48 | |

| 6 | Commiss | sioning | 51 |
|---|-----------|---|----|
| | 6.1 | General requirements | 51 |
| | 6.2 | Warnings | 51 |
| | 6.3 | Operating via SIMATIC PDM | 51 |
| | 6.4 | Functions in SIMATIC PDM | 52 |
| | 6.5 | Commissioning steps | 52 |
| | 6.6 | Initial setup | 52 |
| | 6.7 | Adding device to communication network | 54 |
| | 6.8 | Configuring a new device | 55 |
| | 6.9 | Wizard - Quick Start via PDM | 56 |
| | 6.10 | Wizard - Zero Point adjustment | 62 |
| | 6.11 | Changing parameter settings using SIMATIC PDM | 64 |
| | 6.12 | Parameters accessed via drop-down menus | 64 |
| | 6.13 | Zero point adjustment | 65 |
| | 6.14 | Process variables | 67 |
| 7 | Functions | s | 69 |
| | 7.1 | Process values | 69 |
| | 7.2 | Zero point adjustment | 69 |
| | 7.3 | Low flow cut-off | 71 |
| | 7.4 | Empty tube monitoring | 72 |
| | 7.5 | Process noise damping | 73 |
| | 7.6 | Totalizer | 75 |
| | 7.7 | Access management | 75 |
| | 7.8 | Simulation | 76 |
| | 7.9 | Changing Modbus communication settings | 77 |
| | 7.10 | Float transmission | 77 |
| 8 | Alarms a | and system messages | 79 |
| | 8.1 | Alarm messages | 79 |
| 9 | Service a | and maintenance | 81 |
| | 9.1 | Maintenance | 81 |
| | 9.2 | Maintenance information parameters | 81 |
| | 9.3 | Service information | 81 |
| | 9.4 | Recalibration | 82 |
| | 9.5 | Technical support | 82 |
| | 9.6 | Transportation and storage | 83 |
| | 9.7 | Device disposal | 83 |
| | 9.8 | Maintenance work | 84 |

| 10 | Troubleshooting/FAQs | | 85 |
|----|--------------------------|---|-----|
| | 10.1 | Diagnosing with PDM | 85 |
| | 10.2 | Troubleshooting | 85 |
| 11 | Technica | ıl data | 91 |
| | 11.1 | Function and system design | 91 |
| | 11.2 | Process variables | 91 |
| | 11.3 | Modbus Communication Specification | 92 |
| | 11.4 | Performance | 93 |
| | 11.5 | Rated operating conditions | 94 |
| | 11.6 | Pressure drop curves | 95 |
| | 11.7 11.7.1 11.7.2 | Pressure - temperature ratings | 96 |
| | 11.8 | Design | 99 |
| | 11.9 | Power supply | 100 |
| | 11.10 | Basic electrical requirement for master system | 100 |
| | 11.11 | Cables and cable entries | 101 |
| | 11.12 | Installation torques | 102 |
| | 11.13 | Certificates and approvals | 102 |
| | 11.14 | PED | 103 |
| 12 | Spare pa | 109 | |
| | 12.1 | Ordering | 109 |
| | 12.2 | Ex approved products | 109 |
| | 12.3 | Replaceable components | 110 |
| 13 | Dimensio | ons and weight | 111 |
| | 13.1 | Sensor dimensions | 111 |
| | 13.2 | Length matrix | 112 |
| | 13.3 | 316L stainless steel - NAMUR | 114 |
| | 13.4 | Hygienic versions | 116 |
| Α | Modbus h | holding registers | 117 |
| | A.1 | Modbus addressing model | 117 |
| | A.2 | Modbus function codes | 117 |
| | A.3 A.3.1 A.3.2 | Modbus holding registers tables Process values Identification | 123 |
| | A.3.3 | Setup | 124 |
| | A.3.4 | Totalizer | 126 |

| | A.3.5 | Maintenance & Diagnostics | 128 |
|---|-----------------|--------------------------------------|-----|
| | A.3.6 | Communication | |
| | A.3.7 | Characteristics | |
| | A.3.8 | Simulation | 135 |
| | A.3.9 | Alarms | |
| | A.3.10 | Quality codes for process values | 138 |
| В | Sensor d | limension dependent default settings | 139 |
| С | Zero poin | nt adjustment | 141 |
| D | CRC calculation | | 145 |
| Е | Exception | n codes | 149 |
| | E.1 | Exception handling | 149 |
| F | Float defi | inition | 151 |
| | F.1 | Float definition | 151 |
| | Glossary | , | 153 |
| | Index | | 155 |

Introduction

These instructions contain all information required to commission and use the device. Read the instructions carefully prior to installation and commissioning. In order to use the device correctly, first review its principle of operation.

The instructions are aimed at persons mechanically installing the device, connecting it electronically, configuring the parameters and commissioning it, as well as service and maintenance engineers.

The contents of this manual shall not become part of or modify any prior or existing agreement, commitment or legal relationship. The sales contract contains all obligations on the part of Siemens as well as the complete and solely applicable warranty conditions. Any statements regarding device versions described in the manual do not create new warranties or modify the existing warranty.

The content reflects the technical status at the time of publishing. Siemens reserves the right to make technical changes in the course of further development.

1.1 History

The following table shows major changes in the documentation compared to the previous edition.

| Edition | Remarks | SW version | FW revision |
|---------|--|-------------------------------|-------------|
| 12/2013 | First edition | SIMATIC PDM driver 1.00.01-01 | 2.03.02-01 |
| 05/2015 | Update of SIMATIC PDM ver. 8 Update of Modbus holding registers: Modbus address 2215 to 2218 added. | SIMATIC PDM driver 1.01.00-00 | 2.03.03-01 |
| 02/2016 | EAC Ex declaration information added | SIMATIC PDM driver 1.01.00-00 | 2.03.03-01 |

1.2 Items supplied


With M12 plug connection

- SITRANS FC410 flowmeter
- Sensor cable with M12 connector
- SD card with production certificates
- Quick Start guide
- CD containing software, certificates and device manuals



With sensor terminal housing

- SITRANS FC410 flowmeter
- Sensor cable
- · Packet of cable glands
- SD card with production certificates
- Quick Start guide
- CD containing software, certificates and device manuals

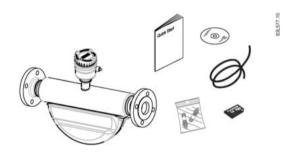

Note

Supplementary information

Supplementary product and production specific certificates are included on the SensorFlash® SD card.

Note

Scope of delivery may vary, depending on version and add-ons. Make sure the scope of delivery and the information on the nameplate correspond to your order and the delivery note.

1.3 Checking the consignment

- 1. Check the packaging and the delivered items for visible damage.
- 2. Report any claims for damages immediately to the shipping company.

- 3. Retain damaged parts for clarification.
- 4. Check the scope of delivery by comparing your order to the shipping documents for correctness and completeness.



Using a damaged or incomplete device

Danger of explosion in hazardous areas.

· Do not use damaged or incomplete devices.

1.4 Device identification

Each part of the FC410 Coriolis flowmeter has three nameplate types showing the following information:


- product identification
- product specifications
- certificates and approvals

Note

Identification

Identify your device by comparing your ordering data with the information on the product and specification nameplates.

FC410 sensor identification nameplate

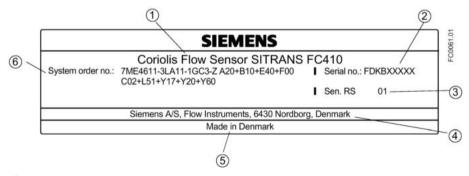

Product nameSensor product nameSerial no.Flowmeter serial number

Sen. RS Mechanical sensor version number
 Manufacturer Manufacturer name and location

(5) Country Manufacturing country

6 System order no. Device-specific system order number

Image 1-1 FC410 identification nameplate example

1.4 Device identification

Flowmeter serial number construction

The flowmeter serial number is constructed as follows:

PPPYMDDxxxxxx

where

PPP = Production factory (Siemens Flow Instruments: FDK)

Y = Production year (for encryption, see below)

M = Production month (for encryption, see below)

DD = Production date (for encryption, see below)

xxxxxx = Sequential number

Encryption:

| Calendar year (Y) | Code |
|------------------------|-------|
| 1950, 1970, 1990, 2010 | Α |
| 1951, 1971, 1991, 2011 | В |
| 1952, 1972, 1992, 2012 | С |
| 1953, 1973, 1993, 2013 | D |
| 1954, 1974, 1994, 2014 | Е |
| 1955, 1975, 1995, 2015 | F |
| 1956, 1976, 1996, 2016 | H (G) |
| 1957, 1977, 1997, 2017 | J |
| 1958, 1978, 1998, 2018 | K |
| 1959, 1979, 1999, 2019 | L |
| 1960, 1980, 2000, 2020 | M |
| 1961, 1981, 2001, 2021 | N |
| 1962, 1982, 2002, 2022 | Р |
| 1963, 1983, 2003, 2023 | R |
| 1964, 1984, 2004, 2024 | S |
| 1965, 1985, 2005, 2025 | T |
| 1966, 1986, 2006, 2026 | U |
| 1967, 1987, 2007, 2027 | V |
| 1968, 1988, 2008, 2028 | W |
| 1969, 1989, 2009, 2029 | Χ |
| Month (M) | Code |
| January | 1 |
| February | 2 |
| March | 3 |
| April | 4 |
| May | 5 |
| June | 6 |
| July | 7 |
| August | 8 |
| September | 9 |

 October
 O

 November
 N

 December
 D

 Date (DD)
 Code

Day 1 to 31 01 to 31 (corresponding to the actual date)

FC410 sensor specification nameplate


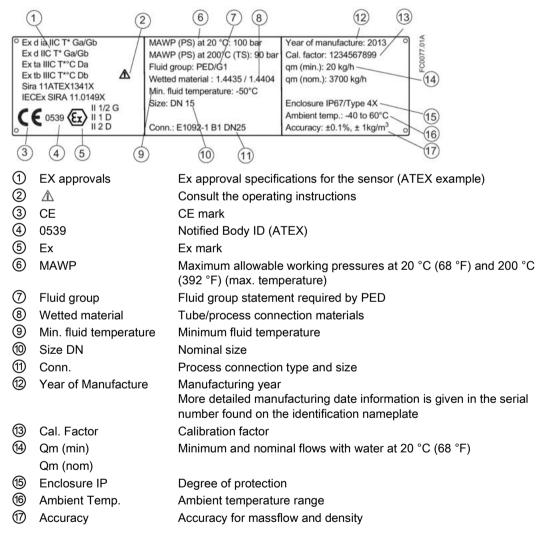


Image 1-2 FC410 specification nameplate example

1.4 Device identification

FC410 Mini Flow Link (MFL) identification nameplate

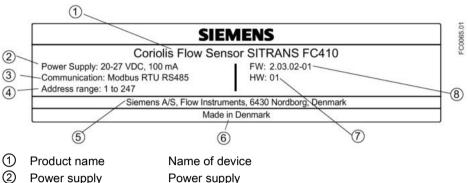

Power supply Power supply

Communication Communication: Modbus Master/Slave RTU technology

Address range Modbus device address range Manufacturer Manufacturer name and location

Country Manufacturing country (7)HW Hardware version FW Firmware version


Image 1-3 FC410 Mini Flow Link identification nameplate

Note

Approval identifications

Approval certificates and notified body identifications are available for download at siemens.com

FC410 sensor approval nameplate

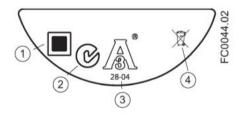

QR code Product-specific QR code

C√ C-tick logo 3 ЗА 3A logo

Ħ (4) WEEE (Page 83)

Image 1-4 FC410 approval nameplate example

Note

Logos and warnings

Logos and warnings are only shown on the product where applicable. The combination shown in the example above is relevant for a hygienic sensor.

The Australian C-tick mark is mandatory on all products.

FC410 EHEDG nameplate



Image 1-5 EHEDG nameplate

This nameplate appears on all Hygienic sensors 7ME462.

Other label



Image 1-6 How to install

The QR code provides direct internet connection to

- The product support portal, which includes access to the How to Install YouTube video. (This example provides that function.)
- Product and production-specific documentation maintained in the production database.

13

1.5 Further Information

1.5 Further Information

Product information on the Internet

The Operating Instructions are available on the documentation disk shipped with the device, and on the Internet on the Siemens homepage, where further information on the range of SITRANS F flowmeters may also be found:

Product information on the internet (http://www.siemens.com/flow)

Worldwide contact person

If you need more information or have particular problems not covered sufficiently by these Operating Instructions, get in touch with your contact person. You can find contact information for your local contact person on the Internet:

Local contact person (http://www.automation.siemens.com/partner)

Safety notes 2

This device left the factory in good working condition. In order to maintain this status and to ensure safe operation of the device, observe these instructions and all the specifications relevant to safety.

Observe the information and symbols on the device. Do not remove any information or symbols from the device. Always keep the information and symbols in a completely legible state.

| Symbol | Explanation |
|--------|--------------------------------|
| Ŵ | Consult operating instructions |

2.1 Laws and directives

Observe the test certification, provisions and laws applicable in your country during connection, assembly and operation. These include, for example:

- National Electrical Code (NEC NFPA 70) (USA)
- Canadian Electrical Code (CEC) (Canada)

Further provisions for hazardous area applications are for example:

- IEC 60079-14 (international)
- EN 60079-14 (EC)

Conformity with European directives

The CE marking on the device symbolizes the conformity with the following European directives:

Electromagnetic compatibili- Directive of the European Parliament and of the Council on the ty EMC approximation of the laws of the Member States relating to electromagnetic compatibility and repealing Directive 89/336/EEC.

Low voltage directive LVD Directive of the European Parliament and of the Council on the harmonisation of the laws of Member States relating to electrical equipment designed for use within certain voltage limits.

2.2 Installation in hazardous locations

Atmosphère explosible

ATEX 94/9/EC Directive of the European Parliament and the Council on the approximation of the laws of the Member States concerning equipment and protective systems intended for use in potential-

ly explosive atmospheres.

ve PED 97/23/EC

Pressure equipment directi- Directive of the European Parliament and of the Council on the approximation of the laws of the Member States concerning pressure equipment.

The applicable directives can be found in the EC conformity declaration of the specific device. Further country or region-specific code conformity information is available on request.



WARNING

Improper device modifications

Danger to personnel, system and environment can result from modifications to the device, particularly in hazardous areas.

Only carry out modifications that are described in the instructions for the device. Failure to observe this requirement cancels the manufacturer's warranty and the product approvals.

Note

CE declaration

The CE declaration certificate is available on the SensorFlash SD card delivered with the device.

Note

EAC declaration

The EAC declaration is available on the SensorFlash SD card delivered with the device.

Installation in hazardous locations 2.2



WARNING

Equipment used in hazardous locations

Equipment used in hazardous locations must be Ex-approved for the region of installation and marked accordingly. It is required that the special conditions for safe use provided in the manual and in the Ex certificate are followed!

Hazardous location approvals

The device is approved for use in hazardous locations and has the approvals listed below. Special conditions for safe installation and operation specified by each approval authority are included in the relevant certificate.

ATEX:

FC410 flowmeter (can be installed in Zone 1 for gas and Zone 20/21 for dust):

Certificate: SIRA 11ATEX1341X

€ II 1/2 G

1D 2D

For gas:

Ex d ia IIC T* Ga/Gb Ex d IIC T* Ga/Gb

(Ga/Gb: Zone 0 in pipe and Zone 1 in environment)

For dust:

Ex ta IIIC T* °C Da

Ex tb IIIC T* °C Db

(Zone 20 ("ta") process and ambient temperature limited in comparison with Zone 21 ("tb")

 $Ta = -40^{\circ}C$ to $+60^{\circ}C$

IECEx:

FC410 flowmeter (can be installed in Zone 1 for gas and Zone 20/21 for dust):

Certificate: IECEx SIR 11.0149X

For gas:

Ex d ia IIC T* Ga/Gb

Ex d IIC T* Ga/Gb

(Ga/Gb: Zone 0 in pipe and Zone 1 in environment)

For dust:

Ex ta IIIC T* °C Da

Ex tb IIIC T* °C Db

(Zone 20 ("ta") process and ambient temperature limited in comparison with Zone 21 ("tb")

 $(Ta = -40^{\circ}C \text{ to } +60^{\circ}C)$

EAC Ex

FC410 flowmeter / -40°C ≤ Tamb ≤ ** °C

1Ex d ia IIC T* Ga/Gb

Ex ta IIIC T** °C Da

Ex tb IIIC T** °C Db

^{*} Temperature class (dependent on the process temperature and the ambient temperatur)

^{*} Temperature class (dependent on the process temperature and the ambient temperature)

2.2 Installation in hazardous locations

FM:

Sensor with Mini Flow Link (MFL) (FC410):

Class I, II, III Division 1 Groups A, B,C, D, E, F, G Class I Zone1 and Zone 20/21

Note

Control drawing

See Control drawing: A5E31205486A

Maximum temperature specifications for Ex use

Device temperature classification with and without dust is related to the process temperature and ambient temperature as listed below.

The maximum allowable process fluid temperatures with respect to temperature class for the device when used with potentially explosive gases in a maximum ambient temperature of +60°C are:

| Ta (°C) | Maximum Process Temperature per Temperature Class (°C) | | | |
|---------|--|-----|-----|-----|
| | Т6 | T5 | T4 | Т3 |
| 60 | 70 | 70 | 70 | 70 |
| 55 | 85 | 100 | 100 | 100 |
| 50 | 85 | 100 | 130 | 130 |
| 45 | 85 | 100 | 135 | 160 |
| 40 | 85 | 100 | 135 | 190 |
| 35 | 85 | 100 | 135 | 200 |
| 30 | 85 | 100 | 135 | 200 |

If the equipment is placed in a "tb" environment (Zone 21), the maximum process temperatures shall be as follows:

| Ta (°C) | Maximum Process Temperature per Temperature Class (°C) | |
|---------|--|--|
| 60 | 70 | |
| 55 | 100 | |
| 50 | 130 | |
| 45 | 160 | |
| 40 | 190 | |
| 35 | 200 | |
| 30 | 200 | |

Additionally, the maximum surface temperature of the overall device shall be:

- If Tprocess ≤ 85°C, maximum surface temperature = 85°C.
- If Tprocess > 85°C, maximum surface temperature = process temperature.

If the equipment is placed in a "ta" environment (Zone 20), the maximum process temperature shall be as follows:

| 1 | |
|---------|--|
| Ta (°C) | Maximum Process Temperature per Temperature Class (°C) |
| 60 | -40 |
| 55 | -10 |
| 50 | 20 |
| 45 | 50 |
| 40 | 80 |
| 35 | 110 |
| 30 | 140 |

Special conditions for safe use

In general, it is required that:

- The equipment shall not be opened when energized and when an explosive gas or dust atmosphere may be present..
- Appropriate cable connectors are used.
- Sensor is connected to the potential equalization throughout the hazardous area.
- EN/IEC 60079-14 is considered for installation in hazardous areas.

Further information and instructions including approval-specific special conditions for safe use in Ex applications can be found in the certificates on the accompanying literature CD and at www.siemens.com/FC410 (www.siemens.com/FC410).



WARNING

Laying of cables Explosion hazard

Cable for use in hazardous locations must satisfy the requirements for having a proof voltage of at least 500 V AC applied between the conductor/ground, conductor/shield and shield/ground.

Connect the devices that are operated in hazardous areas as per the stipulations applicable in the country of operation.



WARNING

Field wiring installation

Ensure that the national requirements of the country in which the devices are installed are met.

2.3 Certificates

2.3 Certificates

Certificates are posted on the online support portal (http://www.siemens.com/processinstrumentation/certificates) and can also be found on the documentation disk shipped with the device.

Certification documents including calibration report are supplied with each sensor included on the SensorFlash. Material, pressure test, and factory conformance certificates are optional at ordering.

Description

Measurement of liquids and gases

SITRANS F C Coriolis mass flowmeters are designed for measurement of a variety of liquids and gases. The flowmeters are multi-parameter devices offering accurate measurement of massflow, volumeflow, density, temperature and, depending on product variants, fraction, including industry-specific fractions.

Main applications

The main applications of the Coriolis flowmeter can be found in all industries, such as:

- Chemical & Pharma: detergents, bulk chemicals, acids, alkalis, pharmaceuticals, blood products, vaccines, insulin production
- Food & Beverage: dairy products, beer, wine, soft drinks, "Brix/"Plato, fruit juices and pulps, bottling, CO₂ dosing, CIP/SIP-liquids, mixture recipe control
- Automotive: fuel injection nozzle & pump testing, filling of AC units, engine consumption, paint robots
- Oil & Gas: filling of gas bottles, furnace control, test separators, bore-hole plasticizer dosing, water-cut metering
- Water & Waste Water: dosing of chemicals for water treatment

Note

Use in a domestic environment

This is a Class A Group 1 equipment intended for use in industrial areas.

In a domestic environment this device may cause radio interference.

3.1 Design

The SITRANS FC410 flowmeter uses the Coriolis principle to measure flow. The device is a one channel flowmeter with Modbus RTU RS 485 output.

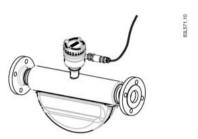


Image 3-1 Flowmeter - M12 connection



Image 3-2 Flowmeter – terminated cable

Flowmeter design

All primary process measurement of massflow, volumeflow, density and process temperature are made in the MFL/sensor front end.

The sensor comprises two parallel bent tubes welded directly to the process connections at each end via a manifold.

The sensors are available in AISI 316L stainless steel and Hastelloy C22. The enclosure is made of AISI 304 stainless steel which has a pressure rating of 20 bar (290 psi) for DN 15 to DN 50 and 17 bar (247 psi) for DN 80. The burst pressure for all sizes is in excess of 160 bar.


The sensor enclosure can be equipped with a pressure guard or flushed with dry inert gas at the threaded ports for non-hazardous applications only.

Note

Ex certification requires that the threaded ports always remain closed.

The Mini Flow Link is available in an aluminum enclosure with an ingress protection grade of IP67/NEMA 4X. It has a 4-wire M12 cable or terminated cable connection for communication and power supply.

Flowmeter overview

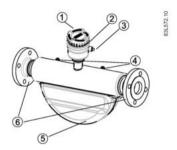

- 1 Mini Flow Link (MFL)
- 2 Lid-lock
- 3 Cable feed-through (M12 socket or gland)
- 4 Plug and threaded port for example for pressure guard
- Sensor enclosure
- 6 Process connections

Image 3-3 Overview of FC410 flowmeter

3.2 System integration

The FC410 flowmeter functions as a Modbus RTU slave with standard Modbus commands implemented. Setup parameters, process values, diagnostics, and status information are mapped as Modbus registers.

The device can be connected point-to-point or in a multidrop network in non-hazardous or hazardous locations. It can be connected to different hosts for example a PLC system or a PC used as service tool or configuration tool.

Note

Multidrop installations in hazardous locations

Multidrop installations in hazardous locations require flameproof conduit seals for each device, see illustrations in System configurations (Page 43)

3.3 Modbus RTU technology

Modbus RTU is an open, serial protocol based on master/slave architecture. The protocol interconnects field equipment such as sensors, actuators, and controllers and is widely used in both process and manufacturing automation. The fieldbus environment is the base level group of digital networks in the hierarchy of plant networks.

3.3 Modbus RTU technology

Features

The SITRANS F Modbus RTU communication complies with the Modbus Serial Line Protocol. Among other things this implies a master / slave protocol at level 2 of the OSI model. A node (the master) issues explicit commands to one of the slave nodes and processes responses. Slave nodes will not transmit data without a request from the master node, and do not communicate with other slaves.

Modbus is a mono master system, which means that only one master at a time can be connected.

Unicast communication mode

In unicast mode (master/slave mode) the master sends a request to a specific slave device and waits a specified time for a response.

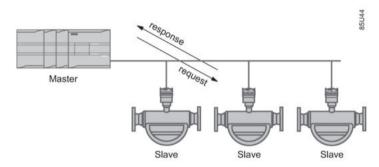


Image 3-4 Unicast Mode

Modbus Frame

The Modbus frame is shown below and is valid for both requests and responses.

Table 3-1 Modbus Frame

| SLAVE ADDRESS | FUNCTION MODE | DATA | CRC |
|---------------|---------------|----------------|---------|
| 1 Byte | 1 Byte | 0 to 252 Bytes | 2 Bytes |

References

For further information, please refer to the following specification and guidelines available at the Modbus Organization (http://www.modbus.org/) website

- 1. Serial Line Specification & Implementation guide
- 2. Application Protocol Specification

3.4 Features

- The SITRANS FC410 can be used as Modbus slave in stand-alone or parallel operation on Modbus or third party automation systems
- Compact sensor design
- NAMUR conforming sensor built-in lengths (on request)
- · High immunity against process noise
- · Fast response to step changes in flow
- High update rate (100 Hz) on all process values
- Measurement of:
 - Massflow
 - Volumeflow
 - Density
 - Process media temperature
- Independent low flow cut-off settings for massflow and volumeflow
- Automatic zero-point adjustment (initiated by host system)
- Process noise damping using digital signal processing (DSP).
- One totalizer for summation of massflow. The totalizer is reset on loss of power.
- · Empty pipe monitoring
- Simulation of process values:
 - Massflow
 - Volumeflow
 - Density
 - Process media temperature
- · Troubleshooting and sensor checking
- Use in hazardous locations according to specification

3.5 Theory of operation


The Coriolis principle of measurement

The flow measurement is based on the Coriolis law of motion. Particles moving in a rotating / oscillating system will resist imposed oscillations in a manner consistent with their mass and velocity (momentum). Oscillation produced by a Coriolis flowmeter where the process media is accelerated around bends results in phase distortions of the measuring tubes.

The SITRANS F C sensors are energized by an electromagnetic (voice coil) driver circuit which oscillates the pipes at their resonant frequency. Two pickups are placed symmetrically on either side of the driver to provide position signals for digital processing.

3.5 Theory of operation

When the media flows through the sensor, Coriolis force will act on the measuring tubes and cause deflection which can be measured as a phase shift between Pickup 1 and Pickup 2. The phase shift is proportional to the mass flowrate.

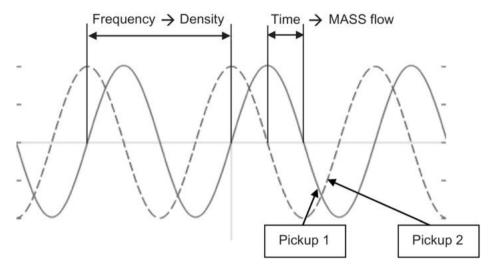

The frequency (or period) of the vibration is a direct function of the process media density.

The frequency and amplitude of the driver is regulated to ensure a stable output from the 2 pickups. The temperature of the sensor tubes is measured to provide accurate compensation for changes in the material stiffness. As a result the process media temperature is also accurately measured.


The flow proportional phase signal from the pickups, the temperature measurement and the driver frequency enable calculation and reporting of mass, density, volume, and temperature.

Digital signal processing (DSP)

The analog to digital conversion takes place in an ultra low noise sigma delta converter with high signal resolution. With fast digital signal processing massflow and density values are calculated using a patented DFT technology (Discrete Fourier Transformation). The combination of this patented DFT technology and the fast DSP enables short response time (< 10 ms) to changes in the measured values.

The built-in noise filter is configurable and can be used for improving the performance of the flowmeter, in case the installation and application conditions are not ideal. Typical process noise such as gas bubbles (two-phase-flow) can be reduced through the filter functions.

Installing/Mounting 4

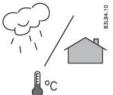

SITRANS F flowmeters with minimum IP67/NEMA 4X enclosure rating are suitable for indoor and outdoor installations.

 Make sure that specifications for rated process pressure (PS) and media temperature (TS) plus ambient temperature that are indicated on the device nameplate / label will not be exceeded.



WARNING

Installation in hazardous location

Special requirements apply to the location and installation of the device. See Installation in hazardous locations (Page 16).

4.1 Flowmeter installation

4.1.1 Installation safety precautions



WARNING

High pressure hazard

In applications with working pressures/media that can be dangerous to people, surroundings, equipment or others in case of pipe fracture, we recommend that special precautions such as special placement, shielding or installation of a pressure guard or a safety valve are taken when the flowmeter is mounted.



WARNING

Exceeded maximum permissible operating pressure

Danger of injury or poisoning.

The maximum permissible operating pressure depends on the device version. The device can be damaged if the operating pressure is exceeded. Hot, toxic and corrosive process media could be released.

 Make sure that the device is suitable for the maximum permissible operating pressure of your system. Refer to the information on the nameplate and/or in "Rated operating conditions (Page 94)".

4.1 Flowmeter installation



CAUTION

Hot surfaces resulting from hot process media

Danger of burns resulting from surface temperatures above 70 °C (155 °F).

- Take appropriate protective measures, for example contact protection.
- Make sure that protective measures do not cause the maximum permissible ambient temperature to be exceeded. Refer to the information in Chapter "Rated operating conditions (Page 94)".



CAUTION

External stresses and loads

Damage to device by severe external stresses and loads (e.g. thermal expansion or pipe tension). Process media can be released.

Prevent severe external stresses and loads from acting on the device.



WARNING

Wetted parts unsuitable for the process media

Danger of injury or damage to device.

Hot, toxic and corrosive media could be released if the process medium is unsuitable for the wetted parts.

 Ensure that the material of the device parts wetted by the process medium is suitable for the medium. Refer to the information in "Technical data" (Page 99).

Note

Material compatibility

Siemens can provide you with support concerning selection of sensor components wetted by process media. However, you are responsible for the selection of components. Siemens accepts no liability for faults or failures resulting from incompatible materials.

4.1.2 Determining a location



CAUTION

Electromagnetic fields

Do not install the flowmeter in the vicinity of strong electromagnetic fields, for example near motors, variable frequency drives, transformers etc.

Upstream / downstream

- No pipe run requirements, that is straight inlet/outlet sections are not necessary.
- Avoid long drop lines downstream from the sensor to prevent process media separation causing air / vapour bubbles in the tube (min. back pressure: 0.2 Bar).
- Avoid installing the flowmeter immediately upstream of a free discharge in a drop line.

Location in the system

The optimum location in the system depends on the application:

- Liquid applications
 Gas or vapor bubbles in the fluid may result in erroneous measurements, particularly in
 the density measurement.
 - Do not install the flowmeter at the highest point in the system, where bubbles will be trapped.
 - Install the flowmeter in low pipeline sections, at the bottom of a U-section in the pipeline.



Image 4-1 Liquid applications, wrong location with trapped air/gas

- Gas applications
 - Vapor condensation or oil traces in the gas may result in erroneous measurements.
 - Do not install the flowmeter at the lowest point of the system.
 - Install a filter.



Image 4-2 Gas applications, wrong location with trapped oil

4.1.3 Orientation of the device

Flow direction

The calibrated flow direction is indicated by the arrow on the sensor. Flow in this direction will be indicated as positive by default. The sensitivity and the accuracy of the sensor do not change with reverse flow.

4.1 Flowmeter installation

The indicated flow direction (positive/negative) is configurable.



Accurate measurement

The sensor must always be completely filled with process media in order to measure accurately.

Orienting the sensor

The sensor operates in any orientation. The optimal orientation depends on the process fluid and the process conditions. Siemens recommends orienting the sensor in one of the following ways:

1. Vertical installation with an upwards flow (self-draining)

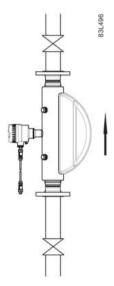


Image 4-3 Vertical orientation, upwards flow

2. Horizontal installation, tubes down (recommended for liquid applications)

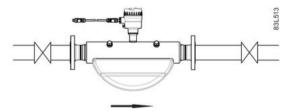


Image 4-4 Horizontal orientation, tubes down

3. Horizontal installation, tubes up (recommended for gas applications)

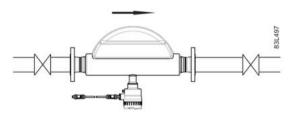


Image 4-5 Horizontal orientation; tubes up


Note

Hygienic applications

In 3A and EHEDG certified hygienic applications the flowmeter must be installed vertically as shown in 1 above.

Installation in a drop line

Installation in a drop line is only recommended if a pipeline reduction or orifice with a smaller cross-section can be installed to create back-pressure and prevent the sensor from being partially drained while measuring.

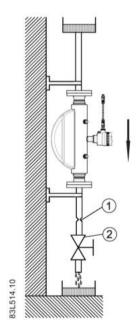

- Back pressure orifice
- ② On / off valve

Image 4-6 Installation in drop line

4.1 Flowmeter installation

4.1.4 Mounting the flowmeter

NOTICE

Incorrect mounting

The device can be damaged, destroyed, or its functionality impaired through improper mounting.

- Before installing ensure there is no visible damage to the device.
- Make sure that process connectors are clean, and suitable gaskets and glands are used.
- Mount the device using suitable tools. Refer to the information in Chapter "Technical data (Page 91)", for example installation torques requirements.



Unsuitable connecting parts

Danger of injury or poisoning.

In case of improper mounting hot, toxic and corrosive process media could be released at the connections.

- Ensure that connecting parts (such as flange gaskets and bolts) are suitable for connection and process media.
- Install the flowmeter in well-supported pipelines in order to support the weight of the device.
- Center the connecting pipelines axially in order to assure a stress-free installation. The flowmeter must not be used to bring the rest of the pipework into line; make sure the pipework is correctly aligned before inserting the flowmeter.
- Install two supports or hangers symmetrically and stress-free on the pipeline in close proximity to the process connections.

Note

Handling

Never lift the flowmeter using the housing, that is, always lift the sensor body.

Avoid vibrations

- Make sure that no valves or pumps upstream of the flowmeter cavitates or sends vibration into the sensor.
- Decouple vibrating pipeline from the flowmeter using flexible tube or couplings

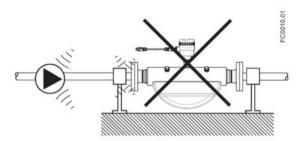


Image 4-7 Non-flexible pipes not recommended in vibrating environment

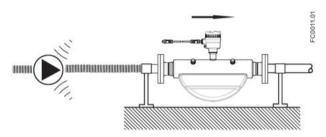


Image 4-8 Flexible pipes recommended in vibrating environment

Avoid cross talk

If operating more than one flowmeter in one or multiple interconnected pipelines there is a risk of cross talk.

Prevent cross talk in one of the following ways:

- Mount sensors on separate frames
- Decouple the pipeline using flexible tube or couplings

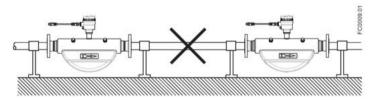


Image 4-9 High risk of cross talk when using non-flexible pipes

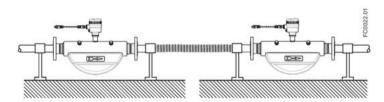


Image 4-10 Low risk of cross talk when using flexible pipes

4.1 Flowmeter installation

4.1.5 Hydrostatic testing

The flowmeter is pressure-tested before delivery to 1.5 times the rated working pressure of the sensor.

- In the case of process connections pressure-rated less than 100 bar, the connection is the limiting component.
- In the cases of stainless steel sensors with process connections pressure-rated above 100 bar, the sensor is the limiting component.

In all cases the maximum allowed hydrostatic test pressure (MATP) of the flowmeter is 1.5 times the marked MAWP (PS) at 20 °C.



Risk of equipment damage

Never pressure test a completed flow system with piping and other components at pressures higher than 1.5 times the marked MAWP (PS) at 20 °C of the lowest rated component in the system.

4.1.6 Mounting a pressure guard

The sensor enclosure is supplied with two G½" (parallel thread) purge ports. These ports can for example be used for a pressure guard, which can be connected to an automatic shut off valve to stop the flow in case of sensor pipe fracture.

Note

Non-hazardous locations only

A pressure guard can be applied only in non-hazardous locations.

Note

Avoid opening purge ports

Opening either of the purge ports will void any Ex rating for the sensor.

The AISI 304 / EN 1.4301 exterior enclosure is rated to approximately 20 bar static pressure to contain spilt process media in the event of a tube break. However it is not intended to contain high pressure or corrosive fluids and precautions must be taken in applications where vibrating tube failure is probable and may cause damage.

Pressure guard selection

Siemens does not supply the components of the pressure guard solution because the arrangement and components are closely related to individual safety and protection practices in each place.

The selection of pressure guard solution is the responsibility of the user, however Siemens recommends the following forms of pressure guard:

- A pressure switch screwed directly or piped into one of the purge ports and connected to an automatic shut-off valve will disable pressurized supply to the meter.
- A relief valve or bursting disc screwed directly or piped to one of the purge ports to carry any spilt fluid to drain after opening.

The pressure switch and relief valve set point should be 2-3 bar gauge. The pressure switch should be rated to withstand the full process pressure and temperature for a short time without rupture.



CAUTION

Drain flow

Ensure the drain flow is safely contained away from personnel and other plant or equipment.

Mounting of pressure guard



CAUTION

Moisture, liquids or particles getting into the sensor enclosure

All sensors are filled with argon to avoid condensation. Ingress of moisture, liquids or particles into the sensor may influence the measurement and in worst case inhibit the measuring function.

Avoid moisture, liquids or particles getting into the sensor enclosure

Install a pressure guard as follows:

- 1. Place the sensor in a dry, clean place and leave it to acclimatize until it reaches ambient temperature, preferred 20°C (68°F) with low humidity (at least below 50% RH).
- 2. Orient the sensor with the purge ports uppermost to minimize loss of the argon gas filling.
- 3. Carefully remove the plug and mount the pressure guard.
 Use replacement soft metal sealing rings for proper sealing.



CAUTION

Lack of proper sealing

Soft metal sealing rings only maintain a hermetic seal within the enclosure with single use.

Ensure that soft metal sealing rings are not reused.

4.1 Flowmeter installation

- 4. Make sure that the pressure guard does NOT touch any of the parts inside the sensor. Maximum of 20 mm (0.79") insertion can be accommodated.
- 5. Check that the pressure guard has been correctly mounted and thoroughly tightened (torque: 80 Nm).



Operation in proximity with pressure guards

Prevent personal injuries by assuring that operation in close proximity with pressure guards cannot take place.

Connecting

This chapter describes how the device is connected and integrated into a Modbus network in a point-to-point or multidrop configuration.

5.1 Wiring in hazardous locations

Hazardous area applications

Special requirements apply to the location and interconnection of flowmeter and flameproof conduit seals. Two conduit seals per device must be installed; one at the device in the hazardous location and one in the non-hazardous location.



MFL housing

Before opening the MFL housing check that:

- No explosion hazard exists
- All connection leads are potential free

5.2 Cable requirements

Cable specifications

- Only use cables with at least the same degree of protection as the sensor to install the sensor. It is recommended to use cables supplied by Siemens A/S, Flow Instruments.
- Siemens supplied cables can be ordered with M12 plug on both ends or without plug.
- To guarantee the IP67 degree of protection, ensure that both ends of the cables are given equivalent protection from ingress of moisture.
- For further information on Siemens-supplied cables, see Technical Data (Page 101).

5.3 Safety notes for connecting

See also specifications of cable lengths in Wiring FC410 to the Modbus system (Page 48).



WARNING

Cable requirements

Cables must be suitable for the temperature (at least 70 °C) and be flammability-rated to at least V-2.



WARNING

Unprotected cable ends

Danger of explosion through unprotected cable ends in hazardous areas.

Protect unused cable ends in accordance with IEC/EN 60079-14.

5.3 Safety notes for connecting



WARNING

Skills

Only qualified personnel may carry out work on the electrical connections.

Use in hazardous locations

Before accessing the sensor terminal compartment and application terminal compartment check that:

- No explosion hazard exists
- FC410 may not be opened if energized
- A safe access permission certificate has been issued by plant operations management
- · All connection leads are potential free



WARNING

Commissioning

Only commission the device after the device has been properly connected and closed.

5.4 Connecting the FC410

Note

End Of Line (EOL) termination

The FC410 EOL termination DIP switch is default set to EOL active. To change termination setting see Setting the EOL termination DIP switches (Page 42).

5.4.1 M12 version (for non-Ex areas)

The device is provided with a preformed cable terminated with M12 style stainless steel weather-proof plugs.

The cable screen is physically and electrically terminated within the body of the plug.

Take care when handling the cable and passing it through cable ducting that the plug is not subjected to excessive tension (pulling) as the internal connections may be disengaged.

Note

Never pull the cable by the plug - only by the cable itself.

1. Connect the device using the supplied 4-wire cable with M12 connectors.

Note

Grounding

The sensor cable screen is electrically connected to the grounding terminal (PE), only when the M12 plug is correctly tightened.

| Terminal number | Description | Wire color (Siemens cable) |
|-----------------|-------------|----------------------------|
| 1 | 24 VDC | Orange |
| 2 | 0 VDC | Yellow |
| 3 | В | White |
| 4 | А | Blue |

5.4.2 Cable termination version

A: Prepare the cable by stripping it at both ends.



Image 5-1 Cable end

B: Connect wires within the sensor terminal compartment

- 1. Remove the lock screw and remove the lid.
- 2. Undo the flexible strap.
- 3. Disconnect the sensor connection (white plug) from the electronic.
- 4. Loosen the mounting screw using a TX10 Torx driver and remove the electronic from the housing.
- 5. Remove the cap and the ferrule from the cable gland and slide onto the cable.
- 6. Push the cable through the open gland and anchor the cable shield and the wires with the clamp bar.
- 7. Remove the terminal block from the electronic.
- 8. Connect the wires to the terminals according to the list below.

| Terminal number | Description | Wire color (Siemens cable) |
|-----------------|-------------|----------------------------|
| 1 | 24 VDC | Orange |
| 2 | 0 VDC | Yellow |
| 3 | В | White |
| 4 | A | Blue |


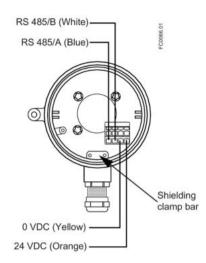


Image 5-2 Sensor terminal compartment



- 9. Reinstall the electronic including the mounting screw.
- 10. Connect the sensor connection and the sensor cable.
- 11.Restore the flexible strap around all wires.

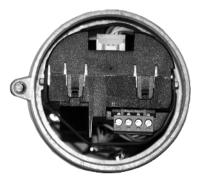

- 12. Assemble and tighten the cable gland.
- 13. Remove the O-ring from lid.
- 14. Reinstate the lid and screw in until the mechanical stop. Wind back the lid by one turn.
- 15. Mount the O-ring by pulling it over the lid and tighten the lid until you feel friction from the O-ring on both sides. Wind the lid by one quarter of a turn to seal on the O-ring.
- 16. Reinstate and tighten the lid lock screw.

5.4 Connecting the FC410

5.4.3 Setting the EOL termination DIP switches

It is important to terminate the Modbus RS 485 line correctly at the start and end of the bus segment since impedance mismatch results in reflections on the line which can cause faulty communication transmission.

If the device is at the end of the bus segment, it is recommended to terminate the device as shown in System configurations (Page 43). The table below shows the relation between the DIP switch settings and the permissible communication interface set-ups. Default configuration is EOL active.

Location of DIP switch

The DIP switch is located in the electronic as shown below.

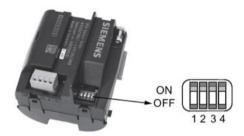


Image 5-3 DIP switch location (all set to ON)

DIP switch settings for communication set-up

| DIP switch Communication set-up | Switch 1 | Switch 2 | Switch 3 | Switch 4 |
|---------------------------------|----------|----------|----------|----------|
| EOL active | On | On | On | On |
| EOL not active | On | On | Off | Off |

NOTICE

Avoid DIP switch settings not mentioned in the table!

DIP switch settings not mentioned in the table above are not allowed and may reduce communication interface reliability.

See also

System integration (Page 23)

5.5 Integrating the FC410 with Modbus system

This chapter provides information on how to integrate the flowmeter in a point-to-point or multidrop Modbus RTU network in non-hazardous or hazardous locations. Many details of network design are beyond the scope of these operating instructions. The points below provide an overview of the major design criteria. For further details contact Siemens.

If the device is integrated in a hazardous location, two flameproof conduit seals per device must be installed; one at the device in the hazardous location and one in the non-hazardous location, see System configurations (Page 43).

5.5.1 System configurations

Non-hazardous locations

The following figures show examples of installations in point-to-point and multidrop configurations in non-hazardous locations.

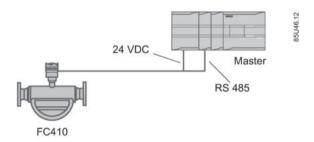


Image 5-4 Point-to-point configuration in non-hazardous location with Ex d certified cable gland for use in Zone classified areas only

5.5 Integrating the FC410 with Modbus system

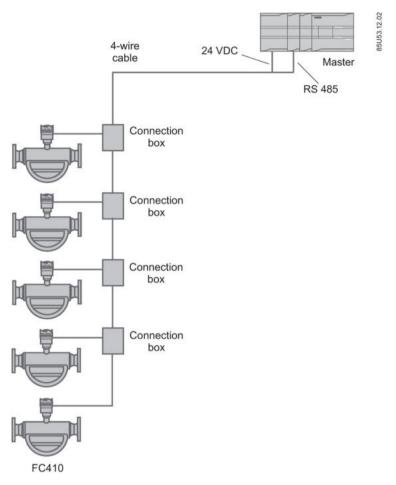


Image 5-5 Multidrop configuration (branch) in non-hazardous location

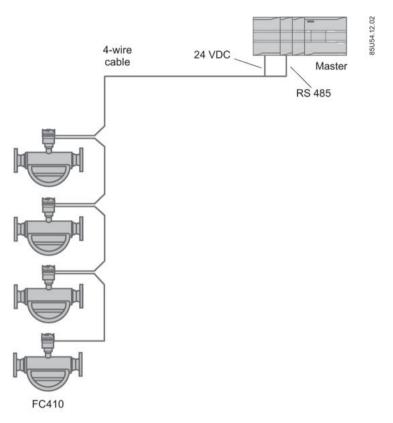


Image 5-6 Multidrop configuration (Daisy chain) in non-hazardous location

NOTICE

M12 plugged systems

Daisy chain multidrop configuration is **NOT** possible with M12 plugged systems.

Hazardous locations

The following figures show examples of installations in point-to-point and multidrop configurations in hazardous locations.

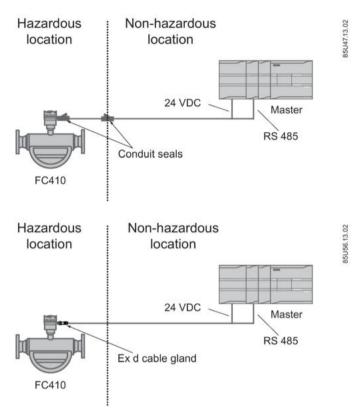
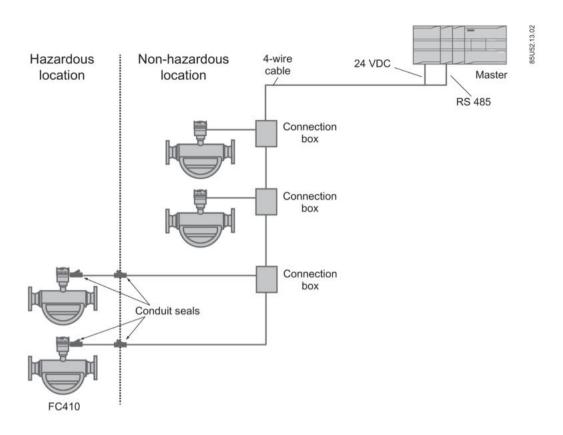


Image 5-7 Point-to-point configuration in hazardous location



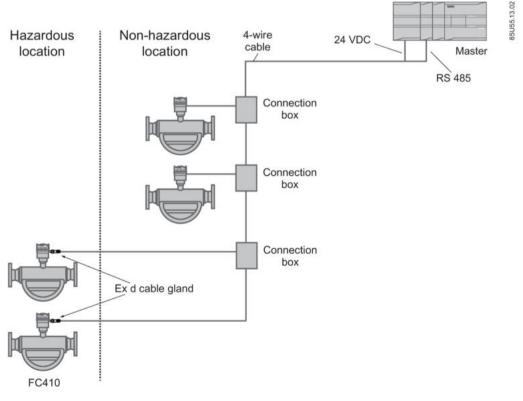


Image 5-8 Multidrop configuration in hazardous location

NOTICE

Flameproof conduit seals

Two flameproof conduit seals are required for each device in hazardous area installations, one on DSL and one where cables leave hazardous area..

NOTICE

Equipment approved for hazardous locations


Ensure that the equipment is approved for installation in hazardous locations.

5.5.2 Wiring FC410 to the Modbus system

FC410 is slave in a 2-wire Modbus RTU RS 485 bus system. Terminal A on the FC410 must be connected to terminal A on the master/host system. Terminal B on the FC410 must be connected to terminal B on the master/host system This corresponds to a half-duplex communication where the slave will only reply to a request from the master.

This example shows an EMC shielded enclosure for multidrop installation where the
connection includes signal and power. Cable shield must be grounded at host system, in
connection box, and at flowmeter to comply with EMC requirements. Keep the cable
shield to the ground as short as possible.

Connection from host system

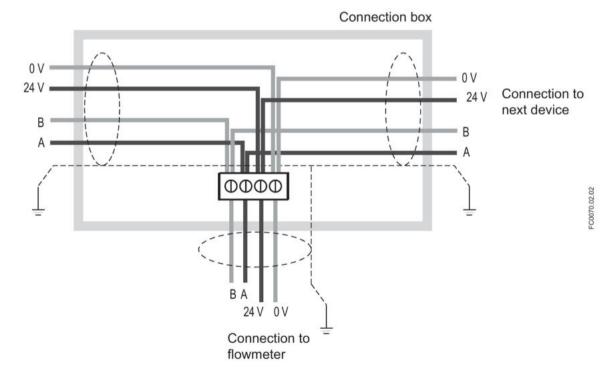

Siemens can supply suitable cable (gray) for non-hazardous area installations in required lengths to be ordered with the system. The cables can be ordered with M12 plugs on both ends or without plug.

Topology

FC410 supports a two-wire electrical interface in accordance with EIA/TIA-485 standard.

An RS485 Modbus configuration without repeater has one trunk cable, along which devices are connected, directly (daisy chaining) or by short branch cables.

Note

Multidrop examples in this document show a trunk cable with short branch cables.

Maximum cable lengths

The end to end length of the trunk cable must be limited. The maximum length depends on the baud rate, the cable (gauge, capacitance or characteristic Impedance), the number and types of loads on the daisy chain, and the network configuration.

Note

Maximum branch cable length

Branch cables must be short, never more than 20 m.

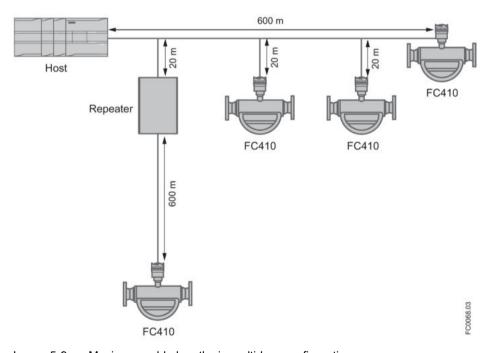


Image 5-9 Maximum cable lengths in multidrop configuration

5.5 Integrating the FC410 with Modbus system

Commissioning

6.1 General requirements

Before commissioning it must be checked that:

- The device has been installed and connected in accordance with the guidelines provided in Installing/Mounting (Page 27) and Connecting (Page 37).
- Device installed in hazardous area meets the requirements described in Installation in hazardous locations (Page 16).

6.2 Warnings



Improper handling

The sensor connected to this device can be operated with high pressure and corrosive media. Therefore improper handling of the device can lead to serious injuries and/or considerable material damage.

A WARNING

Commissioning and operation with pending error

If an error message appears, correct operation in the process is no longer guaranteed.

- Check the gravity of the error.
- Correct the error.
- If the error still exists:
 - Take the device out of operation.
 - Prevent renewed commissioning.

6.3 Operating via SIMATIC PDM

SIMATIC PDM is a software package used to commission and maintain process devices. Further information can be found at: www.siemens.com/simatic-pdm (www.siemens.com/simatic-pdm).

6.4 Functions in SIMATIC PDM

SIMATIC PDM monitors the process values, alarms and status signals of the device. It allows you to display, compare, adjust, verify, and simulate process device data; also to set schedules for calibration and maintenance.

Parameters are identified by name and organized into function groups. See Modbus addressing model (Page 117) for a table and Changing parameter settings using SIMATIC PDM (Page 64) for more details.

See Parameters accessed via drop-down menus (Page 64) for parameters that do not appear in the menu structure in SIMATIC PDM.

Note

Supported SIMATIC PDM versions

The EDD supporting this product is compatible with SIMATIC PDM v. 6.0 + SP5 + HF5 or from v. 8.2 + SP1.

6.5 Commissioning steps

In the following it is described how to commission the device with SIMATIC PDM.

The steps are divided into the following sections:

- 1. Initial setup (Page 52)
- 2. Adding device to the communication network (Page 54)
- 3. Configuring a new device (Page 55).
- 4. Wizard Quick start with PDM (Page 56)
- 5. Wizard Zero point adjustment

6.6 Initial setup

To ensure that SIMATIC PDM connects properly, please complete the two processes outlined below:

- Deactivating buffers
- 2. Updating the Electronic Device Description (EDD)


Deactivating buffers for RS 485 com port

This deactivation is required to align SIMATIC PDM with the Modbus modem for Windows® operating systems.

Note

Support for Windows operating systems can be found here: support.automation.siemens.com (http://support.automation.siemens.com)

- 1. Click **Start** → **Control Panel** to begin configuration.
- 2. Click on Hardware and Sound and then on Device Manager.
- 3. Open **Ports** folder and double-click the COM Port used by the system to open the **Communications Port Properties** window.
- 4. Select the **Port Settings** tab and click the **Advanced** button.
- 5. If the **Use FIFO buffers** check box is deselected, click to select.
- 6. Set Receiver Buffer and Transmitter Buffer to Low (1).

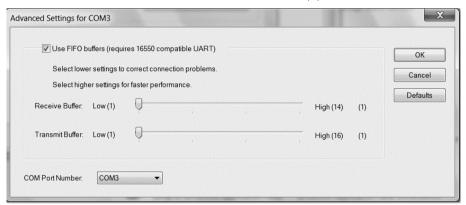

7. Click **OK** to close out. Close all screens and then reboot.

Updating the Electronic Device Description (EDD)

You can locate the EDD in the SIMATIC PDM Device Library under **Devices** \rightarrow **Modbus** \rightarrow **Sensors** \rightarrow **Flow** \rightarrow **Coriolis** \rightarrow **Siemens AG** \rightarrow **SITRANS FC410**. Check the product page of our website at: www.siemens.com/FC410, under Downloads, to make sure you have the latest version of SIMATIC PDM, the most recent Service Pack (SP) and the most recent hot fix (HF).

Installing a new EDD:

- 1. Download the EDD from the product page of our website at: www.siemens.com/FC410 and save the files to your computer.
- 2. Extract the zipped file to an easily accessed location.
- 3. Launch the SIMATIC PDM Device Integration Manager, browse to the unzipped EDD file and select it.

6.7 Adding device to communication network

Before setting the parameters, it is necessary to configure the FC410 project in PDM.

- 1. Add the device to SIMATIC Modbus network:
 - Select File → New
 Type in a project name, for example FC410 commissioning.
 - Go to View and select Process Device Network view.
 - Right-click on the typed in *Project name* and select Insert New Object → Networks.
 - Right-click on Networks and Insert New Object → Communication Network.
 - Click on Assign Device Type and select Modbus Network.
 Click OK two times. Your PC is now added to the Modbus Network.
 - Right-click Modbus Network and select Insert New Object → Object.
 - Click on Assign Device Type, and select Devices → Modbus → Sensors → Flow →
 Coriolis → SIEMENS AG → SITRANS FC410
 Click OK two times.

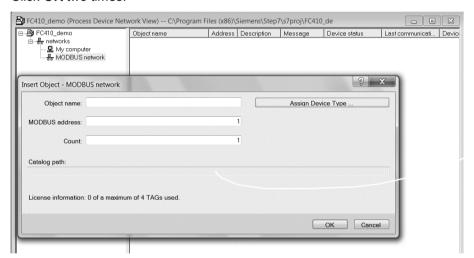


Image 6-1 Assigning Modbus device to network

- 2. Set up the communication parameters for SIMATIC Modbus network:
 - Select Networks → My computer, right-click on COM Port Interface and select Object Properties.
 - Select the Communication tab and configure the communication parameters. FC410 default settings are:
 - Transmission rate: 19200 baud
 - Parity: even

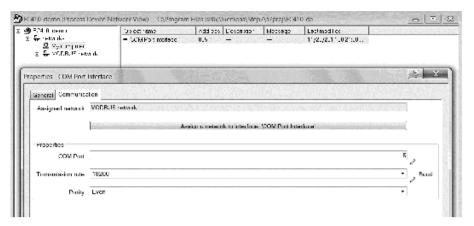


Image 6-2 Modbus net object properties

- Click OK.
- 3. Set up the COM interface:
 - Select Modbus Networks.
 - Right-click on the object name SITRANS FC410 and select Object Properties.
 - Select the Communication tab and configure the Modbus address.

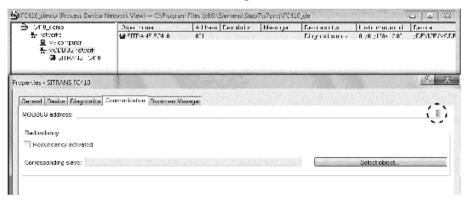


Image 6-3 Set the Modbus address

- Click OK.

6.8 Configuring a new device

Note

Clicking on **Cancel** during an upload from device to SIMATIC PDM will result in some parameters NOT being updated.

6.9 Wizard - Quick Start via PDM

- 1. Check that you have the most recent EDD, and if necessary update it, see Updating the Electronic Device Description (EDD) in Initial setup (Page 52).
- 2. Launch SIMATIC Manager.
- 3. Right-click on SITRANS FC410 and select Open Object to open SIMATIC PDM.
- 4. Click on **Device** and select **Upload to PG/PC Wizard...** to configure the device.

See also

Wizard - Quick Start via PDM (Page 56)

6.9 Wizard - Quick Start via PDM

The graphic Quick Start Wizard provides an easy 5-step procedure that configures the device for a simple application.

Please consult the SIMATIC PDM operating instructions or online help for details on using SIMATIC PDM.

Access level control

The parameters are protected against changes by access level control. To gain access, select **Access Management** from the device menu, select **User** and enter the PIN code.


The default user PIN code is 2457.

Quick start

Note

- The Quick Start wizard settings are inter-related and changes apply only after you click on **Apply and Transfer** at the end of step 5 to save settings offline and transfer them to the device.
- Do not use the Quick Start Wizard to modify individual parameters.
- Click on **Back** to return and revise settings or **Cancel** to exit the Quick Start.

Launch SIMATIC PDM, open the menu **Device** → **Wizard** - **Quick Start**..., and follow steps 1 to 5.

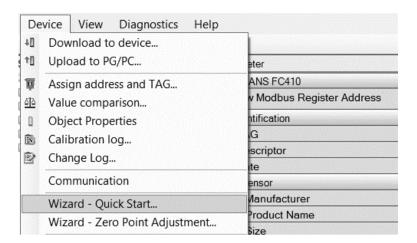

Step 1 - Identification

Note

The layout of the dialog boxes shown may vary according to the resolution setting for your computer monitor. The recommended resolution is 1280 x 960.

- 1. Click on **Read Data from Device** to upload Quick Start parameter settings from the device to the PC/PG and ensure PDM is synchronized with the device.
- 2. Click on **Next** to accept the default values. (**Descriptor**, **Message**, and **Date** fields can be left blank.)

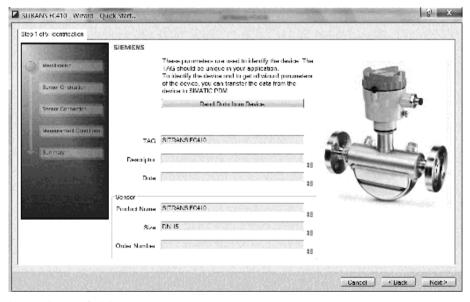


Image 6-4 Quick start step 1

Step 2 - Sensor orientation

Step 2 shows an overview of the various recommended installation orientations depending on the application.

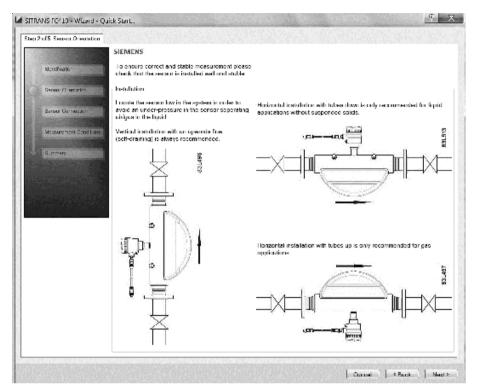


Image 6-5 Quick start step 2

Step 3 - Sensor connection

An FC410 can be ordered with M12 connection or with terminated cable (for example conduit connections).

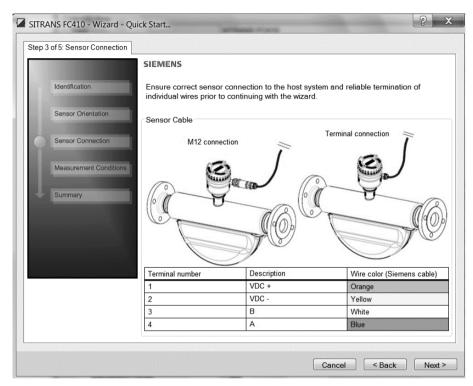


Image 6-6 Quick start step 3

Step 4 - Measurement conditions

Configure the measurement conditions for the selected process variables. Change **Flow Direction** if necessary. Units are local in PDM.

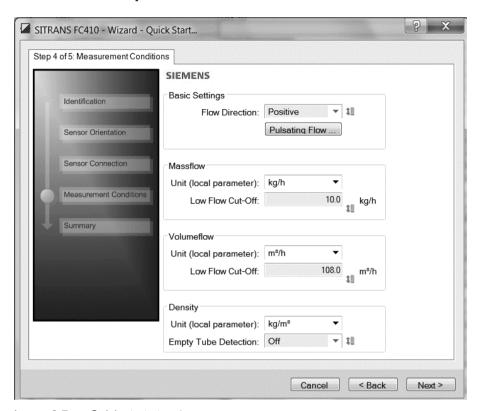


Image 6-7 Quick start step 4

Reduce the sensitivity of the flow measurement signal by clicking on the **Pulsating Flow** button and selecting the appropriate filter.

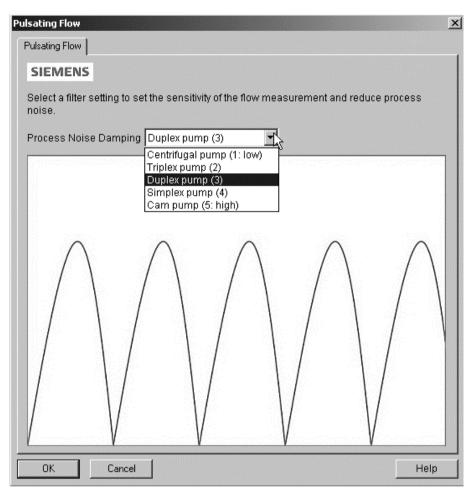


Image 6-8 Filter setting selection

Step 5 - Summary

Check parameter settings, and click on **Back** to return and revise values, **Apply** to save settings offline, or **Apply and Transfer** to save settings offline and transfer them to the device.

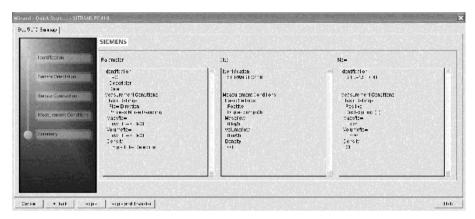


Image 6-9 Quick start step 5


The message Quick Start was successful will appear. Click on OK.

See also


Configuring a new device (Page 55)

6.10 Wizard - Zero Point adjustment

Open the menu **Device** → **Wizard** → **Zero Point Adjustment**.

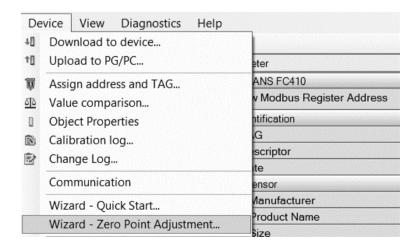


Select Auto. Click on Next.

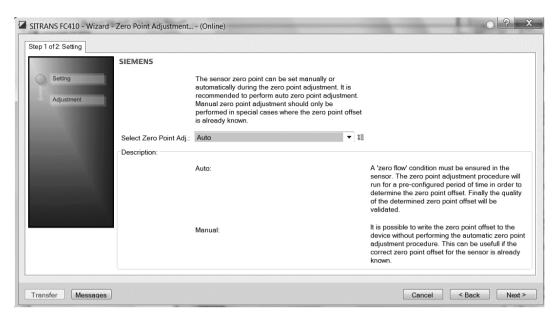

It is recommended to use the default settings. Change the **Zero Point Adjustments Settings**, if necessary.

Click on Auto Zero Point Adjustment.

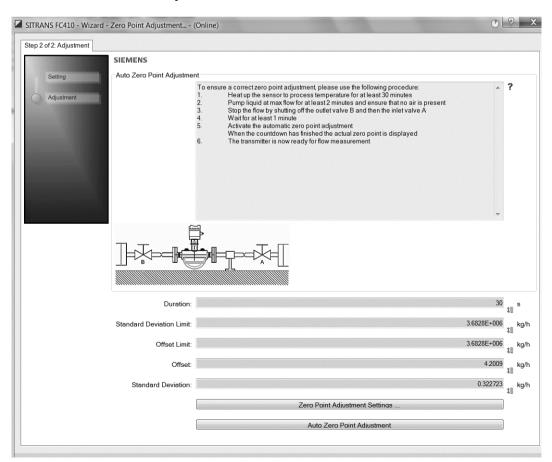

6.11 Changing parameter settings using SIMATIC PDM


Note

For a complete list of parameters, see the Modbus addressing model (Page 117).

Clicking on **Cancel** during an upload from device to SIMATIC PDM will result in some parameters NOT being updated.


Many parameters are accessed via the online menus in PDM, see Parameters accessed via drop-down menus (Page 64) for the others.

- 1. Launch SIMATIC PDM, connect to the appropriate device and upload data.
- 2. Adjust parameter values in the parameter value field then click on **Enter**. The status fields read **Changed**.
- 3. Open the **Device** menu, click on **Download to device**, then use **File** → **Save** to save settings offline. The status fields are cleared.

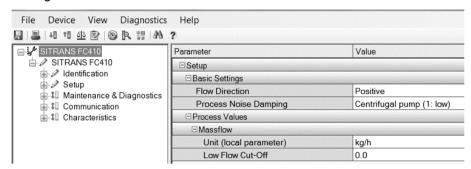

6.12 Parameters accessed via drop-down menus

Click on **Device** or **View** to open the associated drop-down menus.

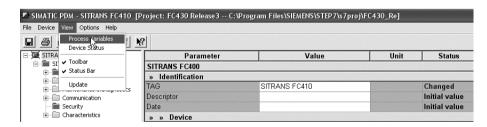

Drop-down menus

Table 6- 1 Device menus

| Device menus | Description |
|--------------------------------|--|
| Communication Path | Shows the communication interface (Modbus RTU) |
| Download to Device | Downloads all writable parameters to the device |
| Upload to PC/PG | Uploads all parameters from the device to the parameter table |
| Update Diagnostic Status | Reads current diagnostic status from the device and updates the diagnostic status icon |
| Communication | Sets communication parameters, for example baud rate |
| Wizard - Quick Start | Guide for a quick commissioning |
| Wizard - Zero Point Adjustment | Guide for zero point adjustment (automatic and manual) |
| Totalizer (online dialog) | Controlling massflow totalizer |
| Maintenance (online dialog) | Setup of maintenance functions |
| Simulation (online dialog) | Simulation of process values |
| Access Management | Possibility to upgrade access level from User to Expert and to change PIN code for Expert level |

Table 6- 2 View menus

| View menus | Description |
|-----------------------------------|---|
| Process Variables (online dialog) | Shows all process values |
| Device Diagnostic (online dialog) | Shows all diagnostics information (alarms and diagnostics parameters) |
| Toolbar (online dialog) | Shows/hides the toolbar |
| Status Bar | Shows/hides the status bar |
| Update | Updates the content of the active window |

6.13 Zero point adjustment

The flowmeter system is optimized through a zero point adjustment.

Performing a zero point adjustment

Note

Preconditions

Before a zero point adjustment is initiated, the pipe must be flushed, filled and at an absolute flowrate of zero preferably also at operating pressure and temperature.

6.13 Zero point adjustment

1. Flush out the flowmeter until a homogenous flow is established and the tubes completely filled.


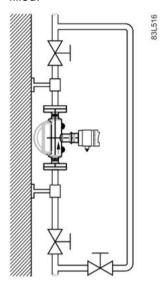


Image 6-10 Best practice zero point adjustment with a by-pass line and two shut-off devices

- 2. Establish zero flow for example by closing the shut off-valves.
- 3. Wait 1 to 2 minutes, for the system to settle, and then perform zero adjustment as described in the following steps.
- 4. Select **Device** → **Wizard** → **Zero Point Adjustment...** from the main menu of SIMATIC PDM to perform an automatic zero point adjustment.

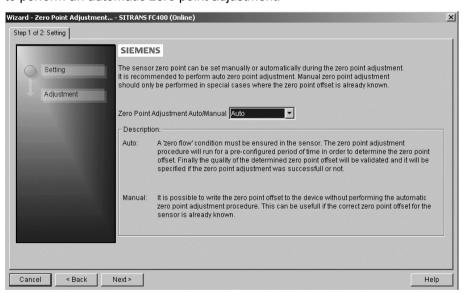

5. Click Next and then Auto Zero Point Adjust.

- 6. During the process a progress bar is visible.
- 7. At the end of the zero adjustment, the outcome is displayed as an offset and a standard deviation.

Note

If you get an error message after the zero point adjustment, refer to Alarms and system messages (Page 79).

The system is now ready for normal operation.

6.14 Process variables

- 1. To compare outputs in real time select **View** → **Process Variables** to see all process values, totalizers and loop current.
- 2. Verify that the process values show the expected values.

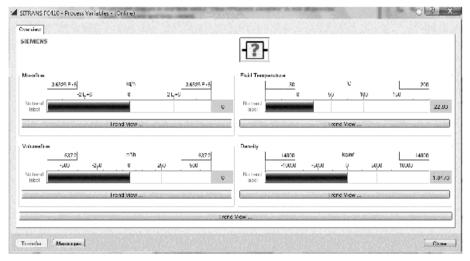


Image 6-11 Process variables

Trend view

Open the menu View \rightarrow Process Variables and click on one of the Trend View buttons to monitor the trend of one or all process values available at each tab.

6.14 Process variables

Functions

In the following the main functionalities of the device are described in detail.

For overview of all functions and parameters, refer to Modbus holding registers (Page 117).

7.1 Process values

According to standard practice with serial communication the Modbus RTU signal reports primary process values and error status strictly with SI units¹⁾ – kilogram, meter, second and degree Celsius.

1) 1 kg/s of water flow equals 0.001 m³/s of volume flow, and 3600 kg/h.

The process values are updated every 10 ms (100 Hz update rate) synchronous with the DSP update cycle.

Process value parameters

The process values are:

- Massflow (MassflowValue) [kg/s]
- Volumeflow (VolumeflowValue) [m³/s]
- Density (Density) [kg/m³]
- Process media temperature (FlowMediaTemp) [°C]

7.2 Zero point adjustment

In the following the automatic zero point adjustment function is described. For further details, see Zero point adjustment.

Note

Preconditions

Before a zero point adjustment is initiated, the pipe must be flushed, filled and at an absolute flowrate of zero preferably also at operating pressure and temperature. Refer to appendix Zero point adjustment (Page 141) for more details.

Note

Change of parameters during zero point adjustment

Do not change any other parameter during the zero point adjustment procedure.

7.2 Zero point adjustment

Automatic zero point adjustment

The device measures and calculates the correct zero point automatically.

The automatic zero point adjustment of the flowmeter is set by the following parameters:

- Duration (Modbus address 2135)
- Start Zero Point Adjustment (Modbus address 2180)

When zero adjust is initiated by selecting **Start Zero Point Adjustment**, the massflow values are acquired and totalized for the configured period (Duration). The default zero point adjustment period (30 s.) is normally sufficient for a stable zero point measurement.

Note

Extremely low flow quantity

If the flow quantity is extremely small, extremely precise measurement is necessary. In this case, a long zero point adjustment period can be selected for improved zero point adjustment.

Zero point calculation

During zero point adjustment, an average value is automatically calculated using the following formula:

Zero Point Offset Value

Average of N flow values

$$\overline{x} \equiv \frac{\sum_{i=1}^{N} x_i}{N}$$

 \boldsymbol{x}_i is an instantaneous flow value sampled in the time domain

N = Number of samples during zero point adjustment

The offset value must be within the determined **Zero Point Offset Limit** (Modbus address 2140).

Note

Exceeded zero point offset limit

If the offset value is greater than the configured limit, proceed as follows:

- Check that the tube is completely filled and that the flowrate is absolute zero.
- Check the validity of the configured zero point offset limit.
- Repeat the zero point adjustment.

Zero point standard deviation

After completion of the procedure, the standard deviation is calculated in accordance with the following formula:

Zero Point Standard Deviation

Standard deviation of N values

$$s = \sqrt{\frac{\sum_{i=1}^{N} (x_i - \overline{x})^2}{N - 1}} = \sqrt{\frac{-N\overline{x}^2 + \sum_{i=1}^{N} x_i^2}{N - 1}}$$

The standard deviation contains important feedback on the homogeneity of the fluid, for example on the presence of bubbles or particles.

The standard deviation must be within the determined **Standard Deviation Limit** (Modbus address 2138).

Note

Exceeded standard deviation limit

If the standard deviation is greater than the configured limit, proceed as follows:

- Check that the tube is completely filled and that the flow rate is absolute zero.
- Check that the installation is vibration-free.
- Check the validity of the configured standard deviation limit in parameter 2.6.4 Standard Deviation Limit.
- · Repeat the zero point adjustment.

Successful automatic zero point adjustment

If the new zero point offset value is valid, it is automatically stored as the new zero point for the sensor. It remains stored in the case of a power failure.

Manual zero point adjustment

In case an automatic zero point adjustment cannot be performed, it is possible to do a manual zero point adjustment by entering the zero point offset value.

- 1. Select Modbus address 2132 **Zero Point Adjustment** and set the value to 1 = **Manual Zero Point Adjustment**.
- 2. Select Modbus address 2133 **Manual Zero Point Offset** and enter the desired offset value.

7.3 Low flow cut-off

In certain applications, as for instance batching applications, no flow signals under a certain flow level are desired. In these applications, the flow signal can be forced to zero, when the flow is lower than a predefined flow value (Low Flow Cut-Off).

7.4 Empty tube monitoring

SITRANS FC410 provides two parameters for setting the low flow cut-off:

- Low Mass Flow Cut-Off (Modbus address 2125)
- Low Volume Flow Cut-Off (Modbus address 2170)

7.4 Empty tube monitoring

The empty tube monitoring function uses the process density for detecting an empty tube. Use of this function is recommended for all standard applications.

Note

Gas applications

Deactivate the empty tube monitoring function.

Empty tube monitoring parameters

Two parameters for setting the empty tube monitoring function are available:

- Empty Tube Detection (Modbus address 2129)
- Empty Tube Limit (Modbus address 2127)

The empty tube monitoring is activated via the Empty Tube Detection parameter. When the empty tube monitoring function is on, the massflow / volumeflow value is forced to zero if the tube is empty.

The tube is defined as empty, if the measured density value is lower than the value defined via the Empty Tube Limit parameter.

Note

Process media density

Risk of unintentionally forcing flow values to zero, if the difference between the empty tube limit density value and the density of the process media is not sufficient.

 Ensure sufficient difference between the empty tube limit density value and the process media density

7.5 Process noise damping

Noise damping function

The dynamic sensitivity of the flow measurement signal to rapid changes in process flows can be reduced by use of the process noise damping function. The function is typically used in environment with:

- Strongly pulsating flow
- Changing pump speeds
- Large pressure variations

Process noise damping settings

Reduce interfering process noise by increasing the setting of the parameter **Process Noise Damping** (Modbus address 2130).

- Centrifugal pump (1: low)
- Triplex pump (2)
- Duplex pump (3)
- Simplex pump (4)
- Cam pump (5: high)

The default value is **Duplex pump**. The damping affects all functions and outputs of the sensor.

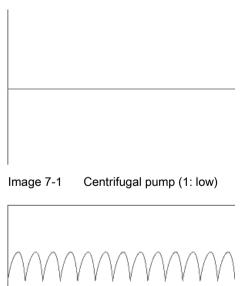


Image 7-2 Triplex pump (2)

7.6 Totalizer

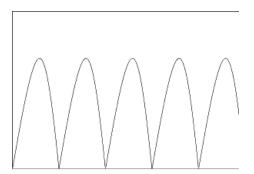


Image 7-3 Duplex pump (3; default setting)

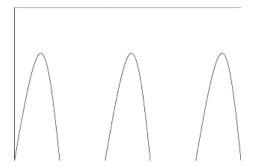


Image 7-4 Simplex pump (4)

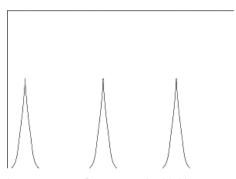


Image 7-5 Cam pump (5: high)

Note

Increased reaction time

The reaction time of the sensor increases when the process noise is damped.

7.6 Totalizer

Totalizer function

The device has one totalizer function that can be used to totalize the massflow process value.

The totalizer may be paused, resumed or reset:

- Pause (Modbus address 2613): the totalizer holds the last value before the failure occurred
- Resume (Modbus address 2614): the totalizer continues counting the actual measured value
- Reset (Modbus address 2612): the totalizer continues counting based on the last input value (for example massflow) before the failure occurred.

Note

The totalizer is reset on power failure.

7.7 Access management

All parameters may be viewed, but some are protected against changes by access level control.

The Access Management menu makes it possible to gain access to PIN code protected parameters and to change PIN codes.



Image 7-6 Access Management menu

7.8 Simulation

The access levels are:

Read Only
 Allows no configuration. The user is only able to view the parameter values. No PIN code is required.

User

Allows configuration and service of all parameters except calibration parameters. Default PIN code is 2457.

Note

Auto Log Off function

The access level will be set to Read Only mode if the device is powered off

7.8 Simulation

Simulation is used for testing purposes, typically for checking that the readings of the control system are correct.

Process value simulation

The following process values can be simulated:

- Massflow (Modbus address 2764)
- Density (Modbus address 2766)
- Process Media Temperature (Modbus address 2768)
- Frame Temperature (Modbus address 2770)
- Volumeflow (Modbus address 2772)

The simulation can be activated through SIMATIC PDM in the menu **Device** → **Simulation** → **Process Variables**.

7.9 Changing Modbus communication settings

Changing communication parameters, for example **Baud Rate**, **Modbus Parity Framing** or **Bus Address** effects the Modbus communication as follows:

- The new settings have effect only after a reset, either by restarting the device or writing the value 1 to Modbus address 600 Restart communication.
- The new settings will not have effect until the Modbus driver has responded to any ongoing Modbus request.

NOTICE

Setting addresses in a multidrop network

It is recommended NOT to use the default address in a multi-drop network. When setting device addresses, make sure that each device has a unique address. Replication of addresses may cause abnormal behavior of the entire serial bus and make the master unable to communicate with all slaves on the bus.

7.10 Float transmission

The Float Byte Order function ensures that the master and slave use the same sequence of the bytes when transmitting float values. This enables the user to configure the FC410 using the configuration tool, SIMATIC PDM, and operate the device with all types of PLCs without reprogramming the PLC. The transmission order is configured by setting the parameter **Byte Order** in the submenu **Device** → **Communication**.

Note

The command **Restart Communication** must be executed to activate the new byte order setting.

7.10 Float transmission

This table shows the different options for setting the transmission method:

| Selection | Sequence | | | |
|-----------------|------------|------------|------------|------------|
| | 1st | 2nd | 3rd | 4th |
| 1 - 0 - 3 - 2 | Byte 1 | Byte 0 | Byte 3 | Byte 2 |
| | (MMMMMMM) | (MMMMMMM) | (SEEEEEEE) | (EMMMMMMM) |
| 0 - 1 - 2 - 3 | Byte 0 | Byte 1 | Byte 2 | Byte 3 |
| | (MMMMMMM) | (MMMMMMM) | (EMMMMMMM) | (SEEEEEEE) |
| 2 - 3 - 0 - 1 | Byte 2 | Byte 3 | Byte 0 | Byte 1 |
| | (EMMMMMMM) | (SEEEEEEE) | (MMMMMMM) | (MMMMMMM) |
| 3 - 2 - 1 - 0 * | Byte 3 | Byte 2 | Byte 1 | Byte 0 |
| | (SEEEEEE) | (EMMMMMMM) | (MMMMMMMM) | (MMMMMMM) |

^{* =} Factory setting

S = Sign

E = Exponent

M = Mantissa

NOTICE

Change of float byte order

If the float byte order is changed by use of PDM to anything other than default, all float values shown in PDM are wrong.

Alarms and system messages

8.1 Alarm messages

In the following tables the bits for alarm group 1 and alarm group 2 can be found along with possible causes and directions for corrective action.

Alarm group 1 (Modbus address 3012)

| Bit | Diagnostic | Action |
|----------------------|----------------------------------|--|
| 4 5 | Sensor supply volt. out of range | Contact Siemens customer support |
| 6 7 8 9 | Temperature measurement fault | Contact Siemens customer support |
| 10 11 12 13 | Flow values not valid | Can be due to problems with measured fluid or hardware malfunction. If the failure continues then contact Siemens customer support |
| 14 | Invalid calibration data | Contact Siemens customer support for recalibration |
| 15 | Invalid compensation data | Contact Siemens customer support |
| 17 18 | Malfunction in Pickup Amplitude | Contact Siemens customer support |
| 23 24 25 | Malfunction in sensor driver | Contact Siemens customer support |
| 26 | Unstable driver oscillation | Contact Siemens customer support |
| 27 | Massflow out of specification | Reduce the flow. If the failure continues then contact Siemens customer support |
| 28 | Volumeflow out of specification | Reduce the flow. If the failure continues then contact Siemens customer support |
| 29 | Density out of specification | Contact Siemens customer support |
| 30 | Fluid temp. below limit | Increase the fluid temperature. If the failure continues then contact Siemens customer support |
| 31 | Fluid temp. above limit | Reduce the fluid temperature. If the failure continues then contact Siemens customer support |

8.1 Alarm messages

Alarm group 2 (Modbus address 3014)

| Bit | Diagnostic | Action |
|--------------------------------|---|---|
| 0 | Frame temp. below limit | Increase fluid temperature and check that ambient temperature is within specified limits. If the failure continues then contact Siemens customer support |
| 1 | Frame temp. above limit | Reduce fluid temperature and check that ambient temperature is within specified limits. If the failure continues then contact Siemens customer support |
| 2 | Standard Deviation above limit (shown for only 2 seconds) | Measurement continues with values from last successful zero point adjustment. Improve conditions for automatic zero point adjustment and repeat adjustment. |
| 3 | Zero Point Offset above limit (shown for only 2 seconds) | Measurement continues with values from last successful zero point adjustment. Improve conditions for automatic zero point adjustment and repeat adjustment. |
| 4 | Zero point adjustment failed (shown for only 2 seconds) | Measurement continues with values from last successful zero point adjustment. Improve conditions for automatic zero point adjustment and repeat adjustment. |
| 5 | Empty Tube Limit exceeded | Make sure that the sensor is filled with liquid and that the liquid density is within the specified Empty Tube Limit |
| 6 | The sensor is partially filled | Make sure that the sensor is filled with liquid |
| 7 | Parameter storage malfunction | Turn off the power, wait 5 seconds and turn on the power again. If the failure continues then contact Siemens customer support |
| 8 9 10 11 12 13 | Internal error in sensor | Contact Siemens customer support |
| 14 | Unstable measurement condition | Check if air is present in the liquid and that the flowmeter is operated within its specifications |
| 15 | Auto filtering | Check that the flowmeter is operated within its specifications. Check other alarms to rule out HW malfunction |
| 23 | The sensor is stabilizing | Turn off the power, wait 5 seconds and turn on the power again. If the failure continues then contact Siemens customer support. |

Service and maintenance

9.1 Maintenance

The device is maintenance-free. However, a periodic inspection according to pertinent directives and regulations must be carried out.

An inspection can include check of:

- Ambient conditions
- Seal integrity of the process connections, cable entries, and cover screws
- Reliability of power supply, lightning protection, and grounds

NOTICE

Repair and service must be carried out by Siemens authorized personnel only.

Note

Siemens defines flow sensors as non-repairable products.

9.2 Maintenance information parameters

The basic maintenance parameters are:

- Operating Time Total (Since first power-up)
- Operating Time Since Power Up (Since latest power-up)

9.3 Service information

Service information is information about the condition of the device used for diagnostics and service purposes.

Service information parameters

The basic service information parameters are:

- Driver Current
- Pickup 1 Amplitude
- Pickup 2 Amplitude
- Sensor Frequency
- Frame Temperature

81

9.4 Recalibration

- Process Media Temperature
- Zero Point Adjustment Auto/Manual
- Zero Point Offset Value
- Manual Zero Point
- Zero Point Standard Deviation

9.4 Recalibration

Siemens A/S, Flow Instruments offers to recalibrate the sensor at our works in Denmark. The following calibration types are offered as standard according to configuration:

- Standard calibration
- Density calibration

Note

SensorFlash

For sensor recalibration the SensorFlash memory unit must always be returned with the sensor.

9.5 Technical support

If you have any technical questions about the device described in these Operating Instructions and do not find the right answers, you can contact Customer Support:

- Via the Internet using the Support Request: Support request (http://www.siemens.com/automation/support-request)
- Via Phone:

- Europe: +49 (0)911 895 7222

- America: +1 423 262 5710

- Asia-Pacific: +86 10 6475 7575

Further information about our technical support is available on the Internet at Local contact person (http://www.automation.siemens.com/partner)

Service & Support on the Internet

In addition to our documentation, we offer a comprehensive knowledge base online on the Internet at:

Service and support (http://www.siemens.com/automation/service&support)

There you will find:

- The latest product information, FAQs, downloads, tips and tricks.
- Our newsletter, providing you with the latest information about your products.
- Our bulletin board, where users and specialists share their knowledge worldwide.
- You can find your local contact partner for Industry Automation and Drives Technologies in our partner database.
- Information about field service, repairs, spare parts and lots more under Services.

Additional Support

If you have additional questions about the device, please contact your local Siemens representative and offices at:

Technical support (http://support.automation.siemens.com/WW/view/en/16604318)

9.6 Transportation and storage

To guarantee sufficient protection during transport and storage, observe the following:

- Keep the original packaging for subsequent transportation.
- Devices/replacement parts should be returned in their original packaging.
- If the original packaging is no longer available, ensure that all shipments are properly
 packaged to provide sufficient protection during transport. Siemens cannot assume
 liability for any costs associated with transportation damages.



Insufficient protection during storage

The packaging only provides limited protection against moisture and infiltration.

Provide additional packaging as necessary.

Special conditions for storage and transportation of the device are listed in Technical data (Page 91).

9.7 Device disposal



Devices identified by this symbol may not be disposed of in the municipal waste disposal services under observance of the Directive 2002/96/EC on waste electronic and electrical equipment (WEEE).

They can be returned to the supplier within the EC or to a locally approved disposal service. Observe the specific regulations valid in your country.

9.8 Maintenance work



CAUTION

Hot surfaces

Danger of burns during maintenance work on parts having surface temperatures exceeding 70 °C (158 °F).

- Take corresponding protective measures, for example by wearing protective gloves.
- After carrying out maintenance, remount touch protection measures.



WARNING

Humid environment

Danger of electric shock.

- Avoid working on the device when it is energized.
- If working on an energized device is necessary, ensure that the environment is dry.
- Make sure when carrying out cleaning and maintenance work that no moisture penetrates the inside of the device.



CAUTION

Dangerous voltage at open device

Danger of electric shock when the enclosure is opened or enclosure parts are removed.

- Before you open the enclosure or remove enclosure parts, de-energize the device.
- If maintenance measures in an energized state are necessary, observe the particular precautionary measures. Have maintenance work carried out by qualified personnel.



WARNING

Hot, toxic or corrosive process media

Danger of injury during maintenance work.

When working on the process connection, hot, toxic or corrosive process media could be released.

- As long as the device is under pressure, do not loosen process connections and do not remove any parts that are pressurized.
- Before opening or removing the device ensure that process media cannot be released.

Troubleshooting/FAQs 10

10.1 Diagnosing with PDM

SIMATIC PDM is a suitable tool for diagnosing the device.

You can use SIMATIC PDM to read all available parameters to a table for analyzing offline, view online/actual process values and online/actual diagnostic information.

Requirements

The following procedure must be completed before diagnosing:

- Installation of PDM and PDM device driver
- Connection of Modbus interface.

Refer to Commissioning (Page 51).

Diagnosing with PDM

Online process values are available under menu View -> Process Values.

Online diagnostic information is available under menu View → Device Status.

10.2 Troubleshooting

Incorrect and unstable measurements, especially at low flows, are typically a result of an unstable zero point due to:

- Incorrect installation
- Bubbles in the liquid
- Vibrations/Cross talk
- · Solid particles settling in the liquid

In the following a 4-step guide to troubleshooting is provided:

| Step 1 | Preliminary application inspection |
|--------|------------------------------------|
| Step 2 | Zero point adjustment |
| Step 3 | Measurement error calculation |
| Step 4 | Application improvement |

The guide will enable you to trace the reason for incorrect measurements and to improve the application.

Step 1: Inspecting the application

Ensure that:

- 1. The sensor is installed as described in Installing/mounting (Page 27).
- 2. The sensor is located in a vibration-free position. Vibrations can disturb the sensor and therefore cause measurement error.

Depending on application, you should furthermore ensure the following:

Liquid application

Ensure that the sensor is filled with liquid and liquid only.

Air or gas bubbles in the liquid cause instability and can result in measurement errors. Flush the pipe systems and the sensor for several minutes at maximum flowrate to remove any air bubbles which may be present.

Note

The liquid must be homogeneous in order to measure with high accuracy. If the liquid contains solid particles of greater density than the liquid, then these solids can settle, especially at low flow rates, which will cause instability in the sensor and lead to measurement errors.

For pastes or process fluids with suspended solids always orient the sensor vertically with flow in upward direction to maintain solids suspension.

Gas application

Ensure that the gas pressure/temperature conditions contain sufficient superheat to prevent dewing or precipitation. If the gas contains vapor or droplets then these may precipitate, causing instability.

Step 2: Performing a zero point adjustment

The second step in the troubleshooting procedure is to zero point adjust the device. For further information on zero point adjustment, see Commissioning (Page 51).

Step 3: Calculating the measurement error

The result of the zero point adjustment will show you if the zero point was set under good and stable conditions.

The lower the obtained value of the parameter **Zero Point Standard Deviation**, the lower is the achievable measuring error. For a well-installed flowmeter, the Zero Point Standard Deviation corresponds to the specified zero point stability for the sensor size, see Performance (Page 93).

The parameter **Zero Point Standard Deviation** is located in the **Maintenance & Diagnostics** menu in the SIMATIC PDM.

Calculating the measurement error

Given the Zero Point Standard Deviation, the error expected for different flow rates can be calculated, without performing time-consuming measurements. So using this formula, one can assess if the application can be used as—is, or whether to use more time improving the installation.

 $E = Z \times 100 \% / Qm$

Where:

E = measurement error in % of flowrate

Z = zero point standard deviation value in kg/h

Qm = current flowrate in (kg/h)

Example 1: Low flow application

- DN 15 sensor. The sensor's nominal flowrate is specified to 3700 kg/h
- Zero point error (Zero Point Standard Deviation) value is specified as 0.2 kg/h
- Flow: Min. 10 kg/h Max. 100 kg/h

After the zero point adjustment, the Zero Point Standard Deviation value 'Z' is read as 1 kg/h, that is 5 times greater than that specified for the sensor.

The error for a flowrate of 10 kg/h is estimated as:

• E = 1 kg/h x 100% / 10 kg/h = 10%.

For a flowrate of 100 kg/h the error is estimated as:

• E = 1 kg/h x 100% / 100 kg/h = 1%

For this application it is necessary to investigate more closely what the cause of the relatively high Zero Point Standard Deviation value is, in order to establish what needs to be done to improve the measurement accuracy.

Example 2: High flow application

DN 15 sensor. The sensor flowrate is specified as max. 3700 kg/h

- The zero point error/ Zero Point Standard Deviation value is specified as 0.2 kg/h
- Flowrate: Min. 1000 kg/h Max. 3000 kg/h

After the zero point adjustment, the Zero Point Standard Deviation value 'Z' is read as 1 kg/h, that is 5 times greater than specified for the sensor!

The error at a flowrate of 1000 kg/h is estimated as:

• E = 1 kg/h x 100% / 1000 kg/h = 0.1%

At a flowrate of 3000 kg/h the error is estimated to be:

• E = 1 kg/h x 100% / 3000 kg/h = 0.03%

In all of the above examples, the linearity error of $\pm 0.1\%$ must be added to the calculated error.

10.2 Troubleshooting

As can be seen, in this case it is not so important that the standard deviation is 1 kg/h. The error due to the zero point is only 0.1% for a flowrate of 1000 kg/h, and even less for a higher flowrate.

So for this installation with the given flowrate and zero point error (Zero Point Standard Deviation value), you should typically choose not to spend more time finding ways to improve the application.

See also

Maintenance & Diagnostics (Page 128)

Step 4: Improving the application

In the following it is described how to find the causes of a high Zero Point Standard Deviation and how to improve the installation.

Setting Low Flow Cut-Off

In order to see if the zero point becomes more stable when making changes / adjustments, the Low Mass Flow Cut-Off (MassFlowCutOff) must be set to 0.0%.

When Low Flow Cut-Off has been set, it is possible to see the instability directly from the massflow in the online window (View → Process Variables)

This information can be used to troubleshoot. For example, tightening the brackets which hold the sensor, or turning off the pump to check if vibrations from the pump are disturbing the sensor, etc.

Incorrect installation of the sensor

 Has the sensor been correctly installed, that is fastened to the floor / wall or frame with good mounting brackets as shown in the instructions?

Especially for low flowrates, that is flowrates less than 10% of the maximum capacity of the flow meter, it is important that the sensor is correctly and stably installed.

If the sensor is not correctly fixed in place, the zero point of the sensor will change, leading to measuring errors.

Try to tighten up the sensor brackets to see whether the flow instability is reduced.

Vibrations and cross talk

Vibrations in the pipe system are normally generated by pumps.

Typically, cross talk is generated by two sensors of identical size and positioned in close proximity in the same pipe, or installed on the same rail or frame.

Vibrations / cross talk have a greater or lesser effect upon the zero point stability and therefore also the measurement accuracy.

1. Check whether there are vibrations.

Turn off the pump and check whether the zero point stability improves, that is if the flowrate fluctuation in kg/h is reduced.

If the sensor is disturbed by vibration from the pump or by pressure pulsations, the

installation should be improved or the pump should be exchanged, for example to another type.

2. Check for cross talk.

Turn off the power to the other flow meter(s) and wait approximately 2 minutes, so the vibrating tubes in the sensor have stopped vibrating. Then check if the zero point stability has improved, that is that the fluctuation in kg/h has been reduced. If this is the case, the sensors disturb one another and the installation should be improved.

Air in the liquid

When air is present in the liquid, the zero point becomes unstable, which leads to a poor measurement accuracy.

Checking for air:

- Check the Driver Current (View → Device Diagnostics → Advanced Diagnostic)
- Check if the Driver Current varies more than ±1 mA. If this is the case, it is usually due to the presence of air or gas bubbles in the liquid.
- Increase the pressure in the sensor, creating a large back pressure upon the sensor by
 reducing the opening of the outlet valve or by increasing the pump pressure. Thereby the
 size of air bubbles inside the sensor will be minimized. If the Driver Current value
 increases and / or the stability of the Driver Current decreases, it is proof that the liquid
 contains air or gas bubbles.

Typical causes of air in the liquid

- The entry pipe and sensor have not been properly filled with liquid.
- The pump cavitates, the rotary speed of the pump is too high in relation to the supply of liquid to the pump.
- The flow rate in the pipe is too high, so components sitting in front of the flowmeter can cause cavitation.
- If there is a filter installed before the flowmeter, it may be close to blocking, which also can cause cavitation.
- Liquid flashes to vapor bubbles while passing through partially open valves or orifices.
- The piping on the pump suction side, pump gaskets or the pump itself is not tight. Air gets sucked into the system due to a low pressure on the pump suction side.

Solid particles in the liquid

If the solid particles in a liquid have a density higher than that of the liquid, they can precipitate inside the sensor and cause instability which leads to a measurement error.

If solid particles are present in the liquid, they must be homogeneously distributed and have similar density as the liquid. Otherwise they can cause relatively large measurement errors.

It is important that the sensor is installed such that solid particles can easily run out of the sensor.

- 1. Ensure that the sensor is installed vertically with an upwards flow.
- Check if solid particles are present in the liquid: Take a sample of the liquid, fill a glass and see if the solids precipitate.

10.2 Troubleshooting

Technical data

11.1 Function and system design

Table 11-1 Designated use

| Description | Specification | | |
|------------------------------|---|--|--|
| Measurement of process media | Fluid Group 1 (suitable for dangerous fluids) | | |
| | Aggregate state: Paste/light slurry, liquid and gas | | |

Table 11-2 Function and system design

| Description | Specification |
|---------------------|---|
| Measuring principle | Coriolis |
| System architecture | Point-to-point (1 Modbus RTU master - 1 FC410 slave) |
| | Multidrop (1 Modbus RTU master - up to 32 FC410 slaves per segment. Max 247 slaves) |

11.2 Process variables

Table 11-3 Process variables

| Description | Specification |
|--------------------------|-------------------|
| Primary process vari- | Massflow |
| ables | • Density |
| | Fluid temperature |
| Derived process variable | Volumeflow |

11.3 Modbus Communication Specification

Table 11-4 Modbus communication specification

| Description | Specification |
|--------------------------|--|
| Device type | Slave |
| Baud rates | • 9600 |
| | 19 200 (Factory setting) |
| | • 38 400 |
| | • 57 600 |
| | • 76 800 |
| | • 115 200 |
| Number of stations | Max. 31 per segment without repeaters |
| Device address range | 1 to 247 |
| Protocol | Modbus RTU |
| Electrical interface | RS 485, 2-wire |
| Connector type | M12 / Cable termination |
| Supported function codes | 3: read holding registers |
| | 16: write multiple registers |
| | 8: diagnostics |
| Broadcast | No 1) |
| Maximum cable length [m] | 600 meters (@ 115 200 bits/sec) |
| Standard | Modbus over serial line v 1.0 ²⁾ |
| Certification | one |
| Device Profile | None |

¹⁾: Standard restriction. The standard requires a LED indicator for visual diagnosis. This device does not support a LED indicator. Instead comprehensive display information is available. This device does not react to any Broadcast commands.

Note

Storage location

All Modbus settings of the device are stored in a non-volatile memory.

²⁾: According to the Specification & Implementation guide v. 1.0 available at the Modbus Organization website

11.4 Performance

Table 11-5 Reference conditions

| Description | Specification |
|------------------------------|---|
| Process media | Water |
| Process media temperature | 20 °C (68 °F) |
| Ambient temperature | 25 °C (77 °F) |
| Process media pressure | 2 bar (29 psi) |
| Process media density | 0.997 g/cm³ (62.2 lb/ft³) |
| Reference device orientation | Horizontal installation, tubes down, flow in direction of arrow on casing, see Installing/Mounting (Page 27). |

Table 11-6 Massflow accuracy

| Specificat | on | | |
|---------------|---|--|---|
| DN 15 | DN 25 | DN 50 | DN 80 |
| 20 (0.735) | 200 (7.35) | 750 (27.6) | 900 (33.1) |
| 3700 (136) | 11 500 (422.6) | 52 000 (1 911) | 136 000 (4 997) |
| 6 400 | 17 700 | 70 700 | 181 000 |
| (235.2) | (650.4) | (2598) | (6651) |
| ±0.2 | ±2.0 | ±7.5 | ±18.0 |
| | Ė | ±0.10 | |
| | 1 | £0.05 | |
| | DN 15 20 (0.735) 3700 (136) 6 400 (235.2) | 20 200 (0.735) (7.35) 3700 11 500 (136) (422.6) 6 400 17 700 (235.2) (650.4) ±0.2 ±2.0 | DN 15 DN 25 DN 50 20 200 750 (0.735) (7.35) (27.6) 3700 11 500 52 000 (136) (422.6) (1 911) 6 400 17 700 70 700 (235.2) (650.4) (2598) |

Table 11-7 Density accuracy

| Description | Specification |
|--|---------------|
| Density accuracy, standard calibration [kg/m³] | ±5 |
| Density accuracy, extended calibration [kg/m³] | ±0.5 |
| Density repeatability [kg/m³] | ±0.25 |
| Density, media pressure effect [(kg/m³)/Bar] | ±0.5 |
| Density, media temperature effect [(kg/m³)/°C] | ±0.1 |

Table 11-8 Media temperature accuracy

| Description | Specification |
|--------------------------------------|---------------|
| Media temperature accuracy [°C] | ±1 |
| Media temperature repeatability [°C] | ±0.25 |

11.5 Rated operating conditions

Table 11-9 Additional error by deviations from reference conditions

| Description | Specification | | | | | |
|---|---------------|----------|----------|----------|--|--|
| Sensor size | DN 15 | DN 25 | DN 50 | DN 80 | | |
| Effect of process pressure [% of actual flowrate per bar] | ±0.015 | ±0.015 | ±0.015 | ±0.015 | | |
| Effect of process pressure at nominal flowrate [(kg/h) per bar] | 0.56 | 1.73 | 7.8 | 20.4 | | |
| Effect of ambient temperature [% / K actual flowrate] | < ±0.003 | < ±0.003 | < ±0.003 | < ±0.003 | | |
| Display/Frequency/Pulse output: | | | | | | |
| Effect of power supply fluctuations | None | None | None | None | | |
| Effect of media temperature [(kg/h)/°C] | ±0.0875 | ±0.175 | ±1.05 | ±3.15 | | |

11.5 Rated operating conditions

Table 11- 10 Basic conditions

| Description | | Specification |
|---|-----------|---------------------------|
| Ambient temperature (°C[°F]) (Humidity max. 90 %) | Operation | -40 to +60 [-40 to +140] |
| Ambient temperature (°C[°F]) (Humidity max. 90 %) | Storage | -40 to +70 [-40 to +158] |
| Climate class | | DIN 60721-3-4 |
| Altitude | | Up to 2000 m (6560 ft) |
| Relative humidity [%] | | 95 |
| Bump resistance | | On request |
| Shock resistance | | On request |
| Thermal shock | | On request |
| Vibration resistance | | On request |
| EMC performance | · | EN/IEC 61326-1 (Industry) |

Table 11- 11 Cleaning and sterilizing conditions

| Description | Specification | |
|----------------------|---------------|--|
| Cleaning method | • CIP | |
| | • SIP | |
| Cleaning temperature | On request | |
| Cleaning frequency | On request | |
| Cleaning duration | On request | |

Table 11- 12 Process media conditions

| Description | Specification |
|---|--|
| Process media temperature (T _s) (min to max) [°C (F)] | -50 to +200 (-58 to 492) |
| Process media density (min to max) [kg/m³ (lb/ft³] | 1 to 5000 (0.06 to 312) |
| Process media gauge max pressure [bar (psi)] | 160 (2321) Hastelloy |
| | 100 (1450) st. steel |
| Pressure drop | See Pressure drop curves (Page 95) |
| Pressure temperature ratings | See Pressure - temperature ratings (Page 95) |

11.6 Pressure drop curves

The pressure drop is dimension-dependent and influenced by process media viscosity and density. Sensors with undersized process connections experience higher pressure drop due to reduction in inlet/outlet dimensions.

Note

Pressure drop information

Pressure drop information is available on request.

11.7 Pressure - temperature ratings

Pressure - temperature ratings are determined by process connection material and applicable standards. The tables below detail the allowed maximum process pressure for sensor variants with stainless steel and Hastelloy measuring tubes.

With two major exceptions, the pressure rating of the flow sensors is independent of the process medium temperature. Design rules for flange connections in both the EN1092-1 and ASME B16.5 standards dictate pressure derating with increasing temperature. The charts below show the effect of process medium temperature on the pressure ratings for the flanges within the product program.

11.7 Pressure - temperature ratings

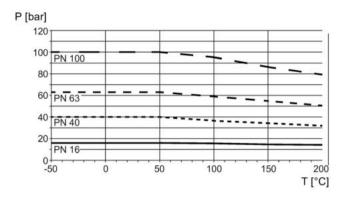


Image 11-1 Metric flange ratings, EN 1092-1 (P: Process pressure; T: Process temperature)

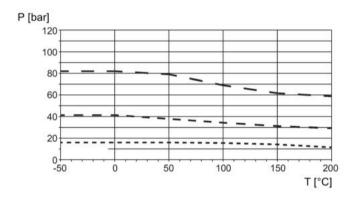


Image 11-2 ANSI flange ratings, ASME B16.5 (P: Process pressure; T: Process temperature)

11.7.1 Stainless steel sensors

Table 11- 13 EN1092-1 [bar]

| PN (bar) | Temperature TS (°C) | | | | | | | |
|----------|---------------------|-------|-------|-------|-------|-------|--|--|
| | -50 | 0 | 50 | 100 | 150 | 200 | | |
| 16 | 16.0 | 16.0 | 16.0 | 15.2 | 13.8 | 12.7 | | |
| 40 | 40.0 | 40.0 | 40.0 | 37.9 | 34.5 | 31.8 | | |
| 63 | 63.0 | 63.0 | 63.0 | 59.7 | 54.3 | 50.1 | | |
| 100 | 100.0 | 100.0 | 100.0 | 94.8 | 86.2 | 79.5 | | |
| 160 | 100.0 | 100.0 | 100.0 | 100.0 | 100.0 | 100.0 | | |

Table 11- 14 ISO228-G and ASME B1.20.1 NPT [bar]

| PN (bar) | Temperature TS (°C) | | | | | | | |
|----------|----------------------|-------|-------|-------|-------|-------|--|--|
| | -50 0 50 100 150 200 | | | | | | | |
| 100 | 100.0 | 100.0 | 100.0 | 100.0 | 100.0 | 100.0 | | |

Table 11- 15 ASME B16.5 [bar]

| Class / | | | Temp | erature TS (°C |) | | |
|-----------|------|------|------|----------------|------|------|--|
| Group | -50 | 0 | 50 | 100 | 150 | 200 | |
| 150 / 2.3 | 15.8 | 15.8 | 15.3 | 13.3 | 12.1 | 11.1 | |
| 300 / 2.3 | 41.3 | 41.3 | 39.8 | 34.8 | 31.4 | 29.0 | |
| 600 / 2.3 | 82.6 | 82.6 | 79.7 | 69.6 | 62.9 | 58.1 | |
| 900 / 2.3 | 100 | 100 | 100 | 100 | 94.2 | 87.5 | |

Table 11- 16 JIS [bar]

| PN (bar) | Temperature TS (°C) | | | | | | |
|----------|---------------------|-----|-----|-----|------|------|--|
| | -50 | 0 | 50 | 120 | 150 | 200 | |
| 10K | 14 | 14 | 14 | 14 | 13.4 | 12.4 | |
| 20K | 34 | 34 | 34 | 34 | 33.1 | 31.6 | |
| 40K | 68 | 68 | 68 | 68 | 66.2 | 63.2 | |
| 63K | 100 | 100 | 100 | 100 | 100 | 99 | |

Table 11- 17 DIN 11851 [bar]

| PN (bar) / DN | | Temperature TS (°C) | | | | | | |
|---------------|-----|---------------------|----|-----|-----|--|--|--|
| | -50 | 0 | 50 | 100 | 140 | | | |
| 25 / 50-100 | 25 | 25 | 25 | 25 | 25 | | | |
| 40 / 10-40 | 40 | 40 | 40 | 40 | 40 | | | |

Table 11- 18 DIN 32676 & ISO 2852 [bar]

| PN (bar) / DN | | Temperature TS (°C) | | | | | | |
|----------------|-----|---------------------|----|-----|-----|--|--|--|
| | -50 | 0 | 50 | 100 | 140 | | | |
| 10 / 85-219.1 | 10 | 10 | 10 | 10 | 10 | | | |
| 16 / 48.3-76.2 | 16 | 16 | 16 | 16 | 16 | | | |
| 25 / 6.35-42.4 | 25 | 25 | 25 | 25 | 25 | | | |

Table 11- 19 DIN 11864 & ISO 2853 [bar]

| PN (bar) / DN | | Temperature TS (°C) | | | | | | |
|---------------|-----|---------------------|----|-----|-----|--|--|--|
| | -50 | 0 | 50 | 100 | 140 | | | |
| 25 / 50-100 | 25 | 25 | 25 | 25 | 25 | | | |
| 40 / 10-40 | 40 | 40 | 40 | 40 | 40 | | | |

Table 11- 20 Swagelok SS-12-VCO-3 socket weld with SS-12-VCO-4 nut [bar]

| PN (bar) | | Temperature TS (°C) | | | | | | | |
|----------|----------------------|---------------------|-------|-------|-------|-------|--|--|--|
| | -50 0 50 100 150 200 | | | | | | | | |
| 100 | 100.0 | 100.0 | 100.0 | 100.0 | 100.0 | 100.0 | | | |

11.7 Pressure - temperature ratings

Note

Test pressure

Maximum allowable test pressure (MATP) for the flowmeter and process connection is 1.5 times the nominal pressure up to 150 bar (2176 psi).

11.7.2 Hastelloy sensors

Table 11- 21 EN1092-1 [bar]

| PN (bar) | | | Tempe | erature TS (°C) | | |
|----------|-------|-------|-------|-----------------|-------|-------|
| | -50 | 0 | 50 | 100 | 150 | 200 |
| 16 | 16.0 | 16.0 | 16.0 | 16.0 | 16.0 | 16.0 |
| 40 | 40.0 | 40.0 | 40.0 | 40.0 | 40.0 | 40.0 |
| 63 | 63.0 | 63.0 | 63.0 | 63.0 | 63.0 | 63.0 |
| 100 | 100.0 | 100.0 | 100.0 | 100.0 | 100.0 | 100.0 |
| 160 | 160.0 | 160.0 | 153.0 | 145.0 | 134.0 | 125.0 |

Table 11- 22 ISO228-G and ASME B1.20.1 NPT [bar]

| PN (bar) | Temperature TS (°C) | | | | | |
|----------|---------------------|-------|-------|-------|-------|-------|
| | -50 | 0 | 50 | 100 | 150 | 200 |
| 100 | 100.0 | 100.0 | 100.0 | 100.0 | 100.0 | 100.0 |
| 160 | 160.0 | 160.0 | 153.0 | 145.0 | 134.0 | 125.0 |

Table 11-23 ASME B16.5 [bar]

| Class | Temperature TS (°C) | | | | | |
|-------|---------------------|-------|-------|-------|-------|-------|
| | -50 | 0 | 50 | 100 | 150 | 200 |
| 150 | 20.0 | 20 | 19.5 | 17.7 | 15.8 | 13.8 |
| 300 | 51.7 | 51.7 | 51.7 | 51.5 | 50.3 | 48.6 |
| 600 | 103.4 | 103.4 | 103.4 | 103.0 | 100.3 | 97.2 |
| 900 | 155.1 | 155.1 | 153.0 | 145.0 | 134.0 | 125.0 |

Table 11- 24 DIN 11851 [bar]

| PN (bar) / DN | | | Temperature | TS (°C) | | |
|---------------|-----|----|-------------|---------|-----|--|
| | -50 | 0 | 50 | 100 | 140 | |
| 25 / 50-100 | 25 | 25 | 25 | 25 | 25 | |
| 40 / 10-40 | 40 | 40 | 40 | 40 | 40 | |

11.8 Design

Table 11- 25 Design

| Description | Specification |
|-----------------------|--|
| Dimension and weight | See Dimensions and weight (Page 111) |
| Process connectors | EN1092-1 B1, PN16, PN40, PN63, PN100, PN160 |
| | EN1092-1 D (gasket groove), PN40, PN63, PN100, PN160 |
| | ISO 228-1 G * |
| | ASME B1.20.1 NPT * |
| | ASME B16.5, CI 150, CI 300, CI 600, CI 900 |
| | • DIN 11851 ** |
| | • DIN 32676 * |
| | DIN 11864-1A **, DIN 11864-2C (inch) **, DIN 11864-3A ** |
| | • ISO 2852 ** |
| | • ISO 2853 ** |
| | • JIS B 2220, 10K, 20K, 40K, 62K |
| Electrical connection | M12 connector with 4-wire cable |
| | Standard cable with polymer / brass / stain- less steel cable glands (metric or NPT) |
| | Armored cable with stainless steel armored cable glands (metric or NPT) |
| | Conduit entries (metric or NPT) |
| Material | |
| Measuring tubes | • AISI 316L / W1.4404 |
| | Hastelloy C22 / UNS N06022 |
| Process connectors | Standard: |
| | AISI 316L / W1.4435 or W1.4404 |
| | Hastelloy C22 / UNS N06022 |
| | Hygienic: |
| | AISI 316L / W1.4435 |
| Sensor enclosure | AISI 304 / W1.4301 |
| Transmitter enclosure | Aluminum with corrosion-resistant coating |
| Measuring tube design | Split flow through 2 parallel tubes with combined cross-section area 50% of the nominal pipe |
| | The measuring tubes are bent in a trapezoidal curve |

11.9 Power supply

| Description | Specification | | |
|----------------------------------|------------------------------|--|--|
| Measuring tube surface roughness | • Standard: 1.6 μm | | |
| | Hygienic: 0.8 μm | | |
| Self-draining design | Yes, when mounted vertically | | |

^{*:} Pressure ratings depend on sensor material

11.9 Power supply

Table 11-26 Power supply

| Description | Specification |
|-----------------------------|--|
| Supply Voltage [V] | 24 VDC +/- 20% for non-hazardous duty 24 VDC +0/-20% for flameproof installation |
| Reverse polarity protection | Yes |
| Power consumption | 1.1 W |

11.10 Basic electrical requirement for master system

Table 11-27 Power unit

| Description | Specification |
|--------------------------------------|--|
| Protection class | Class I (EN60950) |
| Galvanic isolation primary/secondary | SELV acc. to EN 60950 and EN 50178 or equivalent |
| Master/Receiver | Isolation 500 VAC |

^{**:} Pressure ratings depend on process connection dimension

11.11 Cables and cable entries

The following information applies to cables and cable glands supplied as accessories to the device.

Table 11-28 Power and signal cable, basic data

| Description | Specification |
|---|---|
| Number of conductors | 4 |
| Square area [mm²] | 0.326 (AWG 22/7) |
| Screen | Common shield for all 4 conductors |
| Outside color | Gray (RAL 7001) |
| External diameter [mm] | 6.5 |
| Maximum length | 600 m (1968 ft.) |
| Installation environment | Industrial including chemical processing plants |
| Insulation material | Special polyolefin |
| Halogen-free | Yes |
| RoHS compliant | Yes |
| Torsional strength | >3 million cycles at ± 180° on 200 mm |
| | Not adapted for garland mounting (festoon) |
| Permissible temperature range [°C (°F)] | -40 to +80 (-40 to +176) |
| Min. bending radius allowed | Single 5 X ø |

Table 11-29 Cable glands and entries

| Description | Specification |
|-------------|---|
| Glands | Material |
| | – Nylon ¹⁾ |
| | Brass/Ni plated |
| | Stainless steel AISI 316/1.4404 |
| | Cable cross section |
| | $ \varnothing$ 5 to 10 mm (0.20" to 0.39") |
| Entry | • 1 x M20 or 1 X NPT ½" for communication |

 $^{^{1)}}$: If operating temperature is below -20 °C (-4 °F), use Brass/Ni plated or stainless steel cable glands.

Note

For hygienic applications (3A & EHEDG) the cable glands and blind plugs must be made from corrosion resistant material like nickel brass, stainless steel or plastic. The exposed threads must be minimized when they are tightened up on the cable and they must have a seal (plastic or rubber) under the threads where they screw into the terminal housing or enclosure.

11.12 Installation torques

Table 11-30 Installation torques

| Description | Torque (Nm) |
|---|-------------|
| Pressure guard fittings | 80 |
| Pedestal lock screw cap | 10 |
| Cable gland to housing (Siemens supplied, metric) | 10 |

Note

NPT glands

When using NPT glands, user must take care when packing threads and installing cables that sufficient tightness is obtained to prevent ingress of moisture.

11.13 Certificates and approvals

Table 11-31 Certificates and approvals

| Description | Specification |
|-------------|---|
| ATEX | FC410 flowmeter (can be installed in Zone 1 for gas and Zone 20/21 for dust): Certificate: SIRA 11ATEX1341X Il 1/2 G 1D 2D |
| | For gas: Ex d ia IIC T* Ga/Gb Ex d IIC T* Ga/Gb (Ga/Gb: Zone 0 in pipe and Zone 1 in environment) |
| | For dust: Ex ta IIIC T* °C Da Ex tb IIIC T* °C Db (Zone 20 ("ta") process and ambient temperature limited in comparison with Zone 21 ("tb") |
| | $Ta = -40^{\circ}C \text{ to } +60^{\circ}C$ |
| | * Temperature class (dependent on the process temperature and the ambient temperature, see Special Conditions for Safe Use, Section 2.3) |

| Description | Specification |
|--------------------|---|
| IECEx | FC410 flowmeter (can be installed in Zone 1 for gas and Zone 20/21 for dust): Certificate: IECEx SIR 11.0149X |
| | For gas: Ex d ia IIC T* Ga/Gb Ex d IIC T* Ga/Gb (Ga/Gb: Zone 0 in pipe and Zone 1 in environment) |
| | For dust: Ex ta IIIC T* °C Da Ex tb IIIC T* °C Db (Zone 20 ("ta") process and ambient temperature limited in comparison with Zone 21 ("tb") (Ta = -40°C to +60°C) |
| | * Temperature class (dependent on the process temperature and the ambient temperature, see Conditions of Certification, Section 2.3) |
| EAC Ex | FC410 flowmeter / -40°C ≤ Tamb ≤ ** °C |
| | 1Ex d ia IIC T* Ga/Gb |
| | Ex ta IIIC T** °C Da |
| | Ex tb IIIC T** °C Db |
| FM | Class I, II, III Division 1 Groups A, B, C, D, E, F, G |
| | See Control drawing: A5E31205486A |
| Hygienic version | 3A |
| | EHEDG |
| | EC1935:2004 and 2023:2006 (food contact material: stainless steel) |
| Pressure equipment | 97/23/EC Pressure Equipment Directive (PED) |
| | Canadian Registration Number (CRN) |
| Marine approval | ABS - American Bureau of Shipping (USA) |
| | BV - Bureau Veritas (France) |
| | DNV - Det Norske Veritas (Norway) |
| | GL - Germanischer Lloyd (Germany) |
| | Lloyds Register (Worldwide) |

11.14 PED

The pressure equipment directive 97/23/EC applies to the alignment of the statutory orders of the European member states for pressure equipment. Such equipment in the sense of the directive includes vessels, pipelines and accessories with a maximum allowable pressure of more than 0.5 bar above atmospheric. Flowmeters are considered as piping.

A detailed risk analysis of the flowmeter has been performed in accordance with the PED 97/23/EC. All risks are assessed to be "none" provided that the procedures and standards referenced in these operating instructions are observed.

Division according to the danger potential

Flowmeters, which are categorized as piping, are divided into categories according to danger potential (medium, pressure, nominal diameter). The flowmeters fall into the categories I to III or they are manufactured according to Article 3 Paragraph 3 - Sound Engineering Practice (SEP).

The following criteria are decisive for assessment of the danger potential, and are also shown in Diagrams 6 to 9.

Fluid group Group 1 or 2

• Aggregate state Liquid or gaseous

Type of pressurized equipment


Pipeline
 Product of pressure and volume (PS * V [barL])

The maximum allowable temperature for the used liquids or gases is the maximum process temperature which can occur, as defined by the user. This must be within the limits defined for the equipment.

Division of media (liquid/gaseous) into the fluid groups

Fluids are divided according to Article 9 into the following fluid groups:

Group 1 fluids

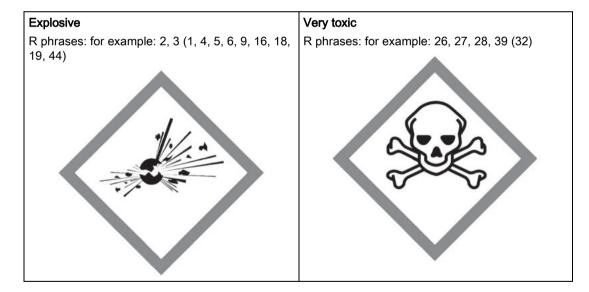

Extremely flammable Toxic R phrases: for example: 12 (17) R phrases: for example: 23, 24, 25 (29, 31) Highly flammable Oxidizing R phrases: for example: 11, 15, 17 (10, 30) R phrases: for example: 7, 8, 9 (14, 15, 19) Flammable R phrases: for example11 (10)

11.14 PED

Group 2 fluids

All fluids not belonging to Group 1.

Also applies to fluids which are for example dangerous to the environment, corrosive, dangerous to health, irritant or carcinogenic (if not highly toxic).

Conformity assessment

Flowmeters of categories I to III comply with the safety requirements of the directive. They are affixed with the CE mark and an EC declaration of conformity is provided.

The flowmeters are subjected to the conformity assessment procedure - Module H.

Flowmeters according to Article 3 Paragraph 3 are designed and manufactured in accordance with sound engineering practice in Denmark. PED conformity reference is not affixed to the CE mark.

Diagrams

- Gases of fluid group 1
- Pipelines according to Article 3 Number 1.3 Letter a) First dash
- Exception: unstable gases belonging to Categories I and II must be included in Category III.

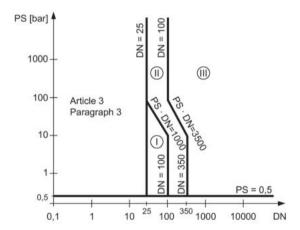


Image 11-3 Diagram 6

- Gases of fluid group 2
- Pipelines according to Article 3 Number 1.3 Letter a) Second dash

 Exception: liquids at temperatures > 350 °C belonging to Category II must be included in Category III.

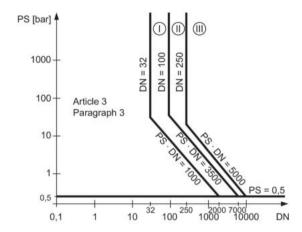


Image 11-4 Diagram 7

- Liquids of fluid group 1
- Pipelines according to Article 3 Number 1.3 Letter b) First dash

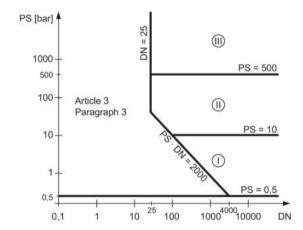


Image 11-5 Diagram 8

11.14 PED

- Liquids of fluid group 2
- Pipelines according to Article 3 Number 1.3 Letter b) Second dash

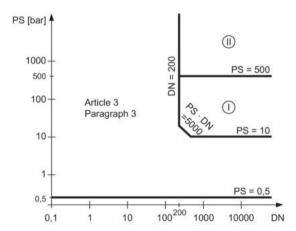


Image 11-6 Diagram 9

Spare parts and accessories 12

12.1 Ordering

In order to ensure that the ordering data you are using is not outdated, the latest ordering data is always available on the Internet: Catalog process instrumentation (http://www.siemens.com/processinstrumentation/catalogs)

12.2 Ex approved products



Repair of Ex-approved products

It is the customer's responsibility that repair of Ex-approved products fulfill national requirements.

12.3 Replaceable components

This table gives an overview of which components can be replaced.

Table 12-1 Overview of replaceable components

| Component | Order number | Photo and position on illustration in Design (Page 22) | Hot swapable * |
|--|--------------|--|--|
| SITRANS FC410 Blind lid small (Ø85 mm) | A5E03549295 | | Yes Observe hazardous area access protocol |
| SITRANS FC410 electronic | A5E03549191 | | No |
| SITRANS FC410 Housing metric | A5E03549313 | | No |
| SITRANS FCS410 Housing NPT | A5E03906080 | | No |
| SITRANS FC410 Bag of loose parts for sensor | A5E03549324 | Contents: Screws, O-rings, cable clamp parts | |
| SITRANS FC410 M12 option for FC410 housing | A5E03906095 | | No |

^{*} Components may be replaced while power is on in non-hazardous locations only.

Dimensions and weight 13

13.1 Sensor dimensions

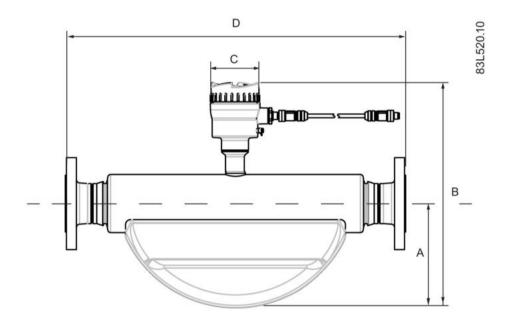


Table 13-1 Basic dimensions

| Sensor DN | A in mm (inch) | B in mm (inch) | C in mm (inch) | Weight in kg (lb) |
|-----------|----------------|----------------|----------------|-------------------|
| 15 (½") | 90 (3.54) | 280 (11.0) | 90 (3.54) | 4.6 (10.1) |
| 25 (1") | 123 (4.84) | 315 (12.4) | 90 (3.54) | 7.9 (17.4) |
| 50 (2") | 187 (7.36) | 390 (15.4) | 90 (3.54) | 25.7 (56.7) |
| 80 (3") | 294 (11.6) | 504 (19.8) | 90 (3.54) | 66.5 (147) |

Note

The build in length (D) depends on the process connector.

13.2 Length matrix

316L stainless steel or Hastelloy - standard

Table 13-2 7ME461 - sensor sizes DN15 and DN25

| Sensor | | | DN15 | | | | DN25 | |
|------------------------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|
| Connection | DN6 | DN10 | DN15 | DN20 | DN25 | DN25 | DN32 | DN40 |
| EN1092-1 B1, PN16 | | | 265 (10.4) | | 265 (10.4) | 360 (14.2) | | 365 (14.4) |
| EN1092-1 B1, PN40 | | | 265 (10.4) | | 265 (10.4) | 360 (14.2) | | 365 (14.4) |
| EN1092-1 B1, PN63 | | | 265 (10.4) | | | 360 (14.2) | | |
| EN1092-1 B1, PN100 | | | 270 (10.6) | | 275 (10.8) | 360 (14.2) | | 365 (14.4) |
| EN1092-1 B1, PN160 | | | 270 (10.6) | | | 360 (14.2) | | |
| EN1092-1 D, PN40 | | | 265 (10.4) | | | 360 (14.2) | | |
| EN1092-1 D, PN63 | | | 265 (10.4) | | | 360 (14.2) | | |
| EN1092-1 D, PN100 | | | 270 (10.6) | | | 360 (14.2) | | |
| EN1092-1 D, PN160 | | | 270 (10.6) | | | 360 (14.2) | | |
| ANSI B16.5, Class 150 | | | 270 (10.6) | 270 (10.6) | | 360 (14.2) | | 365 (14.4) |
| ANSI B16.5, Class 300 | | | 270 (10.6) | 270 (10.6) | | 360 (14.2) | | 380 (15.0) |
| ANSI B16.5, Class 600 | | | 270 (10.6) | 285 (11.2) | | 360 (14.2) | | 380 (15.0) |
| ANSI B16.5, Class 900 | | | 290 (11.4) | | | 385 (15.2) | | |
| ISO 228-1 G Pipe thread | 265 (10.4) | | 265 (10.4) | | | 365 (14.4) | | |
| ANSI B1.20.1 NPT Pipe thread | 265 (10.4) | | 270 (10.6) | | | 365 (14.4) | | |
| DIN 11851 Hygienic screwed | | 265 (10.4) | 265 (10.4) | | 270 (10.6) | 360 (14.2) | 360 (14.2) | |
| DIN 32676-C Hygienic clamp | | | 265 (10.4) | 265 (10.4) | | 360 (14.2) | | 360 (14.2) |
| DIN 11864-1 Aseptic screwed | | | 265 (10.4) | | | 360 (14.2) | | |
| DIN 11864-2A Aseptic flanged | | | 265 (10.4) | | | 360 (14.2) | | |
| DIN 11864-3A Aseptic clamp | | | 265 (10.4) | | | 360 (14.2) | | |

| ISO 2852 Hygienic clamp | | 265 (10.4) | 360 (14.2) | 360 (14.2) |
|---------------------------|---------------|---------------|---------------|---------------|
| ISO 2853 Hygienic screwed | | 265 (10.4) | 360 (14.2) | 360 (14.2) |
| SMS 1145 Hygienic screwed | | 265 (10.4) | 360 (14.2) | |
| 12-VCO-4 Quick connect | 285 (11.2) | | | |
| JIS B2220 10K | 265 (10.4) | | 360 (14.2) | |
| JIS B2220 20K | 265 (10.4) | | 360 (14.2) | |
| JIS B2220 40K | 270 (10.6) | | 360 (14.2) | |
| JIS B2220 63K | 275 (10.8) | | 370 (14.6) | |

Dimensions in mm (inch)

Table 13-3 7ME461 - sensor sizes DN50 and DN80

| Sensor | DN | N50 | DN80 | | |
|------------------------------|------------|------------|------------|------------|------------|
| Connection | DN40 | DN50 | DN65 | DN80 | DN100 |
| EN1092-1 B1, PN16 | 610 (24.0) | 610 (24.0) | 915 (36.0) | 840 (33.1) | 840 (33.1) |
| EN1092-1 B1, PN40 | 610 (24.0) | 610 (24.0) | 915 (36.0) | 840 (33.1) | 840 (33.1) |
| EN1092-1 B1, PN63 | 610 (24.0) | 610 (24.0) | 915 (36.0) | 915 (36.0) | 915 (36.0) |
| EN1092-1 B1, PN100 | 610 (24.0) | 610 (24.0) | 915 (36.0) | 915 (36.0) | 915 (36.0) |
| EN1092-1 B1, PN160 | | 620 (24.4) | | 915 (36.0) | |
| EN1092-1 D, PN40 | 610 (24.0) | 610 (24.0) | | 840 (33.1) | |
| EN1092-1 D, PN63 | 610 (24.0) | 610 (24.0) | | 915 (36.0) | |
| EN1092-1 D, PN100 | 610 (24.0) | 610 (24.0) | | 915 (36.0) | |
| EN1092-1 D, PN160 | | 620 (24.4) | | 915 (36.0) | |
| ANSI B16.5, Class 150 | | 620 (24.4) | 915 (36.0) | 875 (34.4) | |
| ANSI B16.5, Class 300 | | 620 (24.4) | 915 (36.0) | 875 (34.4) | |
| ANSI B16.5, Class 600 | | 620 (24.4) | 915 (36.0) | 875 (34.4) | |
| ANSI B16.5, Class 900 | | 620 (24.4) | | 875 (34.4) | |
| ISO 228-1 G Pipe thread | | 620 (24.4) | | | |
| ANSI B1.20.1 NPT pipe thread | | 620 (24.4) | | | |
| DIN 11851 Hygienic screwed | 610 (24.0) | 610 (24.0) | 840 (33.1) | 840 (33.1) | |
| DIN 32676-C Hygienic clamp | | 610 (24.0) | | 875 (34.4) | |
| DIN 11864-1 Aseptic screwed | 610 (24.0) | 610 (24.0) | | 875 (34.4) | |
| DIN 11864-2A Aseptic flanged | 620 (24.4) | 610 (24.0) | | 875 (34.4) | |
| DIN 11864-3A Aseptic clamp | 610 (24.0) | 610 (24.0) | | 840 (33.1) | |
| ISO 2852 Hygienic clamp | 610 (24.0) | 610 (24.0) | | 840 (33.1) | |
| ISO 2853 Hygienic screwed | 630 (24.8) | 610 (24.0) | | 860 (33.9) | |
| SMS 1145 Hygienic screwed | 610 (24.0) | 610 (24.0) | | 875 (34.4) | |
| 12-VCO-4 Quick connect | | | | | |

13.3 316L stainless steel - NAMUR

| JIS B2220 10K | 620 (24.4) | 610 (24.0) | 840 (33.1) | |
|---------------|------------|------------|------------|--|
| JIS B2220 20K | 620 (24.4) | 610 (24.0) | 860 (33.9) | |
| JIS B2220 40K | 620 (24.4) | 610 (24.0) | 875 (34.4) | |
| JIS B2220 63K | | 620 (24.4) | 875 (34.4) | |

Dimensions in mm (inch)

13.3 316L stainless steel - NAMUR

316L stainless steel - NAMUR

Table 13-4 7ME471 - sensor sizes DN15 and DN25

| Sensor | | | DN15 | | | | DN25 | | |
|------------------------------|---------------|------|---------------|---------------|---------------|---------------|------|---------------|--|
| Connection | DN6 | DN10 | DN15 | DN20 | DN25 | DN25 | DN32 | DN40 | |
| EN1092-1 B1, PN16 | | | 510 (20.1) | | 510 (20.1) | 600 (23.6) | | 605 (23.8) | |
| EN1092-1 B1, PN40 | | | 510 (20.1) | | 510 (20.1) | 600 (23.6) | | 605 (23.8) | |
| EN1092-1 B1, PN63 | | | 510 (20.1) | | | 600 (23.6) | | | |
| EN1092-1 B1, PN100 | | | 515 (20.3) | | 520 (20.5) | 600 (23.6) | | 605 (23.8) | |
| EN1092-1 B1, PN160 | | | 515 (20.3) | | | 600 (23.6) | | | |
| EN1092-1 D, PN40 | | | 510 (20.1) | | | 600 (23.6) | | | |
| EN1092-1 D, PN63 | | | 510 (20.1) | | | 600 (23.6) | | | |
| EN1092-1 D, PN100 | | | 515 (20.3) | | | 600 (23.6) | | | |
| EN1092-1 D, PN160 | | | 515 (20.3) | | | 600 (23.6) | | | |
| ANSI B16.5, Class 150 | | | 515 (20.3) | 515 (20.3) | | 600 (23.6) | | 605 (23.8) | |
| ANSI B16.5, Class 300 | | | 515 (20.3) | 515 (20.3) | | 600 (23.6) | | 620 (24.4) | |
| ANSI B16.5, Class 600 | | | 515 (20.3) | 530 (20.9) | | 600 (23.6) | | 620 (24.4) | |
| ANSI B16.5, Class 900 | | | 535 (21.1) | | | 625 (24.6) | | | |
| ISO228-1 G Pipe thread | 510 (20.1) | | 510 (20.1) | | | 605 (23.8) | | | |
| ANSI B1.20.1 NPT Pipe thread | 510 (20.1) | | 515 (20.3) | | | 605 (23.8) | | | |

| DIN 11851 Hygienic screwed | 510 (20.1) | 510 (20.1) | | 515 (20.3) | 600 (23.6) | 600 (23.6) | |
|-------------------------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|
| DIN 32676-C Hygienic clamp | | 510 (20.1) | 510 (20.1) | | 600 (23.6) | | 600 (23.6) |
| DIN 11864-1 Asceptic screwed | | 510 (20.1) | | | 600 (23.6) | | |
| DIN 11864-2A Asceptic flanged | | 510 (20.1) | | | 600 (23.6) | | |
| DIN 11864-3A Asceptic clamp | | 510 (20.1) | | | 600 (23.6) | | |
| ISO 2852 Hygienic clamp | | | | 510 (20.1) | 600 (23.6) | | 600 (23.6) |
| ISO 2853 Hygienic screwed | | | | 510 (20.1) | 600 (23.6) | | 600 (23.6) |

Dimensions in mm (inch)

Table 13-5 7ME471 - sensor sizes DN50 and DN80

| Sensor | DN | 150 | DN80 | | |
|-------------------------------|------------|------------|------------|------------|------------|
| Connection | DN40 | DN50 | DN65 | DN80 | DN100 |
| EN1092-1 B1, PN16 | 715 (28.1) | 715 (28.12 | 915 (36.0) | 915 (36.0) | 915 (36.0) |
| EN1092-1 B1, PN40 | 715 (28.1) | 715 (28.1) | 915 (36.0) | 915 (36.0) | 915 (36.0) |
| EN1092-1 B1, PN63 | 715 (28.1) | 715 (28.1) | 915 (36.0) | 915 (36.0) | 915 (36.0) |
| EN1092-1 B1, PN100 | 715 (28.1) | 715 (28.1) | 915 (36.0) | 915 (36.0) | 915 (36.0) |
| EN1092-1 B1, PN160 | | 725 (28.5) | | 915 (36.0) | |
| EN1092-1 D, PN40 | 715 (28.1) | 715 (28.1) | | 915 (36.0) | |
| EN1092-1 D, PN63 | 715 (28.1) | 715 (28.1) | | 915 (36.0) | |
| EN1092-1 D, PN100 | 715 (28.1) | 715 (28.1) | | 915 (36.0) | |
| EN1092-1 D, PN160 | | 725 (28.5) | | 915 (36.0) | |
| ANSI B16.5-2009, Class 150 | | 725 (28.5) | 915 (36.0) | 950 (37.4) | |
| ANSI B16.5-2009, Class 300 | | 725 (28.5) | 915 (36.0) | 950 (37.4) | |
| ANSI B16.5-2009, Class 600 | | 725 (28.5) | 915 (36.0) | 950 (37.4) | |
| ANSI B16.5-2009, Class 900 | | 725 (28.5) | | 950 (37.4) | |
| ISO228-1 G pipe thread | | 725 (28.5) | | | |
| ANSI B1.20.1 NPT pipe thread | | 725 (28.5) | | | |
| DIN 11851 Hygienic screwed | 715 (28.1) | 715 (28.1) | 915 (36.0) | 915 (36.0) | |
| DIN 32676-C Hygienic clamp | | 715 (28.1) | | 950 (37.4) | |
| DIN 11864-1 Asceptic screwed | 715 (28.1) | 715 (28.1) | | 950 (37.4) | |
| DIN 11864-2A Asceptic flanged | 725 (28.5) | 715 (28.1) | | 950 (37.4) | |
| DIN 11864-3A Aseptic clamp | 715 (28.1) | 715 (28.1) | | 915 (36.0) | |
| ISO 2852 Hygienic clamp | 715 (28.1) | 715 (28.1) | | 915 (36.0) | |
| ISO 2853 Hygienic screwed | 735 (28.9) | 715 (28.1) | | 860 (33.9) | |

Dimensions in mm (inch)

13.4 Hygienic versions

316L stainless steel - hygienic version

Table 13-6 7ME462 - sensor sizes DN15 and DN25

| Sensor | | | DN15 | | | | DN25 | |
|-------------------------------|-----|---------------|---------------|---------------|---------------|---------------|---------------|---------------|
| Connection | DN6 | DN10 | DN15 | DN20 | DN25 | DN25 | DN32 | DN40 |
| DIN 11851 Hygienic screwed | | 265 (10.4) | 265 (10.4) | | 270 (10.6) | 360 (14.2) | 360 (14.2) | |
| DIN 32676-C Hygienic clamp | | | 265 (10.4) | 265 (10.4) | | 360 (14.2) | | 360 (14.2) |
| DIN 11864-1 Asceptic screwed | | | 265 (10.4) | | | 360 (14.2) | | |
| DIN 11864-2A Asceptic flanged | | | 265 (10.4) | | | 360 (14.2) | | |
| DIN 11864-3A Aseptic clamp | | | 265 (10.4) | | | 360 (14.2) | | |
| ISO 2852 Hygienic clamp | | | | | 265 (10.4) | 360 (14.2) | | 360 (14.2) |
| ISO 2853 Hygienic screwed | | | | | 265 (10.4) | 360 (14.2) | | 360 (14.2) |
| SMS 1145 Hygienic screwed | | | | | 265 (10.4) | 360 (14.2) | | |

Dimensions in mm (inch)

Table 13-7 7ME462 - sensor sizes DN50 and DN80

| Sensor | DI | DN50 | | DN80 |
|-------------------------------|------------|------------|------------|------------|
| Connection | DN40 | DN50 | DN65 | DN80 |
| DIN 11851 Hygienic screwed | 610 (24.0) | 610 (24.0) | 840 (33.1) | 840 (33.1) |
| DIN 32676-C Hygienic clamp | | 610 (24.0) | | 875 (34.4) |
| DIN 11864-1 Asceptic screwed | 610 (24.0) | 610 (24.0) | | 875 (34.4) |
| DIN 11864-2A Asceptic flanged | 620 (24.4) | 610 (24.0) | | 875 (34.4) |
| DIN 11864-3A Asceptic clamp | 610 (24.0) | 610 (24.0) | | 840 (33.1) |
| ISO 2852 Hygienic clamp | 610 (24.0) | 610 (24.0) | | 840 (33.1) |
| ISO 2853 Hygienic screwed | 630 (24.8) | 610 (24.0) | | 860 (33.9) |
| SMS 1145 Hygienic screwed | 610 (24.0) | 610 (24.0) | | 875 (34.4) |

Dimensions in mm (inch)

Note

3A

DIN 11851 and ISO 2853 are only 3A-approved if self-centring gaskets are used.

Modbus holding registers



A.1 Modbus addressing model

The device allows read/write access to the following standard Modbus RTU data holding register blocks:

• Holding registers (ref. 4x address range)

The minimum value of a writable **holding register** can be read by adding 10000 to the Modbus address of the register.

The maximum value of a writable **holding register** can be read by adding 20000 to the Modbus address of the register.

The default value of a writable **holding register** can be read by adding 30000 to the Modbus address of the register.

A.2 Modbus function codes

This device supports following function codes: 3, 8 and 16.

Function codes 3 and 16 are used for accessing registers, max. 16 registers per read/write request is accepted.

Function code 8 is used for reading Modbus communication diagnostic information.

Below the various function code are described.

Function code 3 (Read holding registers)

General exceptions:

- Requesting less than 1 or more than 16 registers => Exception 3 (Illegal data value)
- Requesting invalid start address or start address with invalid quantity => Exception 2 (Illegal data address)

Application exceptions:

 Application errors; min/max limit of parameter exceeded; or parameter write-protected => Exception 4 (Slave device error)

Holes/register alignment:

- The read command always returns data if no exception is given.
- Holes in the holding register map return value zero in all bytes. E.g. reading 2 registers starting at 4:0004 above will result in 2 bytes of "float B" followed by 2 zeroes.

Function code 3 example

Query

| Slave address | 1 byte |
|--------------------------|---------|
| Function | 1 byte |
| Starting Address Hi | 1 byte |
| Starting Address Lo | 1 byte |
| Quantity of Registers Hi | 1 byte |
| Quantity of Registers Lo | 1 byte |
| CRC | 2 bytes |

Response

| Slave address | 1 byte |
|-------------------|---------|
| Function | 1 byte |
| Byte count | 1 byte |
| Register Value Hi | 1 byte |
| Register Value Lo | 1 byte |
| : | : |
| Register Value Hi | 1 byte |
| Register Value Lo | 1 byte |
| CRC | 2 bytes |

Example: Read absolute massflow (address 3000)

Query: 1,3,11,184,0,2,70,10

Slave address = 1 (0x01)

Function = 3(0x03)

Starting Address Hi, Lo = 11, 184 (0x0B,0xB8)

Quantity of Registers Hi , Lo = 0, 2 (0x00,0x02)

CRC = 70,10 (0x46, 0x0A)

Starting address 0x0BB8 = 3000

Quantity of registers = 0x0002 = 2

Response: 1,3,4,64,195,82,139,98,200

Slave address = 1 (0x01)

Function = 3(0x03)

Byte Count = 4(0x04)

Register 1 - Register Value Hi, Lo = 64, 195 (0x40, 0xC3)

Register 2 - Register Value Hi, Lo = 82, 139 (0x52, 0x93)

CRC = 98,200 (0x62, 0xC8)

Absolute mass flow = 0x40C35293 = 6.10383 kg/sec

Function code 16 (Write multiple registers)

General exceptions

- Writing less than 1 or more than 16 registers => Exception 3 (Illegal data value)
- If ByteCount is not exactly 2 times NoOfRegisters => Exception 3 (Illegal data value)
- Requesting invalid start address or start address with invalid quantity => Exception 2 (Illegal data address)

Application exceptions:

- Application errors; min/max limit of parameter exceeded; or parameter write-protected => Exception 4 (Slave device error)
- Application errors include writing to ReadOnly holding registers

Holes/register alignment:

- If start-address is not the start of a mapped holding register => Exception 2 (Illegal data address)
- Writing to holes is allowed (ie ignored and no exception occurs) except for the condition described above
- If the end address is only part of a mapped holding register item (e.g. one half of a float value), the action depends on the data type. Writing parts of all data types => Exception 4 (Slave device error)

Function code 16 example

Query

| Slave address | 1 byte |
|--------------------------|---------|
| Function | 1 byte |
| Starting Address Hi | 1 byte |
| Starting Address Lo | 1 byte |
| Quantity of Registers Hi | 1 byte |
| Quantity of Registers Lo | 1 byte |
| Byte Count | 1 byte |
| Registers Value Hi | 1 byte |
| Registers Value Lo | 1 byte |
| : | : |
| Registers Value Hi | 1 byte |
| Registers Value Lo | 1 byte |
| CRC | 2 bytes |

Response

| Slave address | 1 byte |
|--------------------------|---------|
| Function | 1 byte |
| Starting Address Hi | 1 byte |
| Starting Address Lo | 1 byte |
| Quantity of Registers Hi | 1 byte |
| Quantity of Registers Lo | 1 byte |
| CRC | 2 bytes |

Example: Set baud rate to 115200 baud (address 529)

Query: 1,16,2,17,0,1,2,0,5,70,210

Slave address = 1 (0x01)

Function = 16(0x10)

Starting Address Hi, Lo = 2, 17 (0x02,0x11)

Quantity of Registers Hi, Lo = 0, 1 (0x00,0x01)

Byte Count = 2(0x02)

Registers Value Hi, Lo = 0, 5 (0x00,0x05)

CRC = 70,10 (0x46, 0x0A)

Starting address 0x0211 = 529

Number of registers = 0x0001 = 1

Data 0x0005 = (115200 = value 5)

Response: 1,16,2,17,0,1,80,116

Slave address = 1 (0x01)

Function = 16(0x10)

Starting Address Hi, Lo = 2, 17 (0x02,0x11)

Quantity of Registers Hi, Lo = 0, 1 (0x00,0x01)

CRC = 80,116 (0x50, 0x74)

Function code 8 (Diagnostics)

Modbus function code 8 provides a series of tests for checking the communication system between a client (Master) device and a server (Slave).

The following diagnostics functions are supported:

| Sub- function code (Dec) | Name | Description |
|-----------------------------------|--|--|
| 00 | Return Query Data | The data passed in the request data field is to be returned (looped back) in the response. |
| 10 | Clear Counters and Diagnostic Register | Clears all counters and the diagnostic register. Counters are also cleared upon power–up. |
| 11 | Return Bus Message Count | The response data field returns the quantity of messages that the remote device has detected on the communications system since its last restart, clear counters execution, or power–up. |

| Sub- function code (Dec) | Name | Description |
|-----------------------------------|---|---|
| 12 | Return Bus Communication Error Count | The response data field returns the quantity of CRC errors encountered by the remote device since its last restart, clear counters execution, or power–up. |
| 13 | Return Bus Exception Error Count | The response data field returns the quantity of MODBUS exception responses returned by the remote device since its last restart, clear counters execution, or power–up. |
| 14 | Return Slave Message Count | The response data field returns the quantity of messages broadcast or addressed to the remote device that the remote device has processed since its last restart, clear counters execution, or power–up. |
| 15 | Return Slave No Response Count | The response data field returns the quantity of messages addressed to the remote device for which it has returned no response (neither a normal response nor an exception response), since its last restart, clear counters execution, or power–up. |
| 16 | Return Slave NAK Count | The response data field returns the quantity of messages addressed to the remote device for which it returned a Negative Acknowledge (NAK) exception response, since its last restart, clear counters execution, or power–up. |
| 17 | Return Slave Busy Count | The response data field returns the quantity of messages addressed to the remote device for which it returned a Slave Device Busy exception response, since its last restart, clear counters execution, or power–up. |
| 18 | Return Bus Character Overrun Count | The response data field returns the quantity of messages addressed to the remote device that it could not handle due to a character overrun condition, since its last restart, clear counters execution, or power–up. |
| 20 | Clear Overrun Counter and Flag | Clears the overrun error counter and resets the error flag. |

Function code 8 example

Query

| Slave address | 1 byte |
|-----------------|---------|
| Function | 1 byte |
| Sub-function Hi | 1 byte |
| Sub-function Lo | 1 byte |
| Data Hi | 1 byte |
| Data Lo | 1 byte |
| : | : |
| Data Hi | 1 byte |
| Data Lo | 1 byte |
| CRC | 2 bytes |

Response

| Slave address | 1 byte |
|-----------------|---------|
| Function | 1 byte |
| Sub-function Hi | 1 byte |
| Sub-function Lo | 1 byte |
| Data Hi | 1 byte |
| Data Lo | 1 byte |
| : | : |
| Data Hi | 1 byte |
| Data Lo | 1 byte |
| CRC | 2 bytes |

Example: Read Return Slave Message Count (address 529)

Query: 1,8,0,14,0,0,129,200

Slave address = 1(0x01)

Function = 8 (0x08)

Sub-function Hi, Lo = 0, 14 (0x00,0x0E)

Data Hi, Lo = 0, 0 (0x00,0x00) CRC = 129,200 (0x81, 0xC8)

Sub-function 0x000E = 14 = Read Return Slave Message Count

Response: 1,8,0,14,0,97,64,32

Slave address = 1(0x01)

Function = 8 (0x08)

Sub-function Hi, Lo = 0, 14 (0x00,0x0E)

Data Hi, Lo = 0, 97 (0x00,0x65) CRC = 64,32 (0x41, 0xE3)

Read Return Slave Message Count = 0x0065 = 97 message received

A.3 Modbus holding registers tables

In the following the Modbus RTU holding registers available for FC410 are described.

Note

All Write parameters require password access.

A.3.1 Process values

Table A- 1 Process values

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|----------------|-----------------------------|------------------------|---|-------------------------|-------------|-----------------|
| 3000 | float / 4 | Massflow | Measured massflow | - [kg/s] | - | Read Only |
| 3002 | float / 4 | Volumeflow | Measured volumeflow | - [m ³ /s] | - | Read Only |
| 3004 | float / 4 | Density | Measured density | - [kg/m³] | - | Read Only |
| 3010 | float / 4 | Temperature | Measured temperature of the process media | - [°C] | - | Read Only |
| 3023 | float / 4 | Frame Tempera- ture | Measured temperature of the sensor frame | - [°C] | - | Read Only |

A.3.2 Identification

Table A- 2 FC410

| Modbus address | Data type / Size (bytes) | Parameter | Description | Default value (unit) | Value range | Access level |
|-------------------|-----------------------------|-----------------------------|------------------------------------|----------------------|-------------|-----------------|
| 4000 | String / 20 | Manufacturer | Device manufacturer | Siemens | - | Read Only |
| 4020 | String / 10 | Sensor Firmware Revision | Sensor firmware version | - | - | Read Only |
| 4025 | String / 16 | SensorType | Sensor type. | SITRANS | - | Read Only |
| | | | Also shown on the device nameplate | FC410 | | |
| 4033 | String / 20 | Sensor Serial Number | Unique sensor serial number. | - | - | Read Only |
| | | | Also shown on the device nameplate | | | |
| 4095 | String / 10 | Sensor Hardware Revision | Sensor hardware version | - | - | Read Only |
| 4100 | String / 10 | Sensor Frontend Type | Sensor hardware variant | - | - | Read Only |
| 4121 | String / 20 | Sensor Order Number | Sensor order number part 1 (MLFB). | - | - | Read Only |
| | | | Also shown on the device nameplate | | | |
| 4131 | String / 32 | Sensor Order Number | Sensor order number part 2 (MLFB). | - | - | Read Only |
| | | | Also shown on the device nameplate | | | |
| 4147 | String / 32 | Sensor Order Num- ber | Sensor order number part 3 (MLFB). | - | - | Read Only |
| | | | Also shown on the device nameplate | | | |

| Modbus address | Data type / Size (bytes) | Parameter | Description | Default value (unit) | Value range | Access level |
|-------------------|-----------------------------|--------------|--|----------------------|-------------|-----------------|
| 4164 | String / 32 | Long TAG | Enter a unique TAG name for the device (up to 32 characters) | | | |
| 4180 | String / 16 | Descriptor | Enter a unique description for the measurement point (up to 16 characters) | | | |
| 4188 | String / 16 | Startup Date | Enter the installation date of the device | | | |

A.3.3 Setup

Table A- 3 Operating conditions

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|----------------|-----------------------------|--------------------------|--|----------------------|--------------------|-----------------|
| 2100 | Unsigned / 2 | Flow Direction | Define positive and negative flow direction. | 1 | 0 to 1 | Read / Write |
| | | | Default positive flow direction is indicated by the arrow on the sensor. | | | |
| | | | Possible selections: | | | |
| | | | 0: Negative: The flow is measured '+' in default ne- gative direction and '-' in default positive direction. | | | |
| | | | 1: Positive: The flow is measured '+' in default po- sitive direction and '-' in default negative direction | | | |
| 2130 | Unsigned / 2 | Process Noise Damping | Select process noise damping level: 0: 55 ms filtering (Centrifugal Pump) 1: 110 ms filtering (Triplex Pump) 2: 220 ms filtering (Duplex Pump) 3: 400 ms filtering (Simplex Pump) 4: 800 ms filtering (Cam Pump) | 2 | 0 Low to 4 High | Read / Write |

Table A- 4 Massflow

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|----------------------------|---|-----------------------------|---------------------|-----------------|
| 2125 | Float / 4 | Low Massflow Cut- Off | Set massflow limit for low flow cut-off. | Sensor size specific [kg/s] | 0 to 1023 | Read / Write |
| | | | Below this limit massflow output is forced to zero. | 1) | | |
| | | | If Low Flow Cut-Off is set to 0, the cut-off functionality is disabled. | | | |
| | | | Notice: | | | |
| | | | It is recommended to set a lower value for gas applications. | | | |
| 2426 | Float / 4 | Massflow Correction Factor | Specify correction factor for use in the massflow calculation | 1 | -1.999 to +1.999 | Read / Write |

^{1):} See Sensor dimension dependent default settings (Page 139)

Table A- 5 Volume flow

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|---------------------------|--|--------------------------------|-------------|-----------------|
| 2170 | Float / 4 | Low Volumeflow Cut Off | Define the numerical volume- flow value below which the volume flow output is forced to zero. | Sensor size specific [m³/s] | 0 to 0.177 | Read / Write |

^{1):} See Sensor dimension dependent default settings (Page 139)

Table A- 6 Density

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|-------------------------|--|--------------------------|-----------------------|-----------------|
| 2127 | Float / 4 | Empty Tube Limit | Define threshold value of empty tube | 500 [kg/m ³] | -14 000 to +14 000 | Read / Write |
| 2129 | Unsigned / 2 | Empty Tube Detection | Set automatic detection of Empty Tube On/Off 0 = off (Empty tube is off). 1 = on (a density value below Empty Tube Limit triggers an alarm. All flow rate values are forced to zero %). | 0 | 0 to 1 | Read / Write |

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|------------------------------|---|-------------------------|---------------------|-----------------|
| 2442 | Float / 4 | Density Correction Factor | Set density compensation value (gain) in order to make a density correction (scale factor). | 1 | -1.999 to +1.999 | Read / Write |
| | | | To increase the displayed density value with +0.5 %, set the density factor to 1.005. | | | |
| | | | The displayed density value will now be 0.5 % higher than before | | | |
| 2444 | Float / 4 | Density Correction Offset | Set density compensation value (offset) in order to make an offset on the measured density. | 0 [kg/m ³] | -1 400 to +1 400 | Read / Write |
| | | | To make the flowmeter show + 2 kg/m³, change the density offset to 2.000 kg/m³ in the 'Sensor' menu | | | |

A.3.4 Totalizer

Table A- 7 Totalizer

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|-----------------|-----------------------------|-------------------------|---------------|-----------------|
| 2609 | unsigned / | Totalizer State | Totalizer state | 1 | 0 to 1 | Read only |
| | 2 | | • 0 = paused | | | |
| | | | • 1= running | | | |
| 2610 | float / 4 | Totalizer Value | The totalized MASS value in | 0 [kg] | Min1.70E+38 | Read Only |
| | | | kg | | Max. 1.70E+38 | |

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|----------------------------|--|-------------------------|---------------------------------|-----------------|
| 3018 | Unsigned / 4 | Totalizer fixed point part | The totalized MASS value in kg. Most significant word of the totalizer (MSW). | 0 [kg] | Min - 2147483648 Max | Read Only |
| | | | The format of the totalizer is a TotalType. The TotalType represent a fixed point value in the MSW 32 bit and a fractional part in the LSW 32 bit. | | 2247483647 | |
| | | | Example: 2.03 would be represented as fixed point part = 2 and fractional part = 30000000 | | | |
| | | | Note: the data type is unsigned32, but shall be converted into a signed32 by the host since signed32 is not supported in the device. | | | |
| | | | Example conversion to float64 tag by the host: Float64 tag = fixed point part + (fraction part/10000000000.0); | | | |
| 3020 | Unsigned / 4 | Totalizer fractional part | The totalized MASS value in kg. Least significant word of the totalizer (LSW). | 0 [kg] | Min -999999999 Max 999999999 | Read Only |
| | | | The format of the totalizer is a TotalType. The TotalType represent a fixed point value in the MSW 32 bit and a fractional part in the LSW 32 bit. | | | |
| | | | Example: 2.03 would be represented as fixed point part = 2 and fractional part = 30000000 | | | |
| | | | Note: the data type is unsigned32, but shall be converted into a signed32 by the host since signed32 is not supported in the device. | | | |
| | | | Example conversion to float64 tag by the host: Float64 tag = fixed point part + (fraction part/1000000000.0); | | | |
| 2612 | unsigned / 2 | Reset totalizer | Reset totalizer Value | - | Enter 1 to reset | Read / Write |

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|------------------|---|-------------------------|------------------|-----------------|
| 2613 un 2 | unsigned / | Pause totalizer | Pause totalizer | - E | Enter 1 to pause | Read / |
| | 2 | | Totalizer can only be paused when running | | | Write |
| 2614 | unsigned / | Resume totalizer | Resume totalizer | - | Enter 1 to pause | Read / |
| | 2 | | Totalizer can only be resumed when paused | | | Write |

A.3.5 Maintenance & Diagnostics

Table A-8 Access level

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|----------------|-----------------------------|---------------|-------------------------------------|-------------------------|---------------------------------------|-----------------|
| 404 | Unsigned / 2 | Access level | Access level status | - | 32 (logged in) | Read Only |
| | | | | | 4 (logged out) | |
| 412 | Unsigned / 2 | User password | Password to enable writing commands | - | 2457 (enable user password 0 (disable | Read / Write |
| | | | | | user pass- word) | |

Table A- 9 Maintenance

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|------------------------------|---|-------------------------|------------------|-----------------|
| 700 | Unsigned / 2 | Set To Default | Reset all parameters to factory settings | - | Enter 1 to reset | Write |
| 2700 | Unsigned / 4 | Operating Time Total | Total operating time since first power up | 0 [h] | - | Read Only |
| 2702 | Unsigned / 4 | Operating Time | Operating time since last power up | 0 [h] | - | Read Only |
| 4088 | String / 14 | Firmware Time Stamp | Firmware time stamp specifies the date and time when the sensor firmware was built | - | - | Read Only |
| 4105 | String / 32 | Sensor PCBA Serial Number | Serial number of the sensor electronic | - | - | Read only |

Table A- 10 Device diagnostics

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|---------------------|--|-------------------------|-------------|-----------------|
| 2756 | Float / 4 | Driver Current | Actual sensor driver current. | - [A] | 0 to 0.124 | Read Only |
| | | | The actual driver current is viscosity and sensor size dependent | | | |
| 2758 | Float / 4 | Pick-up Amplitude 1 | Actual pick-up 1 amplitude | - [V] | 0 to 0 9999 | Read Only |
| 2760 | Float / 4 | Pick-up Amplitude 2 | Actual pick-up 2 amplitude | - [V] | 0 to 0 9999 | Read Only |
| 2762 | Float / 4 | Sensor Frequency | Actual sensor frequency | - [Hz] | 0 to 1 023 | Read Only |
| 3032 | Float / 4 | PCB Temperature | Actual sensor electronic temperature | - [C°] | -50 to 200 | Read Only |

Table A- 11 Aerated flow

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|---------------------------------|--|----------------------|-------------|-----------------|
| 2200 | Unsigned / 2 | Aerated Flow Alarm Limit | Alarm limit calculated in per cent of accepted bad measurements. | 80 [%] | 0 to 99 | Read / Write |
| 2201 | Unsigned / 2 | Aerated Flow Warn- ing Limit | Warning limit calculated in per cent of accepted bad measurements | 0 [%] | 0 to 99 | Read / Write |
| 2202 | Unsigned / 2 | Measurement Sample Time | The time period over which the actual percentage of bad measurements is calculated | 5 [s] | 1 to 10 | Read / Write |
| 2203 | Unsigned / 2 | Aerated Flow Filter | Aerated flow filter 0: Disabled 1: Enabled 2: Auto Auto means that filtering starts automatically when aerated flow is measured. | 2 | 0 to 2 | Read / Write |
| 2204 | Unsigned / 2 | Filter Time Constant | PV Filter Time Constant 0: 0.5 seconds 1: 1 second 2: 2 seconds 3: 5 seconds 4: 10 seconds 5: 20 seconds 6: 30 seconds 7: User Defined Value | 4 | 0 to 7 | Read / Write |
| 2205 | Float / 4 | Filter Start Hysteresis | The filter is active when the hysteresis value is exceeded. | 0.015 [V] | 0 to 0.124 | Read / Write |
| | | | Aerated Flow Filter must be set to Auto | | | |

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|----------------|-----------------------------|----------------------------|--|----------------------|-------------|-----------------|
| 2207 | Unsigned / 2 | Minimum Filtering Time | The filtering time is reset each time hysteresis band is exceeded | 10 [ms cycles] | 0 to 65535 | Read / Write |
| 2214 | Unsigned / 2 | Pickup Amplitude Filter | Enable/disable pickup amplitude filter. 0 = Disable 1 = Enable | 1 | 0 to 1 | Read / Write |
| 2215 | Unsigned / | Bad Measurement Count | Number of bad measure- ments counted during the last period | 0 | 0 - 65535 | Read Only |
| 2216 | Unsigned / 2 | Filter Iteration | Set the number of times to repeat the same filter. Increasing the number will increase the damping. | 3 | 1 to 5 | Read / Write |
| | | | Active only if Filter Time Constant is set to 7. | | | |
| 2217 | Unsigned / 2 | Bandwidth Factor | Increase the Bandwidth Factor to reduce the LP (low pass) bandwidth filtering. Active only if Filter Time Constant is set to 7. | 2 | 0 to 4 | Read / Write |
| 2218 | Unsigned / 2 | Filter Pole Shift | Configure the bandwidth and damping in the stop band. A high number will give a small bandwidth and an increased damping in the stop band. | 2 | 1 to 5 | Read / Write |
| | | | Active only if Filter Time Constant is set to 7. | | | |

Table A- 12 Zero point adjustment

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|-----------------------------|---|-------------------------|-------------------|-----------------|
| 2132 | Unsigned / 2 | Zero Point Adjustment | Select zero-point adjust- ment method. Automatic zero point adjustment is recommended. | 0 | 0 to 1 | Read / Write |
| | | | • 0 = Auto | | | |
| | | | • 1 = Manual | | | |
| 2133 | Float / 4 | Manual Zero Point Offset | Enter agreed zero point offset value for manual zero point adjustment mode. | 0 [kg/s] | 0 to 1023 | Read / Write |
| 2135 | Unsigned / 2 | Zero Point Duration | Define duration of zero point adjustment. | 30 [s] | 1 to 999 | Read / Write |
| 2136 | Float / 4 | Standard Deviation | Standard deviation during auto zero point adjustment | 0 [kg/s] | -1023 to +1023 | Read only |

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|--------------------------------|--|--------------------------------|-------------------|-----------------|
| 2138 | Float / 4 | Standard Deviation Limit | Set limit for zero point adjustment Standard Deviation value. If the Standard Deviation exceeds the Standard Deviation Limit , the auto zero point adjustment is aborted. | Sensor size specific [kg/s] | 0 to +1023 | Read / Write |
| 2140 | Float / 4 | Zero Point Offsett Limit | Set limit for zero point off- set. If the zero point offset exceeds the zero point offset limit, the zero point offset cannot be stored Sensor size specific [kg/s] 1) | | -1023 to +1023 | Read / Write |
| 2142 | Float / 4 | Zero Point Offset Value | Default zero point offset based on factory calibration of sensor. | 0 [kg/s] | -1023 to +1023 | Read only |
| | | | A Zero point offset compensates for sensor variations due to process conditions. | | | |
| 2144 | Unsigned / 2 | Zero Point Adjust Progress | Shows the progress of the currently running Zero Point adjustment in percentage | 0 [%] | 0 to 100 | Read Only |
| 2145 | Unsigned / 2 | Zero Point Adjust Status | Status of the last zero point adjustment performed Every high bit ('1') represents an error occurred in the last zero point adjustment performed. | - | • 1 • 2 • 4 | Read Only |
| | | | No high bits equals ok. Bit 0 = Zero sigma limit exceeded Bit 1 = Zero offset limit exceeded Bit 2 = Quality of zero point conditions | | | |
| 2180 | Unsigned / 2 | Start Zero Point Adjustment | Start automatic zero point adjustment. The automatic zero point adjustment determines the application specific zero point offset automatically. Possible selections: | 0 | 0 to 2 | Read / Write |
| | | | • 0: Idle | | | |
| | | | 1: Running2: Start | | | |

^{1):} See Sensor dimension dependent default settings (Page 139)

A.3.6 Communication

Table A- 13 Modbus

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|------------------|--|-------------------------|-------------|-----------------|
| 527 | Unsigned / 2 | Float byte order | The float byte order used in Modbus messages. | 3 | 0 to 3 | Read / Write |
| | | | Selection 0: Byte order: 1-0-3-2 Selection 1: Byte order: | | | |
| | | | 0-1-2-3 Selection 2: Byte order: 2-3-0-1 | | | |
| | | | Selection 3: Byte order: 3-2-1-0 | | | |
| | | | The first mentioned byte is the first byte sent. Byte 3 corresponds to the left-most byte (MSB) of a 32 bit float in big endian format; byte 0 corresponds to the right-most byte (LSB). | | | |
| 528 | Unsigned / 2 | Modbus Address | Set Modbus Device Address | 1 | 1 to 247 | Read / Write |
| 529 | Unsigned / 2 | Baudrate | Set communication baudrate. Following baud rates are available: | 1 | 0 to 5 | Read / Write |
| | | | 0 = 9 6001 = 19 200 (Default) | | | |
| | | | • 2 = 38 400 | | | |
| | | | • 3 = 57 600 | | | |
| | | | • 4 = 76 800 | | | |
| | | | • 5 = 115 200 | | | |

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|--------------------------|---|----------------------|-------------|-----------------|
| 530 | Unsigned / 2 | Modbus Parity Framing | RS 485 parity and framing 8 data bits are always used 0 = even parity, 1 stop bit 1 = odd parity, 1 stop bit 2 = no parity, 2 stop bits | 0 | 0 to 2 | Read / Write |
| 600 | Unsigned / 2 | Restart communication | Restart Modbus communication Write: • 0 = No effect • 1 = Restart Read: • Always 0 | - | 0 to 1 | Write |

A.3.7 Characteristics

Table A- 14 Sensor

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|------------------------------|---------------------------------------|----------------------|-------------|-----------------|
| 2113 | Float / 4 | Minimum Frame Temperature | Lower limit of the frame temperature | -50 [°C] | | Read only |
| 2115 | Float / 4 | Maximum Frame Temperature | Lower limit of the frame temperature | 200 [°C] | | Read only |
| 4043 | String / 16 | Sensor size | Nominal sensor diameter (DN) | - | - | Read only |
| 4053 | String / 16 | Hazardous area approval | Hazardous area approval of the sensor | - | - | Read only |
| 4078 | String / 16 | Wetted materials | Sensor enclosure material | - | - | Read Only |

Table A- 15 Volumeflow calibration

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|----------------------------------|---|--------------------------------|-------------|-----------------|
| 2103 | Float / 4 | Maximum Volume- flow Capacity | Maximum volumeflow measurement capacity of the sensor | Sensor size specific [m³/s] | 0 to 0.177 | Read only |

^{1):} See Sensor dimension dependent default settings (Page 139).

Table A- 16 Massflow calibration

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|------------------------------|--|--------------------------------|--------------------------------------|-----------------|
| 2101 | Float / 4 | Maximum Massflow Capacity | Maximum massflow measurement capacity of the sensor | Sensor size specific [kg/s] | 0 to 1023 | Read only |
| 2402 | Float / 4 | Calibration Factor | Factory-set sensor-specific calibration factor. The calibration factor is shown on the sensor name-plate | - | Min: 5.00E+07 Max: 4.29E+09 | Read only |

^{1):} See Sensor dimension dependent default settings (Page 139).

Table A- 17 Density calibration

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|-------------------------------|--|-------------------------|------------------------------|-----------------|
| 2428 | Float / 4 | Density Calibration Offset | Specify an offset in the density flow calculation | - | -14 000 to +14 000 | Read only |
| 2430 | Float / 4 | Density Calibration Factor | Specify gain factor in the density flow calculation | - | -1-999 to +1.999 | Read only |
| 2432 | Float / 4 | Dens. Comp. Tube Temp. | Specifies a tube temperature coefficient in the density calculation | - | -0.001953 to +0.001953 | Read only |
| 2434 | Float / 4 | Dens. Comp. Frame Temp. | Specifies a frame temperature coefficient in the density calculation | - | -0.001953 to +0.001953 | Read only |

A.3.8 Simulation

Table A- 18 Simulation

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|---------------------------------------|---|---------------------------|---------------------|-----------------|
| 2764 | Float / 4 | Massflow Simulation Value | Set massflow simulation value. | 0 [kg/s] | -1023 to +1023 | Read / Write |
| | | | The massflow will be set to this value on all outputs, if Simulation Mass Flow is enabled | | | |
| 2766 | Float / 4 | Density Simulation Value | Set density simulation value. The density will be set to this value on all outputs, if Simulation Density is enabled | 1000 [kg/m ³] | -20000 to +20000 | Read / Write |
| 2768 | Float / 4 | Tube Temperature Simulation Value | Set tube temperature simulation value. | 0 [°C] | -50 to +200 | Read / Write |
| | | | The tube temperature will be set to this value on all outputs if Simulation Tube Temperature is enabled | | | |
| 2770 | Float / 4 | Frame Temperature Simulation Value | Set frame temperature simulation value. The frame temperature will be set to this value on all outputs if Simulation Frame Temperature is enabled | 0 [°C] | -50 to +200 | Read / Write |
| 2772 | Float / 4 | Volumeflow Simulation Value | Set volume flow simulation value. The volume flow will be set to this value on all outputs, if Simulation Volume Flow is enabled | m³/s | -65 to +65 | Read / Write |
| 2780 | Unsigned / 2 | Enable Simulation | Activate simulation. Select one of the following values: Bit 0: Massflow Bit 1: Density Bit 2: Volumeflow Bit 3: Tube temperature Bit 4: Frame temperature | 0 | 0 to 63 | Read / Write |

A.3.9 Alarms

Table A- 19 Alarms

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|---------------|--|-------------------------|-------------|-----------------|
| 3012 | Unsigned / 4 | Alarm Group 1 | The following bit is set in case of active alarm: | - | - | Read Only |
| | | | Bit 4: Power Supply Malfunction Bit 6: Temperature Circuit Malfunction Bit 10: Measurement Out Of Range Bit 14: Calibration Malfunction Bit 15: Compensation Out Of Range Bit 17: Pickup Malfunction | | | |
| | | | Bit 23: Driver Malfunction Bit 26: Measurement Out Of Range Bit 27: Mass Flow Max Limit Exceeded | | | |
| | | | Bit 28: Volume Flow Max Limit Exceeded Bit 29: Density Max Limit Exceeded Bit 30: Min Tube Temp Exceeded Bit 31: Max Tube Temp Exceeded | | | |

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|---------------|---|-------------------------|-------------|-----------------|
| 3014 | Unsigned / 4 | Alarm Group 2 | The following bit is set in case of active alarm: | - | - | Read Only |
| | | | Bit 0: Min Frame Temp Exceeded Bit 1: | | | |
| | | | Max Frame Temp Exceeded Bit 2: Zero Sigma Limit Exceeded | | | |
| | | | Bit 3: Zero Offset Limit Exceeded | | | |
| | | | Bit 4: Quality Of Zero Point Conditions | | | |
| | | | Bit 5: Empty Pipe | | | |
| | | | Bit 6: Sensor Partially Filled | | | |
| | | | Bit 7: Storage Malfunction | | | |
| | | | Bit 8: System Internal | | | |
| | | | Bit 14: Unstable Measurement Conditions | | | |
| | | | Bit 15: Auto-filtering enabled | | | |
| | | | Bit 23: Sensor Startup | | | |

A.3.10 Quality codes for process values

Table A- 20 Quality code for process values

| Modbus address | Data type / Size [bytes] | Parameter | Description | Default value [unit] | Value range | Access level |
|-------------------|-----------------------------|---------------|----------------------------------|---|---|-----------------|
| 3014 | Unsigned / | Alarm Group 2 | Quality code of a measured value | Process values for quality codes Media temperature Density Volume flow Mass flow Quality code for each process value consist of 2 bits: Bit 24/25: Media temperature Bit 26/27: Density Bit 28/29: Volume flow Bit 30/31: Mass flow | 11 Good 01 Reserved 10 Simulation 00 Bad | Read Only |

Sensor dimension dependent default settings

B

Massflow

| Sensor dimension | Default value | Unit | Range |
|------------------|---------------|------|------------|
| Low Flow Cut-Off | | | |
| DN 15 | 0.00884 | kg/s | 0 to +8.84 |
| DN 25 | 0.0245 | kg/s | 0 to +24.5 |
| DN 50 | 0.0982 | kg/s | 0 to +98.2 |
| DN 80 | 0.251 | kg/s | 0 to +351 |

Volumeflow

| Sensor dimension | Default value | Unit | Range | | |
|------------------|---------------|------|---------------|--|--|
| Low Flow Cut-Off | | | | | |
| DN 15 | 0.00000884 | m³/s | 0 to +0.00884 | | |
| DN 25 | 0.0000245 | m³/s | 0 to +0.0245 | | |
| DN 50 | 0.0000982 | m³/s | 0 to +0.0982 | | |
| DN 80 | 0.000251 | m³/s | 0 to +0.251 | | |

Zero Point Adjustment

| Sensor dimension | Default value | Unit | Range | |
|--------------------------|---------------|------|-------|---|
| Standard Deviation Limit | | | | |
| DN 15 | 0.0004 | kg/s | | |
| DN 25 | 0.004 | kg/s | | |
| DN 50 | 0.015 | kg/s | | |
| DN 80 | 0.019 | kg/s | | |
| Offset Limit | | | | |
| DN 15 | 0.031944444 | kg/s | | |
| DN 25 | 0.010277778 | kg/s | | |
| DN 50 | 0.14444444 | kg/s | | |
| DN 80 | 0.37777778 | kg/s | | • |

Zero point adjustment

In the following the automatic zero point adjustment function is described. For further details, see Zero point adjustment.

Note

Preconditions

Before a zero point adjustment is initiated, the pipe must be flushed, filled and at an absolute flowrate of zero preferably also at operating pressure and temperature. Refer to appendix Zero point adjustment for more details.

Note

Change of parameters during zero point adjustment

Do not change any other parameter during the zero point adjustment procedure.

Automatic zero point adjustment

The device measures and calculates the correct zero point automatically.

The automatic zero point adjustment of the flowmeter is set by the following parameters:

- Duration (Modbus address 2135)
- Start Zero Point Adjustment (Modbus address 2180)

When zero adjust is initiated by selecting **Start Zero Point Adjustment**, the massflow values are acquired and totalized for the configured period (Duration). The default zero point adjustment period (30 s.) is normally sufficient for a stable zero point measurement.

Note

Extremely low flow quantity

If the flow quantity is extremely small, extremely precise measurement is necessary. In this case, a long zero point adjustment period can be selected for improved zero point adjustment.

Zero point calculation

During zero point adjustment, an average value is automatically calculated using the following formula:

Zero Point Offset Value

Average of N flow values

$$\overline{x} \equiv \frac{\sum_{i=1}^{N} x_i}{N}$$

 \mathbf{x}_{i} is an instantaneous flow value sampled in the time domain

N = Number of samples during zero point adjustment

The offset value must be within the determined **Zero Point Offset Limit** (Modbus address 2140).

Note

Exceeded zero point offset limit

If the offset value is greater than the configured limit, proceed as follows:

- Check that the tube is completely filled and that the flowrate is absolute zero.
- Check the validity of the configured zero point offset limit.
- · Repeat the zero point adjustment.

Zero point standard deviation

After completion of the procedure, the standard deviation is calculated in accordance with the following formula:

Zero Point Standard Deviation

Standard deviation of N values

$$s = \sqrt{\frac{\sum_{i=1}^{N} (x_i - \overline{x})^2}{N - 1}} = \sqrt{\frac{-N\overline{x}^2 + \sum_{i=1}^{N} x_i^2}{N - 1}}$$

The standard deviation contains important feedback on the homogeneity of the fluid, for example on the presence of bubbles or particles.

The standard deviation must be within the determined **Standard Deviation Limit** (Modbus address 2138).

Note

Exceeded standard deviation limit

If the standard deviation is greater than the configured limit, proceed as follows:

- Check that the tube is completely filled and that the flow rate is absolute zero.
- Check that the installation is vibration-free.
- Check the validity of the configured standard deviation limit in parameter 2.6.4 Standard Deviation Limit.
- Repeat the zero point adjustment.

Successful automatic zero point adjustment

If the new zero point offset value is valid, it is automatically stored as the new zero point for the sensor. It remains stored in the case of a power failure.

Manual zero point adjustment

In case an automatic zero point adjustment cannot be performed, it is possible to do a manual zero point adjustment by entering the zero point offset value.

- 1. Select Modbus address 2132 **Zero Point Adjustment** and set the value to 1 = **Manual Zero Point Adjustment**.
- 2. Select Modbus address 2133 **Manual Zero Point Offset** and enter the desired offset value.

See also

Zero point adjustment (Page 141)

CRC calculation

The Cyclical Redundancy Checking (CRC) field is two bytes, containing a 16-bit binary value. The CRC value is first generated by the transmitting device, which appends the CRC to the message. The receiving device recalculates a CRC during receipt of the message, and compares the calculated value to the actual value it received in the CRC field. If the two values are not equal an error occurs.

In the following a short text description of how the CRC is calculated is provided. This description is then followed by a C programming example.

CRC calculation

- 1. Load a 16-bit register with FFFF hex (all 1's). Call this the CRC register.
- 2. Exclusive OR the first 8-bit byte of the message with the low-order byte of the 16-bit CRC register, putting the result in the CRC register.
- 3. Shift the CRC register one bit to the right (toward the LSB), zero–filling the MSB. Extract and examine the LSB.
- 4. (If the LSB was 0): Repeat Step 3 (another shift). (If the LSB was 1): Exclusive OR the CRC register with the polynomial value 0xA001 (1010 0000 0000 0001).
- 5. Repeat Steps 3 and 4 until 8 shifts have been performed. When this is done, a complete 8-bit byte will have been processed.
- 6. Repeat Steps 2 through 5 for the next 8-bit byte of the message. Continue doing this until all bytes have been processed.
- 7. The final content of the CRC register is the CRC value.
- When the CRC is placed into the message, its upper and lower bytes must be swapped as described below.

Placing the CRC into the Message

When the 16-bit CRC (two 8-bit bytes) is transmitted in the message, the low-order byte will be transmitted first, followed by the high-order byte.

For example, if the CRC value is 1241 hex (0001 0010 0100 0001):

| Addr | Func | Data count | Data n | Data n+1 | Data n+2 | Data n+x | CRC LO | CRC HI |
|------|------|------------|--------|----------|----------|----------|--------|--------|
| | | | | | | | 0x41 | 0x12 |

CRC programming example

```
/* Table of CRC values for high-order byte */
static __flash unsigned char auchCRCHi[] = {
0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80,
0x41, 0x00, 0xC1, 0x81,
```

```
0x40, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1,
0x81, 0x40, 0x01, 0xC0,
0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00,
0xC1, 0x81, 0x40, 0x01,
0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
0x01, 0xC0, 0x80, 0x41,
0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81,
0x40, 0x00, 0xC1, 0x81,
0x40, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0,
0x80, 0x41, 0x01, 0xC0,
0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01,
0xC0, 0x80, 0x41, 0x01,
0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
0x00, 0xC1, 0x81, 0x40,
0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80,
0x41, 0x00, 0xC1, 0x81,
0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1,
0x81, 0x40, 0x01, 0xC0,
0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00,
0xC1, 0x81, 0x40, 0x01,
0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40,
0x01, 0xC0, 0x80, 0x41,
0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80,
0x41, 0x00, 0xC1, 0x81,
0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1,
0x81, 0x40, 0x01, 0xC0,
0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01,
0xC0, 0x80, 0x41, 0x01,
0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40,
0x01, 0xC0, 0x80, 0x41,
0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80,
0x41, 0x00, 0xC1, 0x81,
0x40
} ;
/* Table of CRC values for low-order byte */
static flash char auchCRCLo[] = {
0x00, 0xC0, 0xC1, 0x01, 0xC3, 0x03, 0x02, 0xC2, 0xC6, 0x06, 0x07,
0xC7, 0x05, 0xC5, 0xC4,
0x04, 0xCC, 0x0C, 0x0D, 0xCD, 0x0F, 0xCF, 0xCE, 0x0E, 0x0A, 0xCA,
0xCB, 0x0B, 0xC9, 0x09,
0x08, 0xC8, 0xD8, 0x18, 0x19, 0xD9, 0x1B, 0xDB, 0xDA, 0x1A, 0x1E,
0xDE, 0xDF, 0x1F, 0xDD,
0x1D, 0x1C, 0xDC, 0x14, 0xD4, 0xD5, 0x15, 0xD7, 0x17, 0x16, 0xD6,
0xD2, 0x12, 0x13, 0xD3,
0x11, 0xD1, 0xD0, 0x10, 0xF0, 0x30, 0x31, 0xF1, 0x33, 0xF3, 0xF2,
0x32, 0x36, 0xF6, 0xF7,
0x37, 0xF5, 0x35, 0x34, 0xF4, 0x3C, 0xFC, 0xFD, 0x3D, 0xFF, 0x3F,
0x3E, 0xFE, 0xFA, 0x3A,
0x3B, 0xFB, 0x39, 0xF9, 0xF8, 0x38, 0x28, 0xE8, 0xE9, 0x29, 0xEB,
0x2B, 0x2A, 0xEA, 0xEE,
0x2E, 0x2F, 0xEF, 0x2D, 0xED, 0xEC, 0x2C, 0xE4, 0x24, 0x25, 0xE5,
0x27, 0xE7, 0xE6, 0x26,
0x22, 0xE2, 0xE3, 0x23, 0xE1, 0x21, 0x20, 0xE0, 0xA0, 0x60, 0x61,
0xA1, 0x63, 0xA3, 0xA2,
```

```
0x62, 0x66, 0xA6, 0xA7, 0x67, 0xA5, 0x65, 0x64, 0xA4, 0x6C, 0xAC,
0xAD, 0x6D, 0xAF, 0x6F,
0x6E, 0xAE, 0xAA, 0x6A, 0x6B, 0xAB, 0x69, 0xA9, 0xA8, 0x68, 0x78,
0xB8, 0xB9, 0x79, 0xBB,
0x7B, 0x7A, 0xBA, 0xBE, 0x7E, 0x7F, 0xBF, 0x7D, 0xBD, 0xBC, 0x7C,
0xB4, 0x74, 0x75, 0xB5,
0x77, 0xB7, 0xB6, 0x76, 0x72, 0xB2, 0xB3, 0x73, 0xB1, 0x71, 0x70,
0xB0, 0x50, 0x90, 0x91,
0x51, 0x93, 0x53, 0x52, 0x92, 0x96, 0x56, 0x57, 0x97, 0x55, 0x95,
0x94, 0x54, 0x9C, 0x5C,
0x5D, 0x9D, 0x5F, 0x9F, 0x9E, 0x5E, 0x5A, 0x9A, 0x9B, 0x5B, 0x99,
0x59, 0x58, 0x98, 0x88,
0x48, 0x49, 0x89, 0x4B, 0x8B, 0x8A, 0x4A, 0x4E, 0x8E, 0x8F, 0x4F,
0x8D, 0x4D, 0x4C, 0x8C,
0x44, 0x84, 0x85, 0x45, 0x87, 0x47, 0x46, 0x86, 0x82, 0x42, 0x43,
0x83, 0x41, 0x81, 0x80,
0x40
} ;
unsigned short int CRC16 (unsigned char *puchMsq, unsigned short int
usDataLen)
   unsigned char uchCRCHi = 0xFF; /* high byte of CRC initialized */
   unsigned char uchCRCLo = 0xFF; /* low byte of CRC initialized */
   unsigned uIndex ;
                                   /* will index into CRC lookup
table */
   while(usDataLen--)
                                   /* pass through message buffer */
      uIndex = uchCRCHi ^ *puchMsg++ ; /* calculate the CRC */
      uchCRCHi = uchCRCLo ^ auchCRCHi[uIndex] ;
      uchCRCLo = auchCRCLo[uIndex] ;
   #ifdef INTEL LIKE PROCESSOR
     return (unsigned short int)((uchCRCLo << 8) | uchCRCHi);</pre>
     return (unsigned short int) ((uchCRCHi << 8) | uchCRCLo);</pre>
   #endif
}
```

See also

There are many ways of calculating a CRC checksum. For further information, please refer to the Modbus Organisation Website (http://www.modbus.org), where detailed descriptions and programming examples are available.

Exception codes

E.1 Exception handling

There is a defined set of exception codes to be returned by slaves in the event of problems. All exceptions are signalled in the response from the slave by adding 80 hex to the function code of the request and following this byte by an exception code.

Table E- 1 Exception codes

| Exception code (dec) | Exception text | Description |
|----------------------|----------------------|---|
| 01 | Illegal function | The function code received in the query is not an allowable action for the slave |
| 02 | Illegal data address | The data address received in the query is not an allowable address for the slave. |
| 03 | Illegal data value | A value contained in the query data field is not an allowable value for the addressed location. This may indicate a fault in the structure of the remainder of a complex request, such that the implied length is incorrect or the number of registers is too high. |
| 04 | Slave device failure | The request is for some other reason not acceptable. It may e.g. indicate that the data value to write is evaluated to be beyond limits. |

E.1 Exception handling

Float definition

F.1 Float definition

Stuffing of multi-byte numbers into multiple Modbus RTU registers differs among Modbus devices. "Big Endian" and "Little Endian" describe the order or sequence in which multi-byte data is stored in memory. This device uses (IEEE 741) a "Big-Endian" representation for addresses and data items as default. This means that when a numerical quantity larger than a single byte is transmitted, the MOST significant byte is sent first.

Float transmission order can be changed as described in Float transmission (Page 77).

Following example describes the Big-Endian representing of float IEEE741.

| Value (decimal) | IEEE FP B MSB | Register N | | Register N + 1 | |
|-----------------|---------------|------------|-----|----------------|-----|
| | LSB | high | low | high | low |
| 100.0 | 42C80000h | 42h | C8h | 00h | 00h |
| 55.32 | 425D47AEh | 42h | 5Dh | 47h | AEh |
| 2.0 | 4000000h | 40h | 00h | 00h | 00h |
| 1.0 | 3F800000h | 3Fh | 80h | 00h | 00h |
| -1.0 | BF800000h | bFh | 80h | 00h | 00h |

Read absolute massflow (4.03001)

Query: 01,03,0B,B8,00,02,46,0A Response: 01,03,04,40,C3,52,93,62,C8

Absolute massflow = 6.10383 kg/s

F.1 Float definition

Glossary

Coriolis

The Coriolis effect is an apparent deflection of moving objects from a straight path when they are viewed from a rotating frame of reference. The effect is named after Gaspard-Gustave Coriolis, a French scientist who described it in 1835. The Coriolis effect is caused by the Coriolis force, which appears in the equation of motion of an object in a rotating frame of reference.

CRC Cyclic Redundancy Check

Cyclic Redundancy Check is used for error checking in Modbus RTU.

EHDG

European Hygienic Engineering & Design Group was founded in 1989 to promote hygienic engineering in the European food industry. EHEDG provides practical guidance on hygienic engineering aspects of manufacturing safe and whole some foods.

EMC

Electromagnetic compatibility (EMC) is the branch of electrical sciences which studies the unintentional generation, propagation and reception of electromagnetic energy with reference to the unwanted effects (Electromagnetic Interference, or EMI) that such energy may induce. The goal of EMC is the correct operation, in the same electromagnetic environment, of different equipment which use electromagnetic phenomena, and the avoidance of any interference effects.

IP

An IP (Ingress Protection) number is used to specify the environmental protection of enclosures around electronic equipment. These ratings are determined by specific tests. The IP number is composed of two numbers, the first referring to the protection against solid objects and the second against liquids. The higher the number, the better the protection. For example, in IP67 the first Number (6) means that the device is totally protected against dust, and the second (7) that it is protected against the effect of immersion between 15cm and 1m

Modbus

Modbus is a serial communications protocol intended for use with programmable logic controllers (PLCs). Modbus allows for communication between many devices connected to the same network, for example a system that measures temperature and humidity and communicates the results to a computer. Modbus is often used to connect a supervisory computer with a remote terminal unit (RTU) in supervisory control and data acquisition systems.

Modbus address

Throughout this document the following notation is used to address Modbus RTU registers:

4: 1234: Holding register 1234 (addressed in messages by 1233)

4: 54321: Holding register 54321 (addressed in messages by 54320)

34567: The address of a holding register as specified in a message

Modbus master

A Modbus master is a Modbus device which is able to access data in one or more connected Modbus slaves.

Modbus slave

A Modbus slave is a Modbus device which is able to respond to requests from a single Modbus master.

NAMUR

Normenarbeitsgemeinschaft für Meß- und Regeltechnik in der Chemischen Industrie (NAMUR). NAMUR is a group representing the interests of the chemical industry which create standards for instrumentation and electrical devices used in industrial plants.

PED

The Pressure Equipment Directive (97/23/EC) is the legislative framework on European level for equipment subject to a pressure hazard. It was adopted by the European Parliament and the European Council in May 1997 and has been obligatory throughout the European Union since May 2002.

Zero point adjustment

In order to measure accurately with a measuring instrument it is important that zero and gain have been calibrated. All Coriolis sensors are calibrated before they are sent out to customers. However, Coriolis sensors are very sensitive, and several factors might move the zero point, for example installation, pressure, temperature and even very small vibrations coming from the process. All these factors are customer specific and can't be simulated at the factory. Therefore Siemens recommends to carry out a zero point adjustment before use.

Index

| A | D | | |
|--|----------------------------|--|--|
| Accuracy | Design, 22 | | |
| Density, 93 | Design, sensor, 99 | | |
| Massflow, 93 | Designated use, 91 | | |
| Temperature, 93 | Device | | |
| Approval nameplate | Identification, 9, 11, 12 | | |
| Sensor, 12 | Diagnose | | |
| | with SIMATIC PDM, 85 | | |
| C | Dimensions and weight, 117 | | |
| Cable specifications, 37, 101 | Document history, 7 | | |
| CE mark, 15 | _ | | |
| Certificates, 15 | E | | |
| Certificates and approvals, 102 | Electrical connection | | |
| Characteristics | Cable specifications, 37 | | |
| Density calibration, 134 | In hazardous area, 37 | | |
| Massflow calibration, 134 | Empty tube monitoring, 72 | | |
| Sensor, 133 | Exception codes, 149 | | |
| Volumeflow calibration, 133 | F | | |
| Commissioning | Flow direction, 29 | | |
| Steps, 52 | | | |
| Communication | Н | | |
| Modbus, 132 | Handling, 32 | | |
| Communication parameters | Hazardous area | | |
| Setup, 54 | Electrical connection, 37 | | |
| Compliance | Laws and directives, 15 | | |
| European directives, 15 | Hazardous locations | | |
| Contact person, 14 | Approvals, 17 | | |
| Coriolis | Hot swappable, 110 | | |
| Applications, 21 | Hotline, 82 | | |
| Measurement principle, 25 | • | | |
| Correct usage, (See improper device modifications) | I | | |
| Cross talk, 33, 88 | Identification | | |
| Customer Support Hotline, 82 | Sensor, 123 | | |

| Identification nameplate | Modbus | | | |
|-----------------------------------|-------------------------------------|--|--|--|
| Sensor, 9 | Features, 23 | | | |
| Improper device modifications, 16 | Frame, 24 | | | |
| Installation | Network, 54 | | | |
| Drop line, 31 | Organization Website, 24 | | | |
| Gas, 29 | Technical data, 92 | | | |
| Incorrect, 88 | Technology, 24 | | | |
| Indoor/outdoor, 27 | Modbus holding registers | | | |
| Inlet / Outlet conditions, 29 | Alarms, 136 Characteristics, 133 | | | |
| Liquid, 29 | | | | |
| Location in the system, 28 | Communication, 132 | | | |
| Mounting of sensor, 32 | Identification, 123 | | | |
| Orienting the sensor, 30 | Maintenance & Diagnostics, 128, 138 | | | |
| Pressure guard, 34 | Process values, 123 | | | |
| Safety instructions, 27 | Setup, 124 | | | |
| Upstream / Downstream, 29 | Simulation, 135 | | | |
| Installation torques, 102 | Totalizer, 126 | | | |
| Internet | Mounting, (See Installation) | | | |
| Contact person, 14, 83 | В | | | |
| Flow documentation, 14 | PDM Commissioning steps, 52 | | | |
| Modbus Organization, 24 | | | | |
| Support, 82 | | | | |
| | Zero point adjustment, 65 | | | |
| L | Performance, 93 | | | |
| Low flow cut-off, 71, 88 | Power supply, 100, 100 | | | |
| Low Mass Flow Cut-Off, 72 | Pressure | | | |
| Low Volume Flow Cut-Off, 72 | Safety instructions, 27 | | | |
| M | Process noise damping, 73 | | | |
| Maintenance, 81 | Process values, 69, 123 | | | |
| Maintenance and Diagnostics | Process variables, 91 | | | |
| Access level, 128, 138 | R | | | |
| Aerated flow, 129 | Rated operating conditions, 94 | | | |
| Device diagnostics, 129 | Recalibration, 82 | | | |
| Maintenance, 128 | Reference conditions, 93 | | | |
| Zero point adjustment, 130 | Repair, 81 | | | |

S

Safety

Sensor installation, 27

Scope of delivery, 9

Sensor orientation, (See Installation)

Service, 81, 82

Service information, 81

Setup

Density, 125

Massflow, 125

Operating conditions, 124

Volume flow, 125

Signal processing, 26

Simulation, 76, 135

Specification nameplate

Sensor, 11

Support, 82

Symbols, (Refer to warning symbols)

System design, 91

System integration, 23, 43

Т

Technical data, 91

Temperature specifications, 18

Termination DIP switches, 42

Test certificates, 15

Totalizer, 126

U

Unicast communication mode, 24

V

Vibrations, 33, 88

W

Warning symbols, 17

Ζ

Tel.: 03303 / 504066

Fax: 03303 / 504068

Zero point adjustment, 65, 70, 141

Automatic, 70, 141

via PDM, 65