



## testo 635






### Humidity/temperature/pressure dew point measuring instrument

Short manual




 


 






en

This short manual provides an overview of important functions of the product. Please be sure to read the instruction manual before using the product!

## Button functions

Button	Functions
	Function button (3x): The function depends on the button assignment at the time
	Change display of the 1st reading line In configuration mode: Increase value (press and hold to increase rapidly), select option
	Change display of the 2nd reading line In configuration mode: Decrease value (press and hold to decrease rapidly), select option
	Print data 635-1 only: If the Cyclical Printing function is activated, the programmed measuring program is started.
	Switch instrument on, switch display light on/off; switch instrument off (press and hold)

## Function buttons (Function dependant on profile and setting)

Button	Functions
	Open (main) menu
	Enter confirmation
	Cancel
 / 	Hold value/display current measurement value
	Reset max./min. values to current measurement value
	Open menu item "Multi-point mean calculation"
	Open menu item "Measuring program" (635-2only)
	Start test series (635-2 only)
	End test series (635-2 only), End Cyclical Print (635-1 only)
	Save values (635-2 only)
	Open menu item "Material"
	Open menu item "Radio"




## Menu overview testo 635-1

Profile	menu items	Function
Standard	Calc.	Calculate water content , dew point, psychrometric temperature, De/activate differential temperature, set "Alpha" parameter
	Material	Activate material characteristic curves
	cyc. Print	De/activate cycle printing
Material	Mean	Time/point mean calculation
	Calc.	Calculate water content , dew point, psychrometric temperature, De/activate differential temperature, set "Alpha" parameter
	cyc. Print	De/activate cycle printing
RadioC	Calc.	Calculate water content , dew point, psychrometric temperature, De/activate differential temperature, set "Alpha" parameter
	Material	Activate material characteristic curves
	cyc. Print	De/activate cycle printing

## Menu overview testo 635-2

Profile	menu items	Function
Standard	Memory	Activate/set measurement locality, print report, delete store
	Meas Prog.	Set/ de/activate measurement program
	Mean	Time/point mean calculation
	Calc.	Calculate water content , dew point, psychrometric temperature, De/activate differential temperature, set "Alpha" parameter
	Material	Activate material characteristic curves
Material	Memory	Messort aktivieren / anlegen, Protokolle drucken, Speicher löschen
	Meas Prog.	Set/ de/activate measurement program
	Mean	Time/point mean calculation
	Calc.	Calculate water content , dew point, psychrometric temperature, De/activate differential temperature, set "Alpha" parameter
	Material	Activate material characteristic curves
RadioC	Memory	Activate/set measurement locality, print report, delete store
	Meas Prog.	Set/ de/activate measurement program
	Mean	Time/point mean calculation
	Calc.	Calculate water content , dew point, psychrometric temperature, De/activate differential temperature, set "Alpha" parameter
	Material	Activate material characteristic curves

## Important displays

Display	Meaning
	Battery capacity (only for operation by battery/rechargeable battery): <ul style="list-style-type: none"> <li>4 segments in the battery symbol are lit: Instrument battery is fully charged</li> <li>No segments in the battery symbol are lit: Instrument battery is almost spent</li> </ul>
 (flashing)	Print function: Data are sent to the printer
	Measurement channel no.: Channel 1, channel 2. If a measurement channel is a radio channel, the radio symbol lights up as well as the measurement channel no.