



Flame Tracker Dry 325

Hazardous area – Class I, Division 2, Zone 2
Operation and Maintenance Manual

Applicable to part numbers:

RS-FS-9009-03

RS-FS-9009-03-25X

RS-FS-9009-03-173

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	ii	OF	8
RS-FS-9009 O&M Manual	REV.:	W		

FS-9009OM **Revision: W** **August 2025**

8499 Darrow Road

Twinsburg, OH 44087

	NO.:	FS-9009OM		
	PAGE:	iii	OF	8
RS-FS-9009 O&M Manual	REV.:	W		

This document and all information and expression contained herein are the property of Reuter-Stokes, LLC. and are provided to the recipient in confidence on a “need to know” basis. Your use of this document is strictly limited to a legitimate business purpose requiring the information contained therein. Your use of this document constitutes acceptance of these terms.

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	iv	OF	8
RS-FS-9009 O&M Manual	REV.:	W		

Copyright © 2025 Baker Hughes Company. All rights reserved.

Contains Proprietary Information.

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	v	OF	8
RS-FS-9009 O&M Manual	REV.:	W		

This page intentionally left blank.

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	vi	OF	8
RS-FS-9009 O&M Manual	REV.:	W		

CONTENTS

Contents.....	vi
List of Figures.....	vii
List of Tables	viii
Important Information	1
Warnings and Cautions	3
Overview	4
General Description	5
Specifications	6
Interconnect Cable.....	7
Mechanical Dimensions.....	9
Connector Pinout	10
Sensor.....	11
Installation	13
MI Cable Installation	16
Cool End Installation	18
Hot End Installation	20
Wiring To The Controller	24
Sensor Checkout	26
Controller Setup	27
Maintenance	28
Cleaning the Sensor Window	29
Condensation.....	30
Troubleshooting.....	31
Customer Support Centers	37

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	vii	OF	8
RS-FS-9009 O&M Manual	REV.:	W		

LIST OF FIGURES

FIGURE 1: INTERCONNECT CABLE, RIGHT ANGLE TYPE	7
FIGURE 2: FTD 325 MECHANICAL DIMENSIONS	9
FIGURE 3: RS-FS-9009-03-XXX WIRING DIAGRAM	12
FIGURE 4: 7F INSTALLATION EXAMPLE.....	14
FIGURE 5: 7EA INSTALLATION EXAMPLE.....	15
FIGURE 6: MAXIMUM RESISTANCE VS. OPERATING VOLTAGE	25
FIGURE 7: MARK V CONTROL SYSTEM TROUBLESHOOTING FLOW DIAGRAM.....	34
FIGURE 8: MARK VI AND GREATER CONTROL SYSTEM TROUBLESHOOTING FLOW DIAGRAM	35

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	viii	OF	8
RS-FS-9009 O&M Manual	REV.:	W		

LIST OF TABLES

TABLE 1: SENSOR DIFFERENCES	4
TABLE 2: AVAILABLE INTERCONNECT CABLES	8
TABLE 3: COOL END CONNECTOR PINOUT	10
TABLE 4: TROUBLESHOOTING	33

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	1	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

IMPORTANT INFORMATION

All content and material in this manual (including, without limitation, text, design, graphics, logos, icons, images, code and software, as well as the selection and arrangement thereof) is confidential and proprietary, the exclusive property of and owned by Reuter-Stokes, Inc. and is protected by copyright, trademark and other applicable laws. Any use of content and material in this manual, including but not limited to the modification, distribution, transmission, performance, broadcast, publication, uploading, licensing, reverse engineering, transfer or sale of, or the creation of derivative works from, any material, information, software, products or services obtained from the content and material in this manual, or use thereof for purposes competitive to Reuter-Stokes, Inc., is expressly prohibited.

While every attempt has been made to assure the completeness, accuracy and timeliness of the content and material in this manual, it is provided on an “as is” and “as available” basis. Reuter-Stokes, Inc. expressly disclaims all warranties of any kind, whether express or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose and any warranties that the content and material in this manual is non-infringing as well as warranties implied from a course of performance or course of dealing, the materials in this manual will be error-free, or that the materials in this manual will be complete, accurate or timely. No advice or information, obtained by you from Reuter-Stokes, Inc. or through the content and material in this manual shall create any warranty of any kind. Reuter-Stokes, Inc. does not make any warranties or representations regarding the use of the content and material in this manual in terms of its completeness, the use of the content, and material in this manual in terms of its completeness, correctness, accuracy, adequacy, usefulness, timeliness, reliability or otherwise.

	NO.:	FS-9009OM		
	PAGE:	2	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

You acknowledge and agree that you assume full responsibility for your use of the content and material in this manual. You acknowledge and agree that your use of the content and material in this manual is at your own risk. You acknowledge and agree that, to the fullest extent permitted by applicable law, Reuter-Stokes, Inc. will not be liable for any direct, indirect, punitive, exemplary, incidental, special, consequential or other damages arising out of or in any way related to the content and material in this manual, whether based on contract, tort, strict liability, or otherwise. This disclaimer applies, without limitation, to any damages or injury arising from any failure of performance, error, omission, your loss of profits, destruction, and any other tangible or intangible loss.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the design of this equipment may be impaired.

This instrument contains no operator serviceable parts and should be serviced by qualified personnel only.

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	3	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

WARNINGS AND CAUTIONS

Throughout this manual, when necessary, notes are used to identify considerations.

Definitions:



WARNING: IDENTIFIES INFORMATION ABOUT PRACTICES OR CIRCUMSTANCES THAT CAN CAUSE AN EXPLOSION IN A HAZARDOUS ENVIRONMENT, WHICH MAY LEAD TO PERSONAL INJURY OR DEATH, PROPERTY DAMAGE, OR ECONOMIC LOSS.



CAUTION: IDENTIFIES INFORMATION ABOUT PRACTICES OR CIRCUMSTANCES THAT CAN LEAD TO PERSONAL INJURY OR DEATH, PROPERTY DAMAGE, OR ECONOMIC LOSS. CAUTIONS HELP YOU IDENTIFY A HAZARD, AVOID A HAZARD, AND RECOGNIZE THE CONSEQUENCES.



NOTE: IDENTIFIES INFORMATION THAT IS CRITICAL FOR SUCCESSFUL APPLICATION AND UNDERSTANDING OF THE PRODUCT.

	NO.:	FS-9009OM		
	PAGE:	4	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

OVERVIEW

The information contained in this document is applicable to all models of the Reuter-Stokes (RS) Flame Tracker Dry 325 (FTD 325) listed on the title page. Differences between these models are shown in Table 1.

Model	Gain	Nominal Length of mineral insulated cable
RS-FS-9009-03	Standard	30 feet (9.1 m)
RS-FS-9009-03-25X	Increased Low Gain (ILG) ^(*)	30 feet (9.1 m)
RS-FS-9009-03-173	Increased Low Gain (ILG) ^(*)	14.4 feet (4.4 m)

Table 1: Sensor Differences

^(*) Gain is increased by roughly 2.5X for a given flame input signal until the output reaches between 11 and 12 mA, at which point the output is the same for all models.

	NO.:	FS-9009OM		
	PAGE:	5	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

GENERAL DESCRIPTION

The Flame Tracker Dry 325 (FTD 325) is an ultraviolet (UV) light sensor used to measure the intensity of UV radiation emitted by the flame in a combustion chamber. When used in combination with appropriate threshold values, the sensor indicates if the flame is on or off. It is a key sensor for safe operation. RS flame sensors use a silicon carbide photodiode that is tuned to the 310 nm peak that is prominent in hydrocarbon and hydrogen flames. This results in high sensitivity and excellent detection of a wide range of fuels. UV sensors are inherently fast. Unlike IR sensors, they do not respond to black body radiation. RS flame sensors do not need to use flame flicker analysis and are thus faster than IR sensors. In addition, the RS flame sensors operate at low power, nominal 24 VDC and 4–20 mA, which enables safe and easy installation in hazardous areas.

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	6	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

SPECIFICATIONS

Mechanical

External Material	300 series stainless steel
Mechanical Interface – Hot End	3/4" NPT female, 2-1/4" union nut
Mechanical Interface –Cool End	2-1/2" pipe clamp for 1-5/8" strut channel
Cool End Connector	MIL SPEC MIL-C-38999 Series III size 15 (5 pin)
Sensing Element:	Silicon Carbide photodiode
Sensor Window:	Sapphire

Operating

Sensitivity:	>5 mA @ 1×10^{10} photons/in²/sec. @ 310 nm for RS-FS-9009-03 >6.25 mA @ 1×10^{10} photons/in²/sec. @ 310 nm for RS-FS-9009-03-25X and RS-FS-9009-03-173
Output:	4 – 20 mA dc, Max < 21 mA
Response time	<175 milliseconds
Power Requirements:	12 – 30 VDC @ > 100 mA, 24 VDC nominal Terminals isolated from case per EN 60079-11 Section 6.3.12 (500 V_{r.m.s.})
Cool End temperature (ambient):	-51°C to 140°C (-60°F to 284°F) operating
Hot end temperature (ambient)	-51°C to 325°C (-60°F to 617°F)
Relative Humidity	100% non-condensing
Process Pressure	400 psig (2.8 MPa)

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	7	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

INTERCONNECT CABLE

The recommended cable to attach the flame sensor to the junction box is the RS-E2-0285PXXX. A right angle cable version is shown in **Error! Reference source not found..** Dimensions shown are in inches (mm) and are reference only.

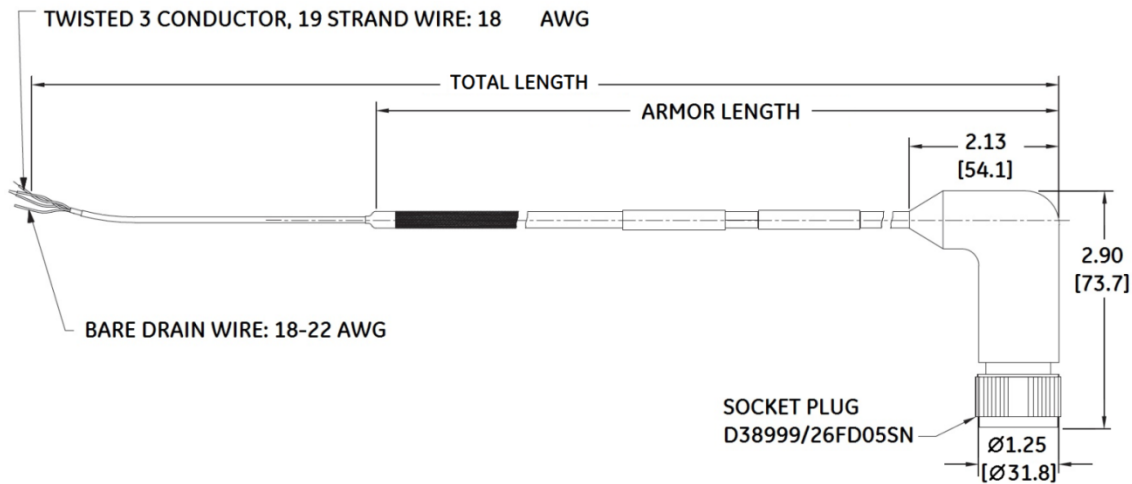


Figure 1: Interconnect Cable, right angle type

Connector: MIL-DTL-38999 series III, shell size 15, 5 #16 pins

Voltage (max): 300 VRMS

Temperature (max): 250°C (482°F)

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	8	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

The interconnect cables offered by RS are listed in Table 2: Available Interconnect Cables

2.

Interconnect Cable Part Number	Total Length ft [m]	Armor Length in [cm]	Connector Type
RS-E2-0285P001	60-62 [18.3-18.9]	36 [91.4]	Right Angle
RS-E2-0285P003	60-62 [18.3-18.9]	75 [190.5]	Right Angle
RS-E2-0285P004	120-123 [36.6-37.2]	36 [91.4]	Right Angle
RS-E2-0285P021	15-17 [11.9-12.50]	36 [91.4]	Right Angle
RS-E2-0285P011	60-62 [18.3-18.9]	36 [91.4]	Straight
RS-E2-0285P012	120-122 [36.6-37.2]	36 [91.4]	Straight
RS-E2-0285P013	60-62 [18.3-18.9]	96 [243.8]	Straight
RS-E2-0285P010	60-62 [18.3-18.9]	120 [304.8]	Straight

Table 2: Available Interconnect Cables

 Reuter-Stokes a Baker Hughes business	NO.:		FS-9009OM	
	PAGE:		9	OF 38
RS-FS-9009 O&M Manual	REV.:		W	

MECHANICAL DIMENSIONS

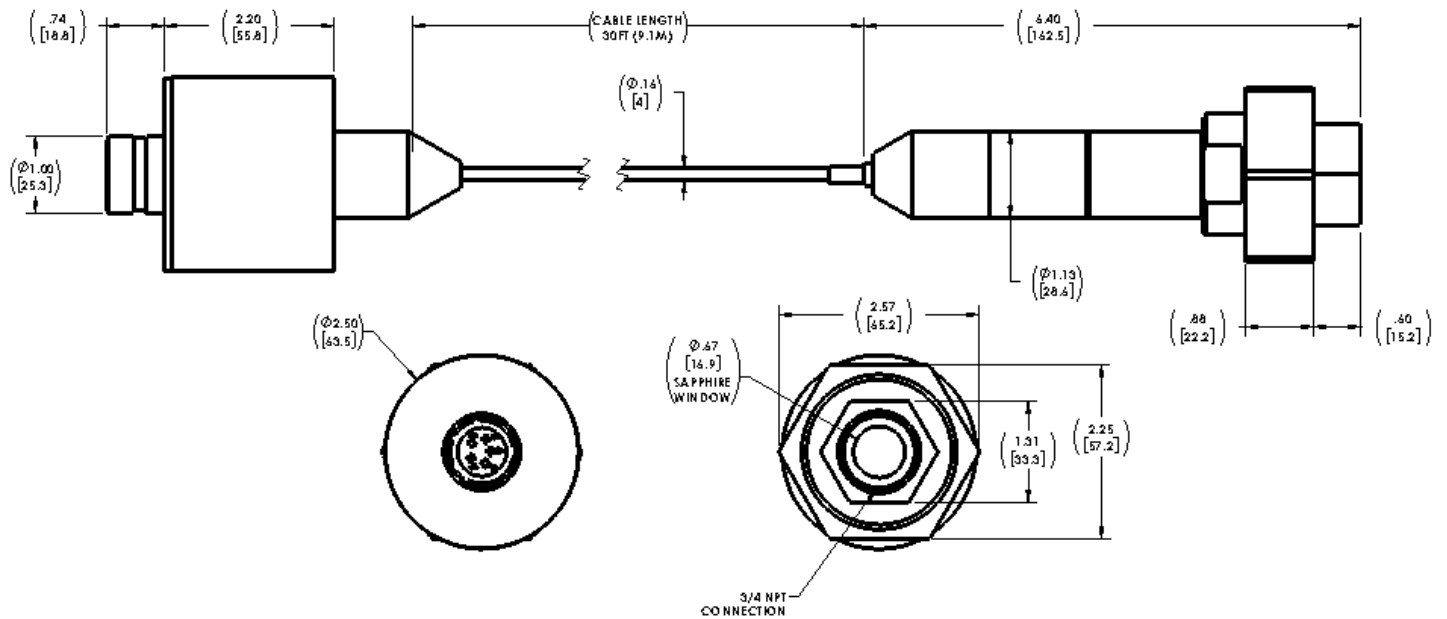


Figure 2: FTD 325 Mechanical Dimensions

Dimensions in inches [millimeters]

Dimensions are for reference only

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	10	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

CONNECTOR PINOUT

The pinout for the MIL SPEC connector on the cool end is shown in Table 3: Cool End Connector Pinout

3.

Pin	Signal	Wire Color for RS-E2-0285PXXX cable
A	-	Black
B	+	White
C	Ground	Green
D	Not used	n/a, pin not present
E	Not used	n/a, pin not present

Table 3: Cool End Connector Pinout

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	11	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

SENSOR

Figure 3: RS-FS-9009-03-XXX Wiring Diagram

shows a block diagram of the FTD 325. The sensor is comprised of a hot end, a cool end, and a mineral insulated (MI) cable that connects the two ends. The sensor is a single piece and includes no connectors between the three major components. Inside the Hot End a lens focuses UV light from the combustion reaction onto a silicon carbide photodiode, which converts it into an electrical current in proportion to the intensity of the UV light. The photodiode is connected, via the MI cable, to an amplifier in the Cool End assembly. The amplifier has a high initial gain, which automatically shifts to a lower gain in order to accommodate a wide range of input light levels without saturating. The sensor regulates the supply current in proportion to the intensity of the UV light. Both power and signal are transmitted on the same two wires on the output of the Cool End. The sensor can be powered from a DC voltage between 12 and 30 VDC, nominal 24 VDC.



Flame Tracker Dry 325

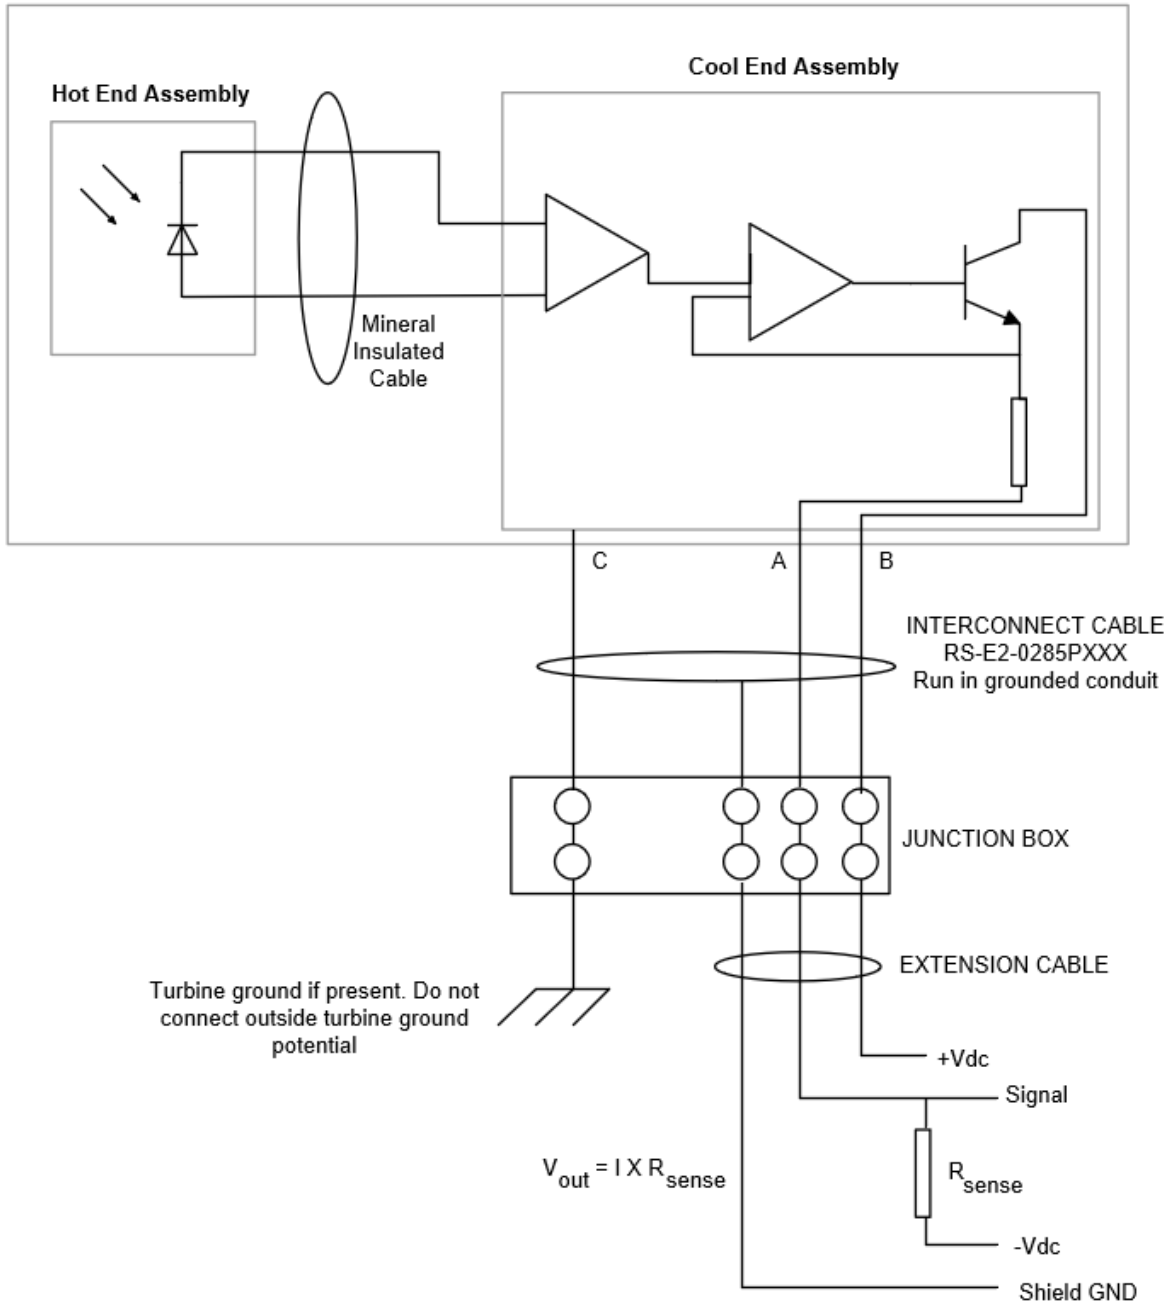


Figure 3: RS-FS-9009-03-XXX Wiring Diagram

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	13	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

INSTALLATION



WARNING: Do not disconnect the sensor while the circuit is energized (live) unless the area is known to be non-hazardous.



AVERTISSEMENT! risque d'explosion. Ne pas brancher ni debrancher sous tension.



NOTE: DO NOT INSTALL A FLAME SENSOR THAT HAS A CRACKED WINDOW, DAMAGED THREADS, OR ONE THAT HAS BEEN DISASSEMBLED.



NOTE: MAINTAIN A MINIMUM BEND RADIUS OF 6 INCHES FOR ALL BENDS OF THE MI CABLE.



NOTE: STORE SENSORS IN SHIPPING CONTAINER PROVIDED. KEEP IN PLASTIC BAG WITH DESICCANT, THE DUST CAP IS TO REMAIN INSTALLED ON THE COOL END CONNECTOR UNTIL TIME OF INSTALLATION.

The Hot End of the FTD 325 is mounted onto the sight tubes of the combustion chambers. The MI cable must be supported every three feet. The Cool End is mounted in a location where ambient temperature will not exceed the value shown in the specifications above. RS offers kits that include installation hardware for the hot end, MI cable, and cool end. See **Error! Reference source not found.** for an example installation on a Frame 7F turbine.

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	14	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

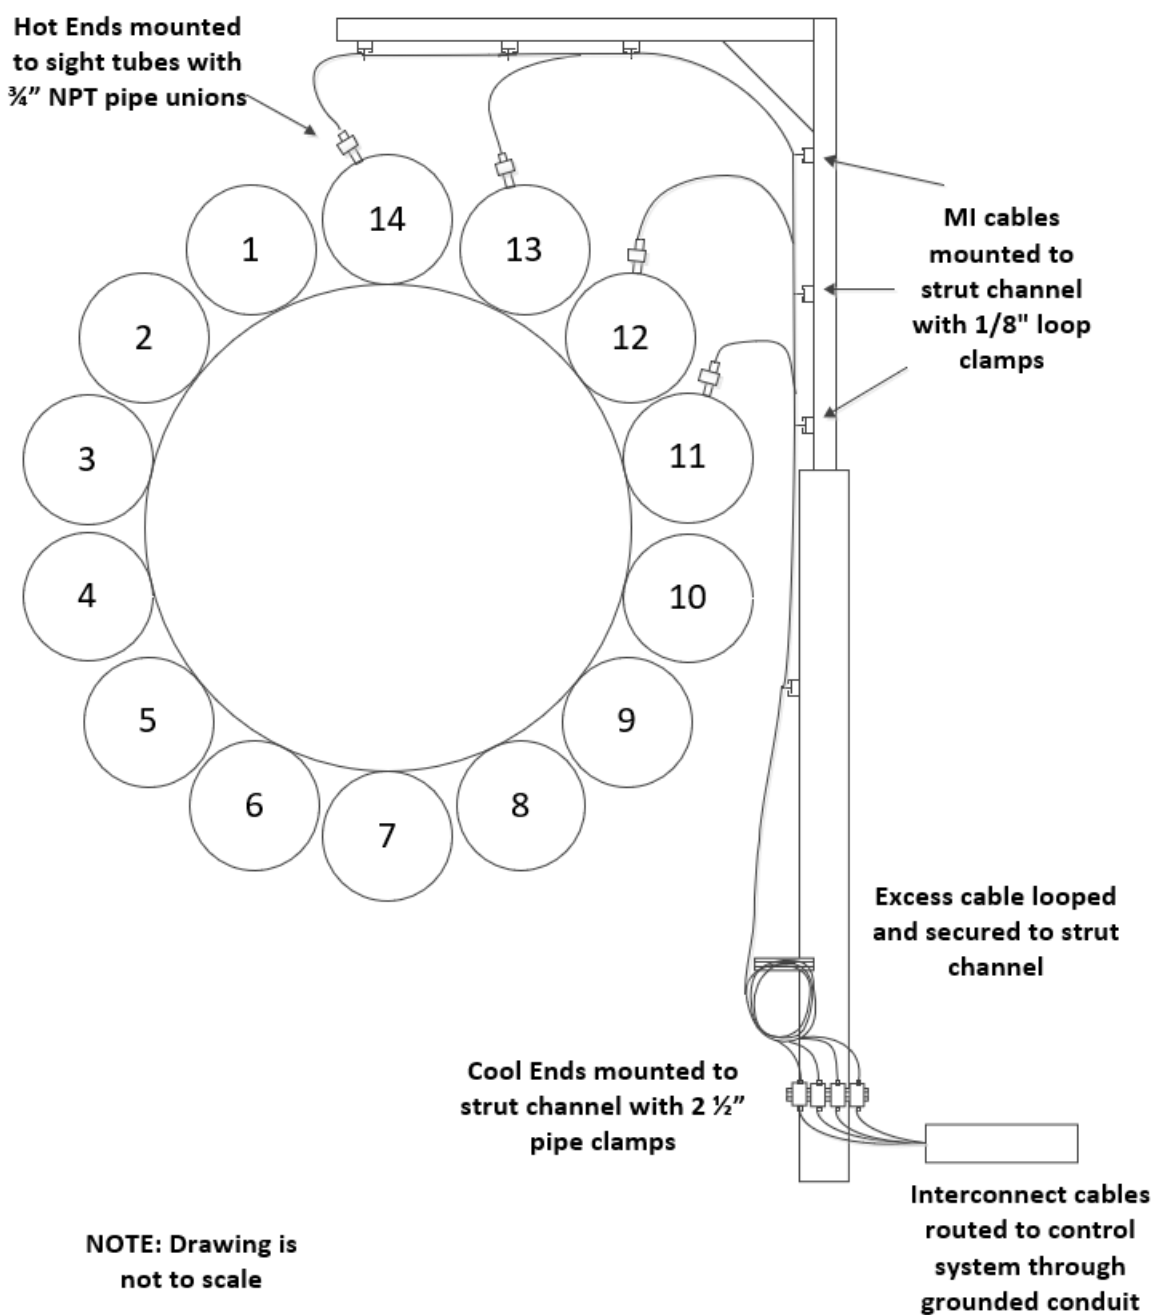


Figure 4: 7F Installation Example



Note: Guide the Cool End down to the Cool End mounting location. Use care in handling the Cool End during the installation process to protect the electronics located inside the Cool End.

Error! Reference source not found. shows one possible installation on a 7EA turbine. Before installing the cool ends, the user must ensure that maximum ambient temperatures for the cool ends do not exceed those listed in the Specifications.

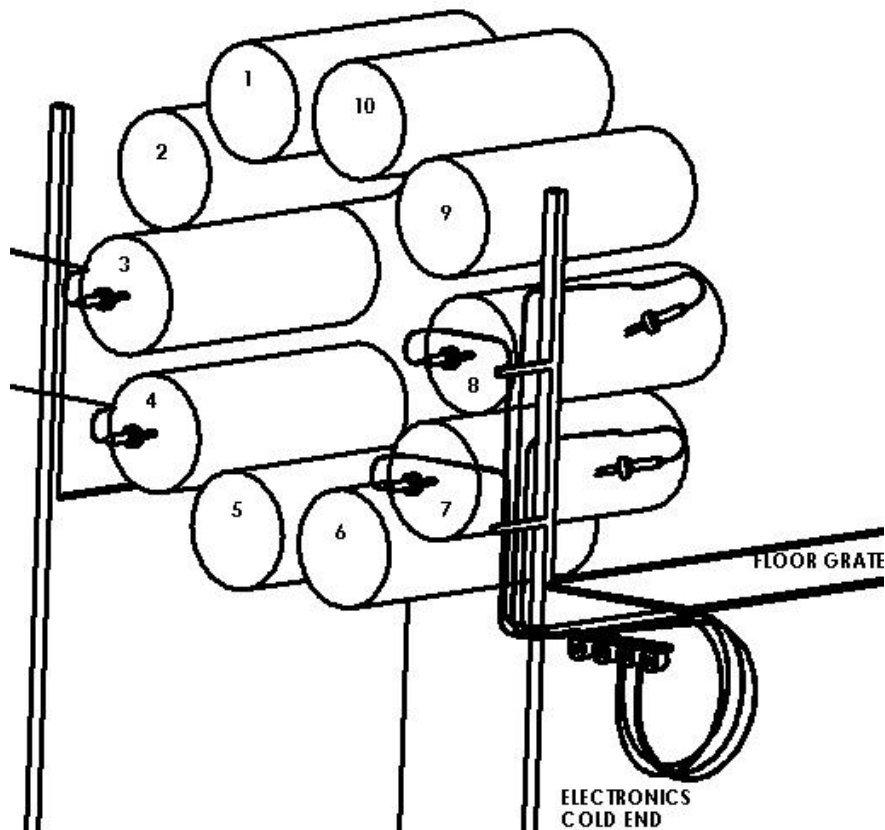


Figure 5: 7EA Installation Example

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	16	OF	38
RS-FS-9009 O&M Manual	REV.:	W		


MI CABLE INSTALLATION

Mount the *sensor cable* to the strut channel using 1/8" cushioned loop clamps with silicone cushions. The silicone cushions prevent metal-to-metal contact under vibration, which can damage the MI cable. Vibration occurs at the hot end because the combustion chamber and sight tube vibrate. See the images below for the recommended cable mounting.




IMPORTANT: *The cable must be secured at least every 3ft. The minimum bend radius of the cable is 6 inches.*

1. Place the loop clamp on the *sensor cable* and position it over the opening in the strut channel.

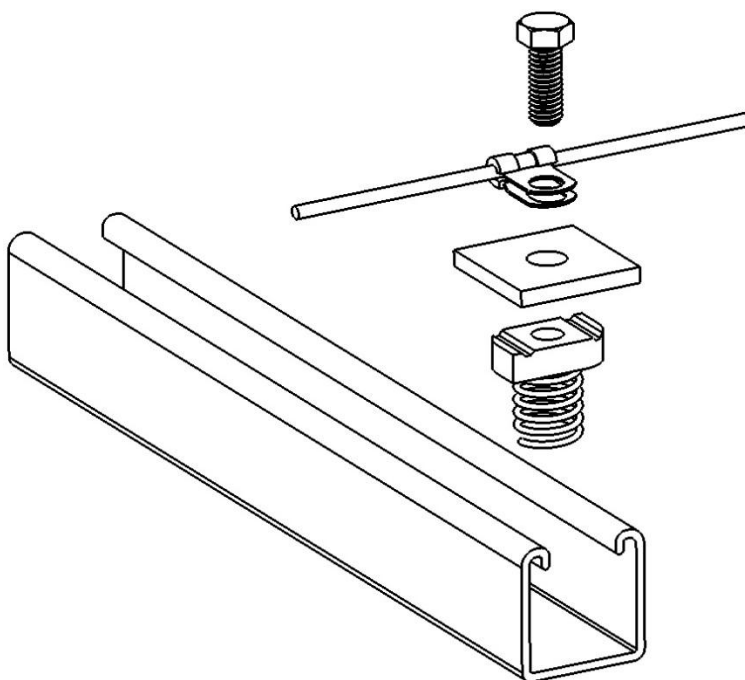

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	17	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

-
2. Place the mounting nut in the strut channel and secure the installation using a bolt.

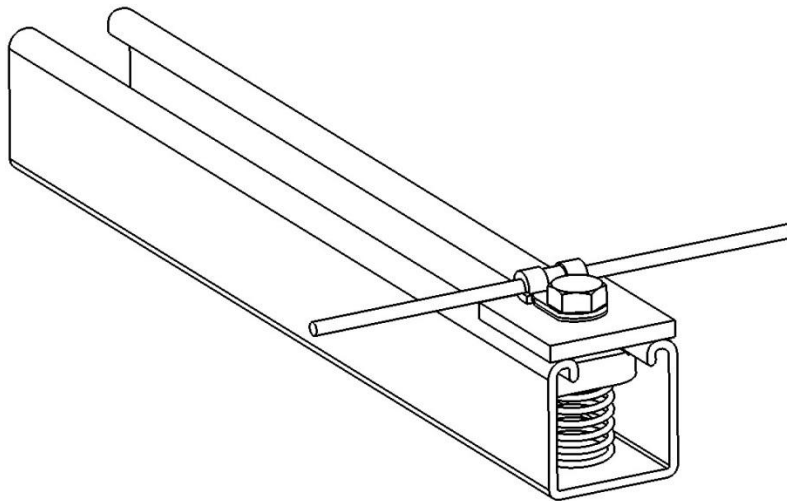


At the *Cool End*, the extra cable should be looped and mounted to a nearby strut channel using any convenient means.

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	18	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

COOL END INSTALLATION

The *Cool End* is to be mounted in a location where the ambient temperature does not exceed the maximum operating temperature listed in the Specifications section. In most cases, this is below the turbine on the pedestal or I-beam on F-Class gas turbines or under the foot grating on E-Class gas turbines. Mount the *Cool End* to the strut channel using a 2-1/2" pipe clamp.

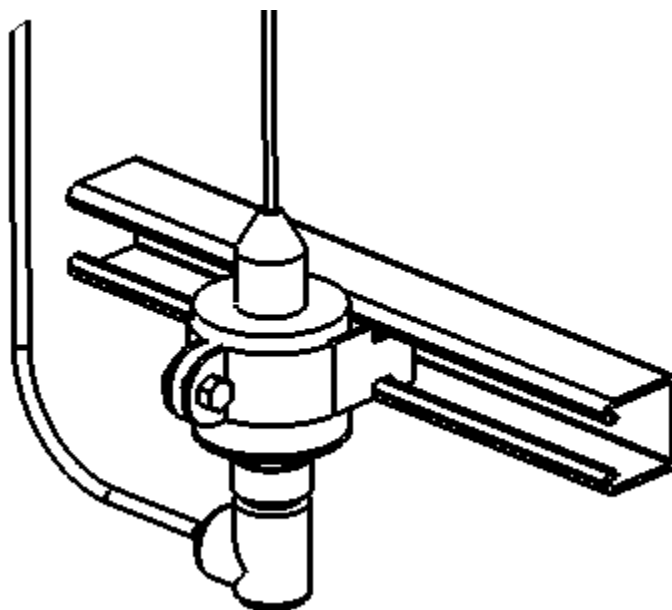

1. Mount the *Cool End* on a 1-5/8" strut channel using 2-1/2" pipe clamp.
 2. Attach the interconnect cable to the MIL SPEC connector on the cool end as shown above. Turn the coupling nut on the connectors until the blue line on the cable connector completely covers the red line on the housing connector. This indicates the connectors are fully engaged.
 3. The interconnect cable has a short, armored section on the connector end. The armor provides electrical shielding. The rest of the interconnect cable is not armored and must be routed through grounded conduit for electrical shielding. Ensure that only the armored cable section protrudes from the conduit. Reference the Interconnect Cable section of this manual for armored cable specifications.
 4. The strut channel used for mounting the Cool Ends (electronics) must also be grounded.
-

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	19	OF	38
RS-FS-9009 O&M Manual	REV.:	W		



IMPORTANT: *Do not use excessive torque when mating MIL SPEC connectors. Connector damage may result. The connectors should be engaged by hand without the use of tools.*



Note: *Do not discard the protective caps covering the connectors as they will be reinstalled to prevent damage to the connectors during maintenance outages.*


 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	20	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

HOT END INSTALLATION

1. Before installing the Hot End onto the sight tube, perform a sensor functional test per the Sensor Checkout section. The flame sensor is installed to the sight tube using a pipe union. The pipe union consists of a 2-1/4" union nut, a female-end to be installed on the sight tube, and a male end that is integral to the hot end. To avoid damage to the sensor and the MI cable, two wrenches must be used when installing the Hot End onto the sight tube. See the installation and removal steps below.
 2. Apply a small amount of anti-seize compound, such as NEVER-SEEZ, RS part number NG-165, to the external threads of union nut and the threads of the sight tube prior to installing the Hot End of the flame sensor. Be sure the anti-seize compound applied to both parts is minimal and only applied below the 2nd thread. If anti-seize compound is applied to the face of the sight tube or union nut, upon heating, it can fog the window of the flame sensor and reduce output.
 3. Inspect the window and clean if required. See the Cleaning the Sensor Window section of this manual for details.
 4. Tighten female pipe union onto the sight tube hand tight (3-4 full turns). Tighten with a 1-5/16" wrench approximately 2.5 additional turns.
-


 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	21	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

1-5/16"
wrench

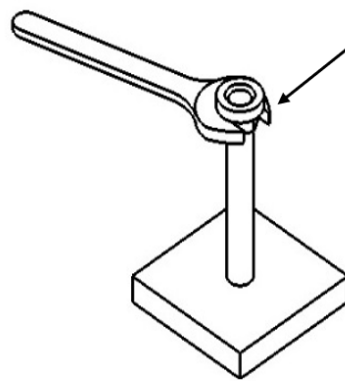


Remove anti-seize compound
from faces of the sight tube
and female pipe union end

5. Tighten the *union nut* to the *female pipe union end* by hand.

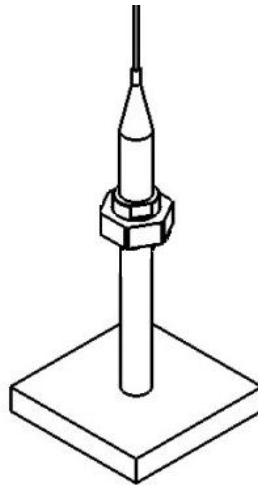

6. Use a 1-5/16" wrench to hold the *female pipe union end*. Tighten the *union nut* 120 ft.-lbs. using a 2-1/4" wrench. While the union nut is being tightened, the female pipe union should stay stationary. Rotation of the hot end and MI cable can occur, but the rotation should not exceed 1/4 turn.

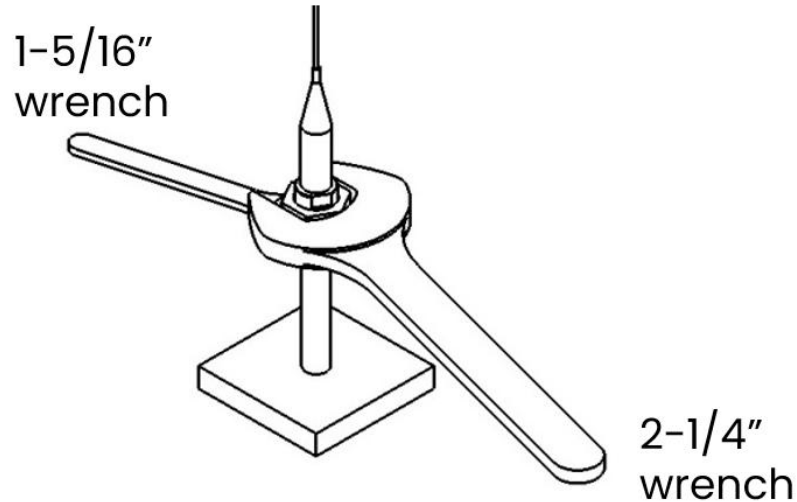

7. To temporarily remove the hot end from the sight tube, reverse the instructions in step 6. The female pipe union end may be left on the sight tube. Remove the MI cable from a sufficient number of strut channel clamps and coil the section of the hot end that is over the turbine. Tie the coiled hot end and place to the side during outage activities.



CAUTION: THE FLAME SENSOR SEALS HIGH PRESSURES WITHIN THE TURBINE. THE UNION NUT AND FEMALE PIPE UNION END MUST BE TIGHTENED TO THE SPECIFIED TORQUE. INSUFFICIENT TORQUE COULD RESULT IN COMBUSTION GASES BEING RELEASED INTO THE TURBINE COMPARTMENT.

DO NOT WRENCH ON THE SENSOR BODY. ONLY APPLY WRENCHES TO THE HEXAGONAL FEMALE PIPE UNION END AND UNION NUT. WRENCHING ON THE SENSOR BODY MAY CAUSE HOT END DISASSEMBLY AND DAMAGE AND CAN RESULT IN THE MALFUNCTION OF THE SENSOR.

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	23	OF	38
RS-FS-9009 O&M Manual	REV.:	W		



NOTE: UNION NUT SELF-ALIGNS THE FLAME SENSOR BODY TO THE SITE TUBE. THE UNION NUT MUST BE TIGHTENED TO THE SPECIFIED TORQUE. INSUFFICIENT TORQUE COULD RESULT IN MISALIGNMENT AND POOR FLAME SENSOR SENSITIVITY.

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	24	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

WIRING TO THE CONTROLLER

The sensors are connected to the turbine junction box with interconnect cables RS-E2-0285PXXX. The RS-E2-0285PXXX consists of black, white and green wires twisted and shielded. All wiring must be in grounded conduit. The green wire must be connected to earth ground at the junction box. Do not connect the shields to each other or to earth ground at any location. The shields should be individually jumpered through all junction boxes and connected to the proper ground terminal at the Controller.

The cable pinout is shown in Table 3: Cool End Connector Pinout

. Reverse polarity will not damage the sensor. Signal cable from the junction box to the Controller should be 18 gauge (1.02 mm) twisted shielded pair. RS carries unterminated cable that can be used for this cable run. The part number is CB-37.

The Flame Tracker Dry 325 is connected to the controller as a typical two wire current transmitter. It can be operated from any well-filtered DC supply from 12 volts to 30 volts. The nominal operating voltage is 24 VDC and the power supply should be capable of providing 100 milliamps.

The power supply must be protected to prevent the supply voltage from exceeding 30 volts in normal use and more than 42 volts under transient conditions. The maximum value for the sense resistor plus the wire resistance is dependent on the supply voltage. At 24 volts this value is 560 ohms. Resistance values for other voltages can be determined from the chart in **Error! Reference source not found..**



Reuter-Stokes

a Baker Hughes business

NO.:

FS-9009OM

PAGE:

25

OF

38

RS-FS-9009 O&M Manual

REV.:

W

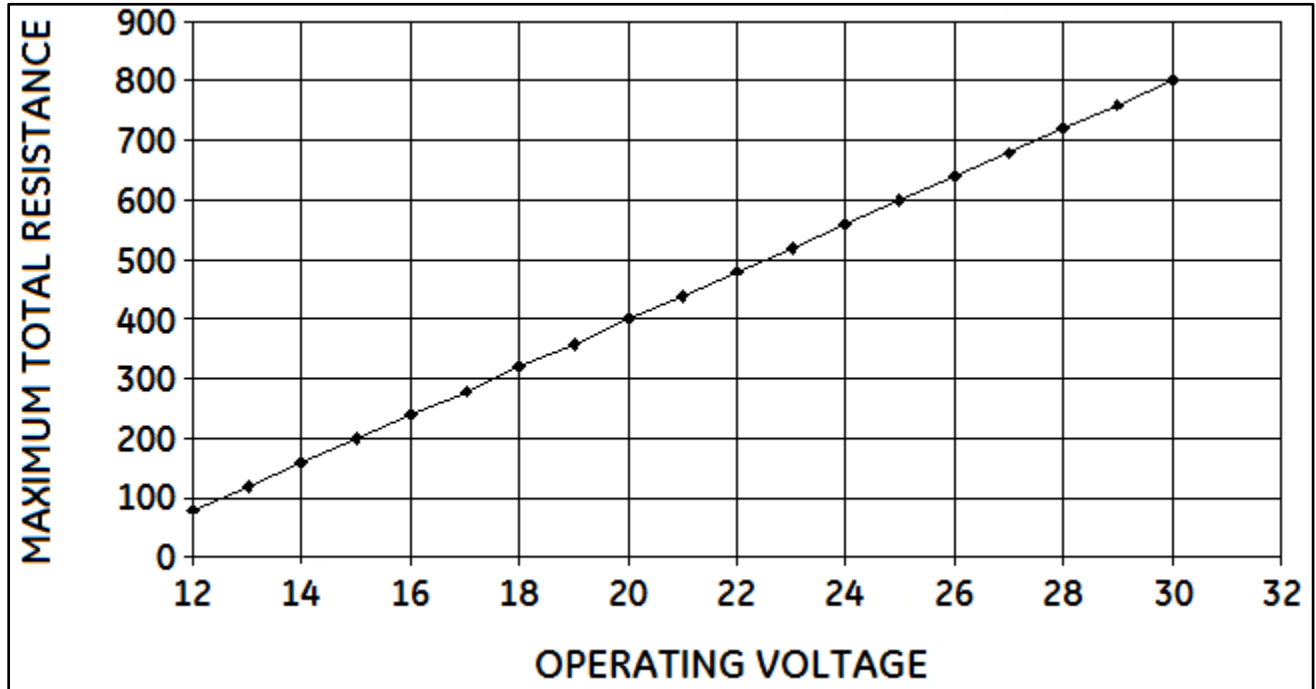


Figure 6: Maximum Resistance vs. Operating Voltage

Figure 3: RS-FS-9009-03-XXX Wiring Diagram shows the preferred wiring for the sensor with the R_{sense} of the controller in the return line of the sensor. This configuration can be used with controllers that have single ended inputs (one side of the input grounded) or differential inputs (neither side of the input grounded).

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	26	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

SENSOR CHECKOUT



WARNING: Do not disconnect the sensor while the circuit is energized (live) unless the area is known to be non-hazardous.



CAUTION: The operating temperature range of the Flame Sensor is -40°C to 325°C. Do not attempt to work on the Flame Sensor or the cable until they have reached to a safe handling temperature.



AVERTISSEMENT! risque d'explosion. ne pas brancher ni debrancher sous tension.

Disconnect the hot ends from the turbine. Apply power to the sensors. Check the current values at the controller for each of the sensors. The sensors are sensitive to light, and may have some reading, depending on the ambient light level.

Test each sensor by covering the port to see the no light intensity signal, and with a flashlight to see a positive reading. With no light, the reading should be 3.9 to 4.1 mA, while with a good UV light source, the reading should be above 8 milliamps.

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	27	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

VARIATIONS IN FLASHLIGHT TYPE, STRENGTH, OR BATTERY VOLTAGE MAY CAUSE VARIATION IN SIGNAL OUTPUT. UV INSPECTION FLASHLIGHTS WITH A UV WAVELENGTH BETWEEN 245–365 NM WORK BEST. AN LED FLASHLIGHT MAY NOT WORK FOR THIS APPLICATION. THE SENSOR CHECKOUT IS INTENDED AS A FIELD TEST FOR GENERAL FUNCTIONALITY ONLY AND IS NOT A CONTROLLED OR QUANTITATIVE TEST. IF A SENSOR IS OUTSIDE THESE ROUGH LIMITS, SEE THE CONDENSATION

While condensation is most common on the secondary position of DLN1 combustion systems, it can occur on other positions or combustion systems. It is more common in environments with high humidity. The operator can often tell that condensation exists if the low output is worst at start-up and the signal increases as the gas turbine warms up and the condensation evaporates.

The operator can also determine its existence by removing the flame sensor from the sight tube as soon as possible after a shut-down. Water droplets will be visible on the flame sensor window. Make sure the sensor is cool enough and the environment is non-hazardous before removing the flame sensor from the sight tube.

Condensation cannot be eliminated in all applications but there are measures that can be used to reduce its effects. Contact Reuter-Stokes for more information.

Troubleshooting section.

Inspect the sensor window. If necessary, clean the window according to the Clean the Sensor Window section and repeat the sensor checkout process. Reattach the hot end to the sight tube according to the Hot End Installation section. Once all sensors are attached to the sight tubes, check that all sensors are reading between 3.9 and 4.1 milliamps at the control system.

CONTROLLER SETUP

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	28	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

THE FLAME SENSOR PROVIDES A MINIMUM OUTPUT AS LISTED IN THE SPECIFICATIONS SECTION WHEN EXPOSED TO THE MINIMUM FLAME INTENSITY SPECIFIED. IN MOST TURBINES, THE THRESHOLD FOR FLAME OFF SHOULD BE SET TO 6.25%, WHICH IS EQUAL TO 5 MILLIAMPS. THE SET POINT FOR FLAME ON VARIES DEPENDING ON THE GAS TURBINE, OFTEN BEING SET AT 10% OR 12.5%. IF THE LIGHT INTENSITY LEVELS ARE TOO LOW FOR THESE SETTINGS, THERE MAY BE OTHER PROBLEMS. REFER TO THE CONDENSATION

While condensation is most common on the secondary position of DLN1 combustion systems, it can occur on other positions or combustion systems. It is more common in environments with high humidity. The operator can often tell that condensation exists if the low output is worst at start-up and the signal increases as the gas turbine warms up and the condensation evaporates.

The operator can also determine its existence by removing the flame sensor from the sight tube as soon as possible after a shut-down. Water droplets will be visible on the flame sensor window. Make sure the sensor is cool enough and the environment is non-hazardous before removing the flame sensor from the sight tube.

Condensation cannot be eliminated in all applications but there are measures that can be used to reduce its effects. Contact Reuter-Stokes for more information.

Troubleshooting section.

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	29	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

MAINTENANCE



WARNING: Do not disconnect while the circuit is energized (live) unless the area is known to be non-hazardous.



CAUTION: The operating temperature range of the Flame Sensor is - 40°C to 325°C. Do not attempt to work on the Flame Sensor or the cable until they have reached to a safe handling temperature.



AVERTISSEMENT! risque d'explosion. ne pas brancher ni debrancher sous tension.

Any time that the FTD 325 hot end is removed from the sight tube, an anti-seize compound should be applied to the mounting thread prior to reinstallation of the sensor. This is to reduce the risk of galling. See the Hot End Installation section for details.

The Flame Sensor output will deteriorate as the lens becomes dirty. It is recommended, when initially installed, that the signal level be recorded during normal operation. During subsequent running, the signal level should be compared with the initial values. If a significant reduction in the signal level is noticed, then it is recommended that the lens be cleaned at the next opportunity (with the turbine shut down and cold).

During offline water washes, water is mixed with detergent, rust, and other contaminants and can be deposited on the flame sensor window. It is recommended to clean the flame sensor windows after each offline water wash.

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	30	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

CLEANING THE SENSOR WINDOW



CAUTION: Use all solvents with caution since most are toxic, flammable, or both. Read product data sheets and MSDS sheets carefully before using any solvents.

Inspect the sensor window under good lighting to identify the potential source of contamination (liquid fuel, carbon particles from combustion, ambient dust particles, liquid fuel, oils etc.).

Recommended solvents for cleaning the sapphire sensor windows are isopropyl alcohol (isopropanol) followed by acetone of high purity, 99% purity.

Cleaning equipment: Wear powder-free gloves (Latex or Nitrile) to avoid transferring oils and contaminants from your hands to the optics. Use cleaning material appropriate for sapphire optical components such as cotton swabs, cotton balls, or Kimtech wipes. Tweezers can be used to hold the cleaning material.

Use canned or compressed air to remove loose contaminants. Use dry cleaning material to remove any remaining moisture. Do not use a circular motion, which can spread contaminants and scratch the window. Wet the cleaning material with solvent but do not saturate it; it should be damp, not dripping. Using tweezers or fingers, gently wipe the sensor window from the center toward the outside. If needed, repeat the process with a new piece of dampened cleaning material. If isopropyl alcohol does not remove the contaminants, repeat the process with acetone.

After cleaning, inspect the optic window again under good lighting to ensure all contaminants have been removed. If any contaminants remain, repeat the cleaning process.

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	31	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

CONDENSATION

While condensation is most common on the secondary position of DLNI combustion systems, it can occur on other positions or combustion systems. It is more common in environments with high humidity. The operator can often tell that condensation exists if the low output is worst at start-up and the signal increases as the gas turbine warms up and the condensation evaporates.

The operator can also determine its existence by removing the flame sensor from the sight tube as soon as possible after a shut-down. Water droplets will be visible on the flame sensor window. Make sure the sensor is cool enough and the environment is non-hazardous before removing the flame sensor from the sight tube.

Condensation cannot be eliminated in all applications but there are measures that can be used to reduce its effects. Contact Reuter-Stokes for more information.

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	32	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

TROUBLESHOOTING



WARNING: Do not disconnect while the circuit is energized (live) unless the area is known to be non-hazardous.



CAUTION: The flame sensor operates at extreme temperatures. Do not attempt to work on the flame sensor until it has reached a safe handling temperature.



AVERTISSEMENT! risque d'explosion. ne pas brancher ni debrancher sous tension.



Problem	Cause	Solution
No current flows	1. Reversed polarity 2. Open wire 3. No 12-30V supply	1. Change polarity at junction box, flame sensor module (if applicable – Mark V and below) 2. Check connections at junction box, flame sensor module (if applicable – Mark V and below) 3. Check voltage supply at the connector of the interconnect cable to ensure power is reaching sensor
Low sensitivity during checkout or operation	1. Dirty window 2. Grounded cable 3. Tube mount not torqued	1. Use the section Cleaning the Sensor Window 2. Check cables for grounds 3. Check torque, torque to specified values
Low flame intensity signal during operation	1. Misalignment of the sensor mount 2. Dirty window 3. Tube mount not torqued	1. Clean window 2. Check the squareness of all flanges and pipes of the sensor mount. 3. Verify that the sensors have a clear view of the flame. 4. Ensure the sight tube is properly torqued to the combustion chamber. 5. Ensure that the pipe union of the hot end is properly torqued.

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	34	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

Periodic low reading on secondaries of DLN1 turbines	1. Condensation on the sensor window that can occur under high humidity situations.	1. See Condensation section
No flame indication	1. Cable connection open 2. Open wire 3. No-12-30V supply	1. Check connections at junction box, flame sensor module (if applicable – Mark V and below) 2. Check voltage supply to ensure power is reaching sensor 3. Check voltage supply to ensure power is reaching sensor

Table 4: Troubleshooting

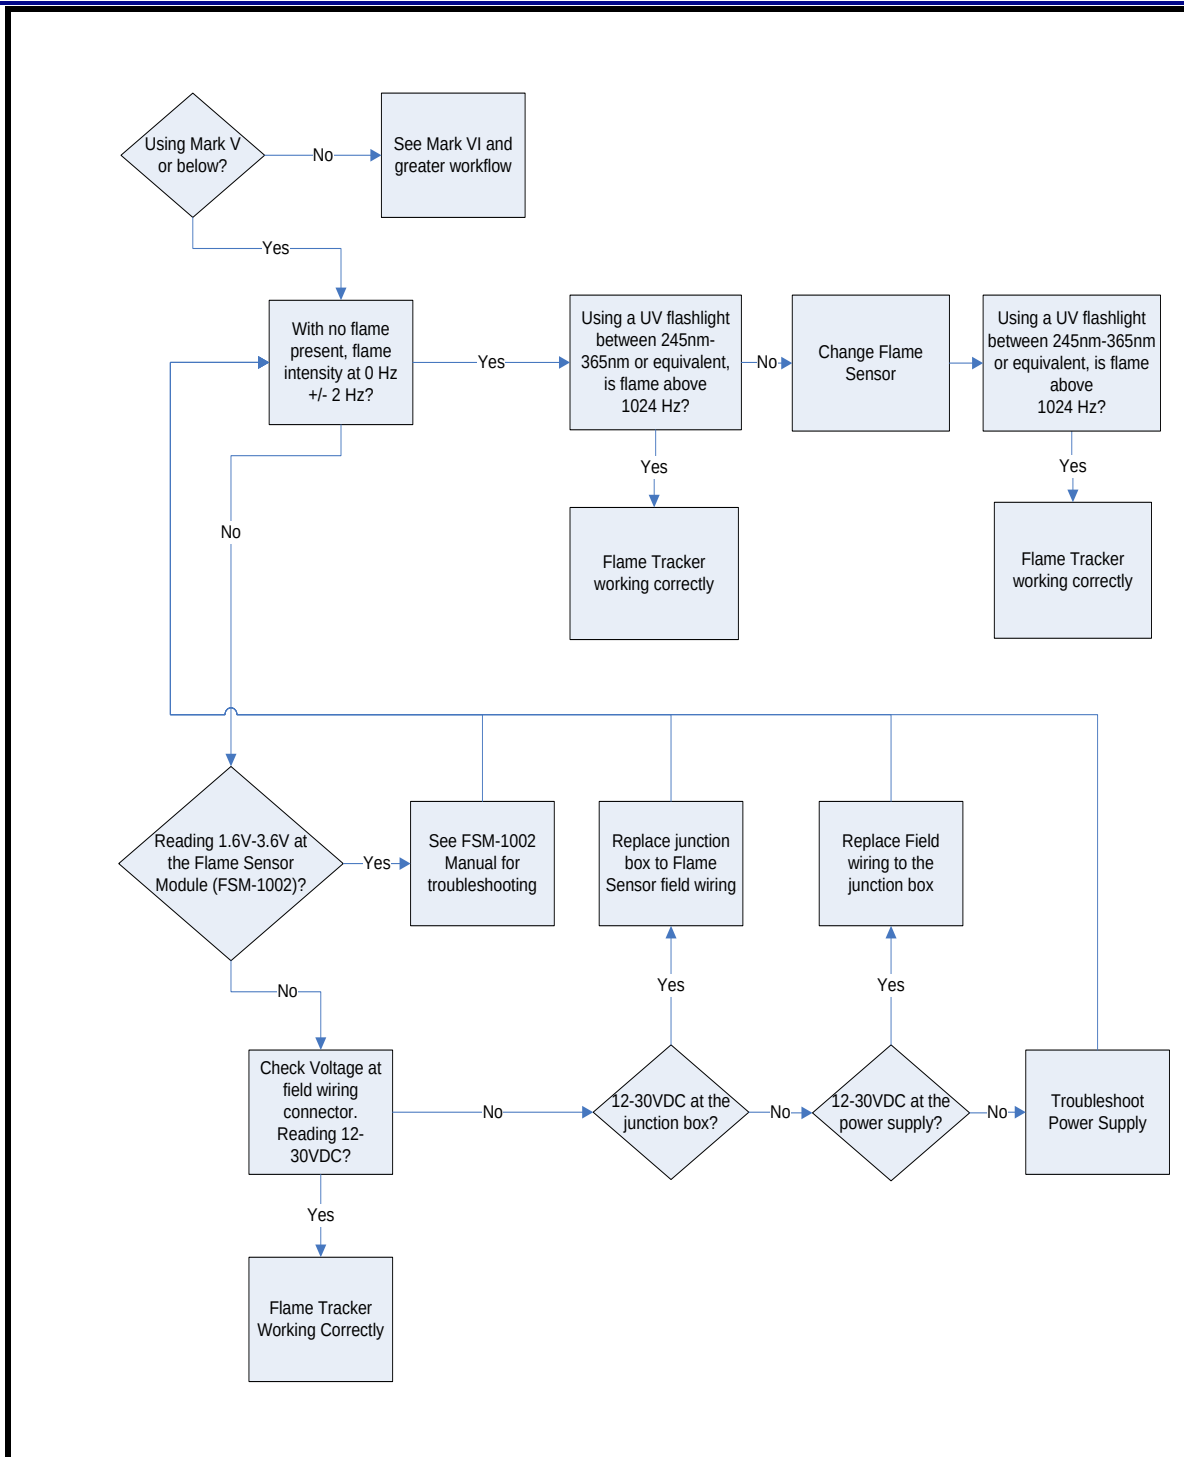


Figure 7: Mark V Control System Troubleshooting Flow Diagram

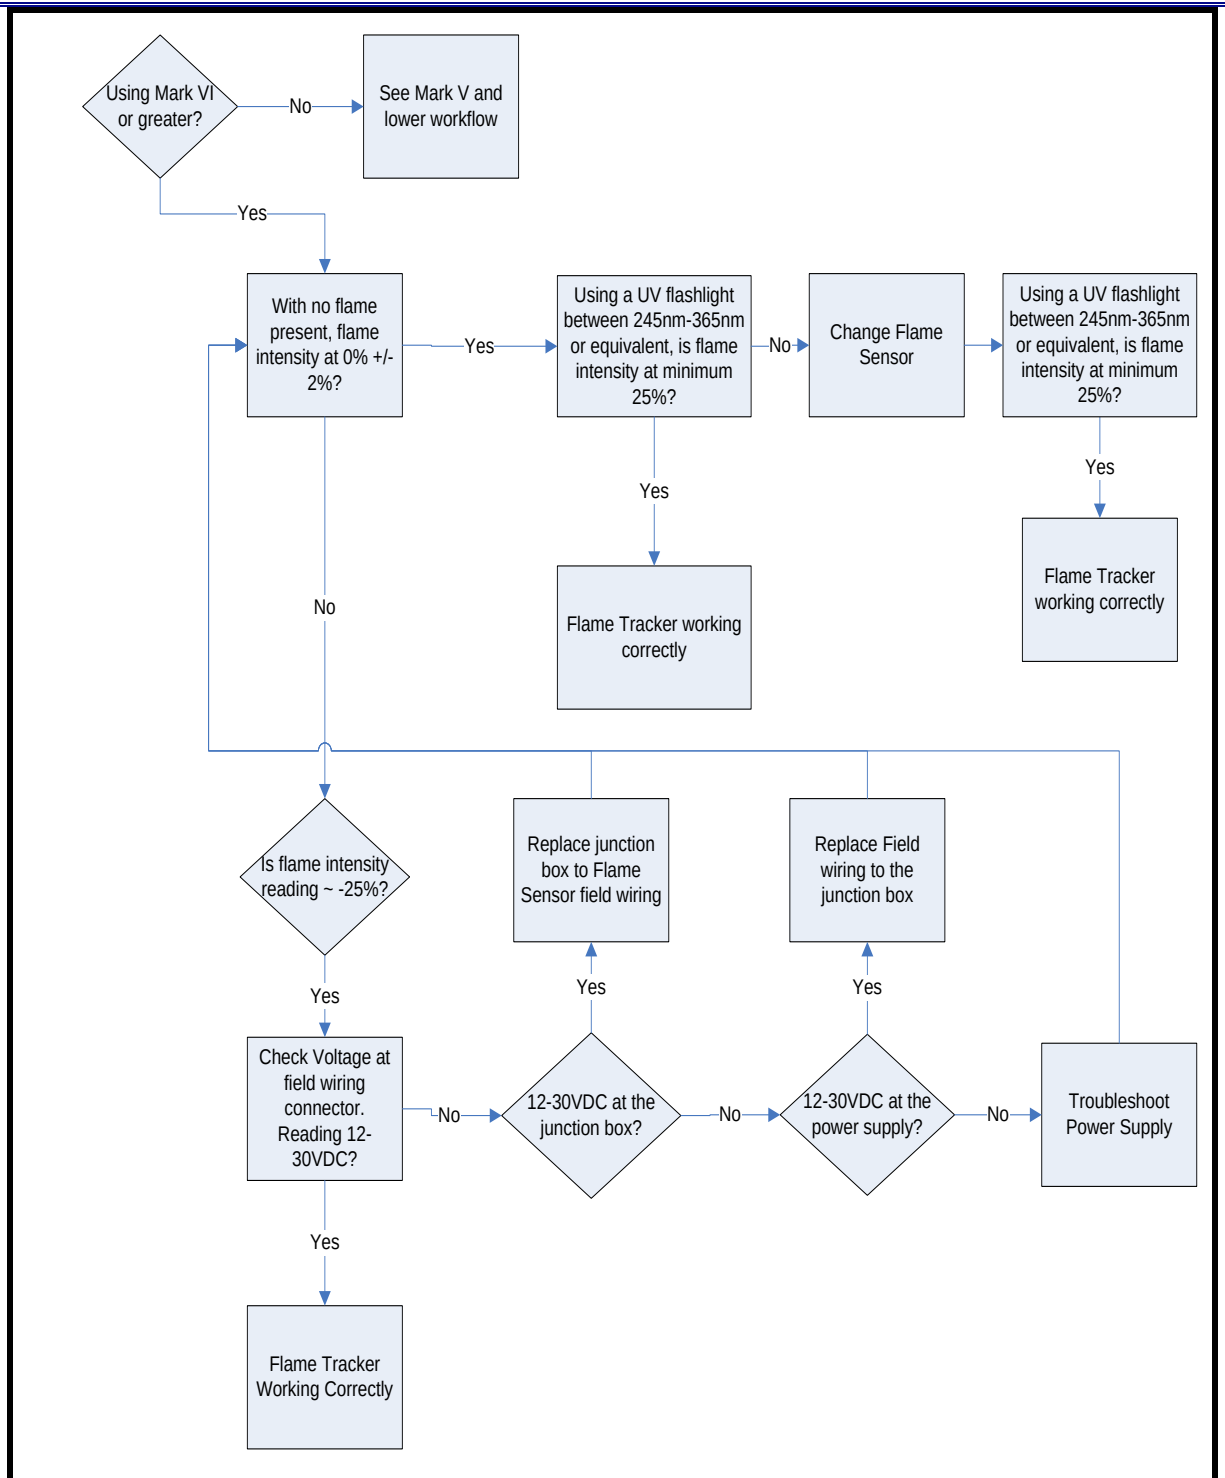


Figure 8:Mark VI and Greater Control System Troubleshooting Flow Diagram

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	37	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

 Reuter-Stokes a Baker Hughes business	NO.:	FS-9009OM		
	PAGE:	38	OF	38
RS-FS-9009 O&M Manual	REV.:	W		

CUSTOMER SUPPORT CENTERS

For Sales, Service and Technical Support:

Reuter-Stokes

8499 Darrow Rd.

Twinsburg, Ohio 44087

U.S.A.

T: 888-242-3714

T: 330-425-3755

www.reuter-stokes.com

Technical content subject to change without notice.

FS-9009OM

Revision: W

